### INDEX

1. Safety Precautions and Warnings 3
2. Using the Scan Tool 5
2.1 Tool Description 5
2.2 Specifications 6
2.3 Accessories Include 6
2.4 Product Troubleshooting
3. Software Function
3.1 System Configuration 10
4. Diagnostics 13
4.1 Read Trouble Code 16
4.2 Erasing Codes 18
4.3 Read DataStream 19
4.4 Vehicle Information 20
4.5 Clear adaptation 21
4.6 Engine oil reset 23
5. Software update

# Inhoudsopgave

1. Veiligheid, voorzorgsmaatregelen en waarschuwingen33
2. Gebruik van de systeemtester
2.1 Systeemtester Beschrijving
2.2 Specificaties
2.3 Accessoires inbegrepen 36
2.4 Product Foutopsporing 38
3. Software Functie
3.1 System Configuratie 41
4. Diagnose
4.1 Lezen van Foutcode 49
4.2 Wissen van foutcodes 50
4.3 Lezen Data 51
4.5 Wissen van adaptaties53
4.6 Motorolie reset

1. Safety Precautions and Warnings

To prevent personal injury or damage to vehicles and/or the scan tool. Read this instruction manual first and observe the following safety precautions at a minimum whenever working on a vehicle.

• Always perform automotive testing in a safe environment.

• Wear safety eye protection that meets ANSI standards.

- Keep clothing, hair, hands, tools, test equipment, etc. Away from all moving or hot engine parts.
- Operate the vehicle in a well ventilated work area: Exhaust gases are poisonous.
- Put blocks in front of the drive wheels and never leave the vehicle unattended while running tests.
- Use extreme caution when working around the ignition coil, distributor cap, ignition wires and spark plugs. Theses components create hazardous voltages when the engine is running.
- NEUTRAL (for manual transmission) and make sure the sparking brake is engaged.
- Keep a fire extinguisher suitable for

3

gasoline/chemical/electrical fires nearby.

- Don't connect or disconnect any test equipment while the ignition is on or the engine is running.
- Keep the scan tool dry, clean, free from oil/water or grease. Use a mild detergent on a clean cloth to clean the outside of the scan tool, when necessary.

## 2. Using the Scan Tool

2.1 Tool Description



DLC -- Data Link Connector (DLC), Use to connect the scan tool to the vehicle;
 LCD DISPLAY -- Indicates test results. Color,

320 x 240 pixel display with contrast adjustment ③ KEY BROAD - include [▲][▼][◀][▶][←]] [←] [HELP]

**④ USB PORT** -- Use to connect the scan tool to PC;

2.2 Specifications

A) **Display:** Color, 320 x 240 pixel display with contrast adjustment

- B) Operation Temperature: -20 °C -75 °C
- C) Storage Temperature: -40 °C -- 120 °C
- **D)** Power: 8V -- 24V
- E) Dimensions:

Length	Width	Height
135mm	85mm	26mm

F) Weight Net Weight: 250 g Gross Weight: 450 g

## 2.3 Accessories Include

- A) User's Manual Instructions on tool operations.
- B) USB Cable Used to upgrade the scan tool.



- C) CD save the update tool and user' s manual.
- D) Optional accessories OBD-16 to BMW-20 Socket - use test the car of BMW made before 2000



# 2.4 Product Troubleshooting Vehicle Linking Error

A communication error occurs if the scan tool fails to communicate with the vehicle's ECU (Engine Control Unit). You need to do the following to check up:

- A) Verify that the ignition is ON;
- B) Check if the scan tool' s OBD II connector
- is securely connected to the vehicle' s DLC;
- C) Verify that the vehicle is OBD2 compliant;
- D) Turn the ignition off and wait for about 10 seconds. Turn the
- E) Ignition back to on and continue the testing.
- F) Verify the control module is not defective

### Scan tool doesn't power up

If the scan tool won't power up or operates incorrectly in any other way, you need to do the following to check up:

A) Check if the scan tool' s OBD II connector

- is securely connected to the vehicle' s DLC;
- B) Check if the DLC pins are bent or broken.
- Clean the DLC pins if necessary.
- C) Check vehicle battery to make sure it is still good with at least 8.0 volts.

- 3. Software Function CATION: Don't connect or disconnect any test equipment with ignition on or engine running.
  - 1) Turn the ignition off.
  - 2) Locate the vehicle's 16-pin Data Link Connector (DLC)
  - 3) Plug into the scan tool cable connector to the vehicle's DLC , the scan tool will be light. As shown
  - 4) Turn the ignition on. Engine can be off or running



5) Press any key to enter Main Menu.

	MENU	
DIAGNOSE		
SYSTEM C	ONFIGURAT	ION
OK	1/1	BACK

USE the key  $[\mathbf{\nabla}][\mathbf{A}]$  to select in the [Main Menu], and press  $[\mathbf{+}]$  to selection

# 3.1 System Configuration

Select [SYSTEM CONFIGUARATION] in the Main Menu and press [+]. The screen will display the interface as shown below:

	MENU	
SYSTEM I	NFORMATION	I
BEEPER		
LANGUAGE	E SETUP	
OK	1/1	BACK

The scanner allows you to make the following adjustments settings;

1) [SYSTEM INFORMATION]: show the system information Choose [SYSTEM INFORMATION] and press [+--]. The screen will display the interface as shown below:



Press [+] or [+] to return the [Main menu] 2) [BEEPER]: ON / OFF the beep.

Choose [BEEPER] and press [++], the screen will display the interface as shown below:

MENU		
OPEN		
CLOSE		
υ.		
OK	1/1	BACK

Press  $[\blacktriangle]$  to select, and press  $[\bigstar]$  to confirm.

3) [LANGUAGE SETUP]: Selects desired language.

Choose [LANGUAGE] and press [+--].

The screen will display the interface as shown below:

	MENU	
ENGLISH		
GERMAN		
		·
2		
OK	1/1	BACK

You can press [▲][▼]key to choose the different Language, and then press [← ] to confirm. The system will Convert to the chosen language interface at once.

# 4. Diagnostics

Select [DIAGNOSE] in Main Menu and press [+--]. The screen will display the interface as shown below:

	MENU	
1 Series		
3 Series		2
5 Series		
6 Series		
7 Series		
X Series		
OK	1/2	BACK

Press [▲][▼] to select, [◀] and [▶] to Page, and press [← ] to confirm.

Select the Series of the vehicle, and press [+]. The screen will display the interface as shown below:

	MENU	
X3_E83		
X5_E53		
X5_E70		
X6_E71		
X1_E84		
0		
OK	1/1	BACK

Press [▲][▼] to select, [◀] and [▶] to Page, and press [←] to confirm.

Select the Chassis of the vehicle, and press [+-]. The screen will display the interface as shown below:

	MENU	
Driver		
Chassis		2 5
Body		
5		
OK	1/1	BACK

Press [▲] [▼] to select, [◀] and [▶] to Page, and press [←] to confirm.

Select the model of the vehicle, and press [+--]. The screen will display the interface as shown below:

		MENU		
DME	[Dig	ital Mo	tor	Elect]
DDE	[Die	sel Ele	ctro	onics]
EGS	[Tra	nsmissi	on c	control]
EWS	[Ele	c.immob	iliz	e sys.]
VTG	[Gea:	rbox Co	ntro	1]
EKPS [Fuel-pump control]				
0	K	1/1		BACK

Press [▲][▼] to select, [◀] and [▶] to Page, and press [← ] to confirm.

When you select one system of the vehicle, A sequence of messages displaying the BMW mode protocols will be observed on display until the vehicle protocol is detected.

◆ if the scan tool fails to communication with the vehicle's ECU, a "ERROR" message shows up on the display



if the scan tool communicate with the vehicle, it will enter the [function menu], the screen will display the interface as shown below:

	MENU	
Read Troub	le Code	
Erase Trou	ble Code	
Read Datas	tream	
Informati	on	
Clear ada	ptation	
Engine oi	l reset	
OK	1/2	BACK

Press [▲] [▼] to select, [◀] and [▶] to Page, and press [←] to confirm.

# 4.1 Read Trouble Code

◆Reading Codes can be done with the key on engine off (KOEO) or with the key on engine running (KOER).

◆Trouble codes cause the control module to illuminate the malfunction indicator lamp (MIL) when emission-related fault occurs.

select [Read Trouble Code] and press [+] in [Diagnostic Menu]. If there are some codes, the screen will display the codes as show below:

MENU			
P0602 Control Module Programmi ng error			
P0614 ECM/TCM Incompatible			
× · · · · · · · · · · · · · · · · · · ·			
OK		1/1	BACK

Press [+] or [+] to return the [Diagnostic menu]

View DTCs and their definitions on screen.

If there are no Diagnostic Trouble Codes present, the display indicates "No Trouble Code" Wait a few seconds or press any OK to return to Diagnostic Menu. The control module number, sequence of the DTCs, total number of codes detected and type of codes (Generic or Manufacturer specific) will be observed on the upper right hand corner of the display.

4.2 Erasing Codes

CAUTION: Erasing the Diagnostic Trouble Codes may allow the scan tool to delete not only the codes from the vehicle's on-board computer,

• This function is performed with key on engine off (KOEO). Do not start the engine.

Select [Erase Trouble Code] and press [+--] in [Diagnostic Menu]. the screen will display the interface as shown below:



Press [+] or [+] to return the [Diagnostic menu]

Notes:

\* Before performing this function. Make sure to retrieve and record the trouble codes.

\*After clearing, you should retrieve trouble codes once more or turn ignition on and retrieve codes again. If there are still some trouble codes for hard troubles, please find the reason caused the trouble code first, and then solve the problem. Now, the trouble codes can be erased. 4.3 Read DataStream

The Read DataStream function allows viewing of live or real time data of vehicle's computer module(s). This function is not supported for some system.

Press [▲] [▼] to select [Read DataStream] in [Diagnostic Menu] and press [←] to confirm. The screen will display the interface as shown below.

#### Data model

MENU				
DTCs Stroed in this ECU				
Fuel Syste	em 1 Status	ON		
Engine RPM 760				
Intake Manifold Absolute Pressu re 121 kPa				
GRAPH	1/1	BACK		

If appear [GRAPH], Press [+] to enter Graph mode. Press [+] to return [Diagnostic Menu] the screen will display the interface as below: Graph model



Press [+] to return data model. Press [+] to return [DIAGNOSTIC MENU].

4.4 Vehicle Information

Vehicle Information function is to display the ECU information, including Software version, hardware version, diagnostic index, pro. Date, part number ECT. This function is not supported by some system.

Select [Vehicle information] in the [Diagnostic Menu], and Press [+]. The screen will display as shown below:

MESSA	GE
Part Num: 305 Code index: 23 Diag index: 2H Hw number: 33 Vart index: 69 (DD, MM, YYYY): 2	5784 20. 02. 2004
1/1	1 BACK

Press [+] to return data model. Press [+] to return [DIAGNOSTIC MENU].

## 4.5 Clear adaptation

The car ECU will get some relative data according to the driver's driving habit and save them. This function is to clear these data and allow car ECU to learn again.

Select [Clear adaptation] in the [Diagnostic Menu], and Press [+]. The screen will display as shown below:



Press  $[\blacksquare]$  to the tool will clear the adaptation , and wait finish

	MESSAG	E	
Adaptation	values	were	cleared.
	1/1		BACK

4.6 Engine oil reset

After the oil in the car is changed, this function is needed to reset oil lamp.

Select [Engine oil reset] in the [Diagnostic Menu], and Press [+]. The screen will display as shown below:

The Availa	ability (%): 30%
The Servic	ce counter (times): 30
D	t to do the function
you select	?

Press [+] to reset the oil light. And wait the function

to finish.

If the function is successful, the screen will display as shown below:

	M	ESSAGE		
End	of	test	тос	dule.
		1/1		BACK

if the functin fails, the screen will display error message.

## 5. Software update

1. Setup Update tools Put the CD into PC and open. You can see the setup file in the CD.



Double click the [Setup file] to setup the tool. Operate following the instructions, and finish to setup.



After finish setup, there is an icon of scanner on desktop.

2. Run the update tool and Operate in accordance with photographs



a) Use the USB cable to connect i910-II scanner with PCb) Run the update software.

When the scanner is connected with PC, the software will show [USB CONNECTED], As below:



💑 iCarsoft 🛛 3.0	
Open	icarsoft Http://www.icarsoft.us
Look in: 🗁 Database	
DB ICARSOFT_V3. 0_CN. BIN	
File name:	Open
Files of type: Bin Files (*. bin)	Cancel
	VIII-
Updating Software Icarsoft Technology Inc. All Rights Reserved	

- 1) Click [Update] button.
- 2) Select update file and click [open] button.
- 3) Into the upgrade interface, wait for the end of upgrade

#### WARNNING:

Do not power off during upgrade! Do not Plug or Unplug USB tools during upgrade!

#### Start Update

Waiting for a few minutes. The software will update the scanner tool.



Finish Update

When the update is finished, the screen on PC will show as below.



If update succeeds, the software wil display [Update success!]; if update does not succeed, it will display [Update fail! Try again].

Press [finish], the scanner is already updated, and you can unplug the scanner from PC.

BMW/MINI Multi-System Scanner i910-II

1. Veiligheid, voorzorgsmaatregelen en waarschuwingen

Lees eerst deze handleiding om persoonlijk letsel of schade aan voertuigen en / of de tester te voorkomen. Neemt u in ieder geval de volgende minimum voorzorgsmaatregelen in acht als u aan een voertuig gaat werken.

- •Altijd testen in een veilige omgeving.
- •Draag een veiligheidsbril die aan de veiligheidsnormen voldoet.
- •Houd kleding, haar, handen, gereedschap, test gereedschap, etc. weg van alle bewegende en warme motor onderdelen.
- •Laat de motor draaien in een goed geventileerde werkruimte: Uitlaatgassen zijn giftig.
- •Plaats blokken voor de aangedreven wielen en laat het voertuig nooit onbeheerd achter tijdens het testen.
- •Wees uiterst voorzichtig bij het werken rond de bobine, verdelerkap, bougiekabels en bougies. Deze onderdelen creëren een gevaarlijk hoge spanning als de motor draait.
- •NEUTRAAL stand (handgeschakelde transmissie) en zorg ervoor dat de parkeerrem is bediend.

- •Houd een brandblusser in de buurt die geschikt is voor het blussen van benzine / chemische / elektrische branden.
- •Geen testkabels van de testapparatuur aansluiten of loskoppelen terwijl het contact aanstaat of als de motor draait.
- •Houd het testgereedschap droog, schoon, vrij van olie / water of vet. Gebruik een niet agressief schoonmaakmiddel op een schone doek om de buitenkant van de scanner te reinigen, indien nodig.

2. Gebruik van de systeemtester

#### 2.1 Systeemtester Beschrijving



①DLC - Data Link Connector (DLC), gebruiken om de scanner aan te sluiten op het voertuig; ②LCD DISPLAY - Geeft de testresultaten.

Kleuren, 320 x 240 pixel display met instelbaar contrast

- ③ Toetsenbord inclusief [▲][▼][◀][▶][←]]
- [**←**] [HELP]
- (4) USB POORT -- Gebruik de scanner aansluiting op PC;

#### 2.2 Specificaties

- A) Weergave: kleur, 320 x 240 pixel display met instelbaar contrast
- B) Werkingstemperatuur: -20 ℃ 75 ℃
- C) Opslag Temperatuur: −40 °C 120 °C
- D) Voeding: 8V -- 24V
- E) Afmetingen:

Lengte	Breedte	Hoogte
135 mm	85 mm	26 mm

F) Gewicht

Netto gewicht: 250 g Bruto gewicht: 450 g

#### 2.3 Accessoires inbegrepen

- A) Gebruikershandleiding Instructies over de werking van het hulpmiddel
- B) USB-kabel gebruikt om de scanner te upgraden.



- C) CD Inclusief gebruikershandleiding, Update Software en etc.
- D) Optionele accessoiresOBD-16 naar BMW-20 aansluiting gebruik omBMW' s te testen voor modeljaar 2000



#### 2.4 Product Foutopsporing

Voertuig communicatiefout

Een communicatie fout treedt op als de scanner er niet in slaagt om te communiceren met de voertuig ECU (Engine Control Unit). U moet het volgende controleren:

- A) Controleer of het contact aan is;
- B) Controleer of OBD-II aansluiting van de scanner stevig is aangesloten op de diagnosestekker;
- C) Controleer of het voertuig geschikt is voor OBD2;
- D) Zet het contact uit en wacht ongeveer 10 seconden. Schakel de
- E) Contact opnieuw aanzetten en ga door met testen.
- F) Controleer of de besturingsmodule niet defect is.

#### Systeemtester start niet op

Als de systeemtester niet kan worden ingeschakeld of niet juist functioneert op een andere manier, moet u het volgende doen om dit te controleren:

- A) Controleer of de OBD-II connector goed is aangesloten op de diagnosestekker (DLC):
- B) Controleer of de DIC pinnen niet z
- B) Controleer of de DLC pinnen niet zijn verbogen of gebroken. Reinig de DLC pinnen indien nodig.
- C) Controleer de accu van het voertuig om te controleren of het nog steeds goed functioneert met tenminste 8,0 volt.

### 3. Software Functie

# Voorzichtig: Sluit de testapparatuur of kabels niet aan of af als het contact aan staat of als de motor draait.

- 6) Zet het contact uit.
- 7) Zoek de 16-pins diagnosestekker (DLC) van het voertuig
- 8) Steek de stekker in de kabelconnector aan op de DLC van het voertuig, de systeemtester zal opstarten. Zoals hieronder:
- 9) Zet het contact aan. Motor kan uitgeschakeld zijn maar mag ook draaien.



10)Klik op een willekeurige toets om het hoofdmenu te openen.

	MENU	
DIAGNOSE	}	
SYSTEM C	ONFIGURAT	[ON
OK	1/1	BACK

Gebruik de toets [♥][▲] om een keuze te maken in het [Hoofd Menu], en druk [← ] om te bevestigen

3.1 System Configuratie

Kies [SYSTEEM CONFIGURATIE] in het Hoofdmenu en druk [+]. De interface zal het onderstaande scherm weergeven zoals hieronder weergegeven:

De scanner staat toe om de volgende instellingen te kiezen.

1) [SYSTEEMINFORMATIE]: toon het systeem informatie
Kies [SYSTEEMINFORMATIE] en druk op [+].
De interface zal het onderstaande scherm zoals hieronder
weergegeven:

	MENU	
Serial N	umber:	
I91	200303202	
Hardware	Ver: 1.0	
Software	: BMW	
Software	ver: V2.8	
SW date:	2012-03-2	6
	1/1	BACK

Druk [+--] of [+--] om terug te keren naar het [Hoofd menu]

2) [PIEPTOON]: AAN / UIT.

Kies [**PIEPTOON**] en druk [**-**], wordt het scherm van de Interface, weergegeven zoals hieronder:

	MENU	
OPEN		
CLOSE		
8		
×.		
8		
OK	1/1	BACK

Druk [▲][▼] om te selecteren, en druk [←↓] om het te bevestigen.

3) Kies [SYSTEEM CONFIGURATIE] in het Hoofdmenu en druk [+]. De interface zal het onderstaande scherm weergeven zoals hieronder weergegeven:

	MENU	
ENGLISH		
GERMAN		
OK	1/1	BACK

Sie können die Taste [▲] [▼] drücken, um die verschiedenen Sprachen auszuwählen, dann [← ] drücken um zu bestätigen. Das System wird die Schnittstelle auf die gewählte Sprache konvertieren.

#### 4. Diagnose

Selecteer [DIAGNOSE] in het Hoofdmenu en druk [+--]. Het scherm zal de interface weergeven zoals hieronder:

	MENU	
1 Series	8	
3 Series	8	20
5 Series	8	
6 Series	5	
7 Series	5	
X Series	3	
OK	1/2	BACK

Druk [▲][▼] om te selecteren en druk [←→] om het te bevestigen.

Selecteer de Serie van het voertuig, en druk [+--]. Het scherm van de interface zal worden weergeven zoals hieronder:

	MENU	
X3_E83		
X5_E53		2
X5_E70		
X6_E71		
X1_E84		
÷.		
OK	1/1	BACK

Druk [▲][▼] om te selecteren, [◀] en [▶] om te bladeren, en druk [←] om te bevestigen.

Selecteer het onderstel van het voertuig en druk [+]. Het scherm van de interface zal worden weergeven zoals hieronder:

		MENU			
	Driver				
	Chassis		2 5		
	Body				
	×.				
	÷.				
	OK	1/1	BACK		
Druk [▲]	][ <b>▼</b> ] om te	selecteren,	[【] en []	▶] om	te
bladeren,	en druk [ <del>+</del>	┛] om te bev	estigen.		

Selecteer het model van het voertuig , en druk [+-]. Het scherm van de interface zal worden weergeven zoals hieronder:



Druk [▲][▼] om te selecteren, [◀] en [▶] om te bladeren, en druk [← ] om te bevestigen.

Wanneer u een systeem van het voertuig selecteert, zal een opeenvolging van berichten worden weergeven over de BMWprotocollen die worden weergegeven op de display totdat het juiste voertuig protocol wordt gedetecteerd.

◆Als de scanner er niet in slaagt om de communicatie met de ECU van de auto op te starten, zal een "FOUTMELDING" verschijnen op het display



Als de systeemtester communiceert met het voertuig, zal het de [menu-functie] tonen, zoals weergegeven zoals hieronder:

	MENU	
Read Trou	ble Code	
Erase Tro	uble Code	
Read Data	stream	
Informat	ion	
Clear ad	laptation	
Engine o	oil reset	0
OK	1/2	BACK

Druk [▲][▼] om te selecteren, [◀] en [▶] om te bladeren, en druk [←┛] om te bevestigen.

### 4.1 Lezen van Foutcode

◆ Lezen van de foutcodes kan worden gedaan met het contact "aan"en de motor "uit" (KOEO) of met de sleutel "aan"met draaiende motor (KOER).

Selecteer [Lees Fout Code] en druk op [ ] in het [Diagnose menu]. Als er een aantal codes aanwezig zijn, zal het scherm de codes weergeven, zoals hieronder:

P0602 Control Module	Programmi
P0614 ECM/TCM Incompa	tible
OK 1/1	BACK

Druk [+] of [+] om terug te keren naar het [Diagnose menu]

Bekijk foutcodes en hun definities op het scherm. Als er geen foutcodes gevonden zijn, staat op de display "Geen foutcode" Wacht een paar seconden of druk op OK om terug te keren naar het Diagnose Menu. Het module aantal, volgorde van de foutcodes, het totaal aantal codes gedetecteerd en het type codes

<sup>◆</sup>Foutcodes leiden ertoe dat de regeleenheid het controlelampje (MIL) laat oplichten voor de bij een emissie-gerelateerde storing.

(Generiek of fabrikant specifieke) zullen worden waargenomen in de rechter bovenhoek van het scherm.

#### 4.2 Wissen van foutcodes

- LET OP: Het wissen van de foutcodes kan meer omvatten dat het wissen van foutcodes uit de computer van de auto
- Deze functie wordt uitgevoerd met contact "aan" en motor "uit" (KOEO). Start de motor niet.

Selecteer [**Wissen Fout Code**] en druk op [+] in [Diagnose menu]. de interface zal het onderstaande scherm worden weergeven:



#### Opmerkingen:

\* Zorg ervoor voor het uitvoeren van deze functie dat de foutcodes opgeslagen of opgeschreven worden zodat deze later teruggehaald kunnen worden.

\* Na het wissen, verdwijnen de foutcodes soms pas na het aan- en uitzetten van de contactsleutel, lees hierna de foutcodes opnieuw uit. Als er nog een aantal foutcodes in het geheugen staan moeten deze oorzaken eerst worden verholpen.

#### 4.3 Lezen Data

Lezen data

De "lezen data" functie maakt het bekijken van de live-gegevens van de computer mogelijk. Deze functie wordt niet ondersteund voor elk systeem.

Druk [▲] [▼] om te selecteren [Lezen data] in [Diagnose Menu] en druk [← ] om het te bevestigen. De interface zal het onderstaande scherm weergeven Data model

	MENU	
DTCs Stro	ed in this E	CU
		1
Fuel Syste	em 1 Status	ON
Engine RPM	1	760
Intake Mar	nifold Absolu	ite Pressu
re		121 kPa
GRAPH	1/1	BACK

Als [GRAFIEK] verschijnt, druk dan op [+---] om de grafiek te openen.

Druk op [ ] om naar het [Diagnose menu] terug te keren. De interface zal het onderstaande scherm weergeven

Grafiek model



Druk [+] om naar het data model terug te keren. Druk [+] om terug te keren naar het [DIAGNOSE MENU].

#### 4.4 Voertuig Informatie

De voertuig Informatie functie is om de ECU informatie, waaronder software-versie, hardwareversie en diagnostische index weer te geven. Deze functie wordt niet ondersteund door sommige systemen.

Kies [Voertuig informatie] in het [Diagnose Menu], en druk [+---].Het scherm wordt weergegeven zoals hieronder:

Part Num:	305784	
Code index	: 23	
Diag index	: 2H	
Hw number:	33	
Vart index	: 69	
(DD, MM, YYY	Y): 20.02	2. 2004
<i>DD</i> , <i>MM</i> , 111	17. 20.02	

Druk [+] om terug te keren naar data model. Druk [+] om terug te keren naar [DIAGNOSE MENU].

### 4.5 Wissen van adaptaties

De ECU controleert het rijgedrag van de bestuurder en is in staat om de software te adapteren zodat de rijeigenschappen beter aansluiten bij het rijgedrag van de bestuurder. Als u de adaptaties wist heeft de ECU opnieuw de mogelijkheid om zich optimaal af te stemmen op het rijgedrag van de bestuurder.

Selecteer [Wissen adaptatie] in het [Diagnostische Menu], en druk op [+]. Het scherm zal er als volgt uitzien:

	MESSAGE	
- Switch	on termina	al 15
(igniti	on).	
- Turn e	engine oii.	
	1/1	BACK

Druk op [+-] voor de volgende stap.



Druk op [+--] om de adaptaties te wissen en wacht tot deze

klaar is.

	MESSAG	Е	
Adaptation	values	were	cleared.
	1/1		BACK

# 4.6 Motorolie reset

Nadat de olie is ververst in de motor moet ddeze functie worden gebruikt om het olielampje te kunnen resetten.

Selecteer [Motorolie reset] in het [Diagnostische Menu], en druk op [+]. Het scherm zal er als volgt uitzien:



Druk op [+--] om het olielampje te resetten en wacht totdat deze procedure is afgerond.

Als deze procedure is afgerond zal het volgende scherm verschijnen:

	M	ESSAGE		
End	of	test	module.	
	1	1/1	BACI	K

Als deze procedure is mislukt zal het volgende scherm verschijnen.