# LC200

### **CaptureVision Station**

**User Manual - English** 



### [Important]

To download the latest version of Quick Start Guide, multilingual user manual, software, or driver, etc., please visit Lumens <u>https://www.MyLumens.com/support</u>



# **Table of Contents**

2
3
5
6
6
6
7
8
8
9
9
0
22
25
29
>



## **Copyright Information**

Copyrights © Lumens Digital Optics Inc. All rights reserved.

Lumens is a trademark that is currently being registered by Lumens Digital Optics Inc.

Copying, reproducing or transmitting this file is not allowed if a license is not provided by Lumens Digital Optics Inc. unless copying this file is for the purpose of backup after purchasing this product.

In order to keep improving the product, the information in this file is subject to change without prior notice.

To fully explain or describe how this product should be used, this manual may refer to names of other products or companies without any intention of infringement.

Disclaimer of warranties: Lumens Digital Optics Inc. is neither responsible for any possible technological, editorial errors or omissions, nor responsible for any incidental or related damages arising from providing this file, using, or operating this product.



### **Chapter 1 Safety Instructions**

Always follow these safety instructions when using the product:

#### 1 Operation

- 1.1 Please use the product in the recommended operating environment.
- 1.2 Do not place product in tilted position.
- 1.3 Do not place the product on an unstable trolley, stand or table.
- 1.4 Do not use this product near water or source of heat.
- 1.5 Use attachments only as recommended.
- 1.6 Use the type of power source indicated on the product. If you are not sure of the type of power available, consult your distributor or local electricity company for advice.
- 1.7 Always take the following precautions when handling the plug. Failure to do so may result in sparks or fire:
  - Ensure the plug is free of dust before inserting it into a socket.
  - Ensure that the plug is inserted into the socket securely.
- 1.8 Do not overload wall sockets, extension cords or multi-way plug boards to avoid potential risks.
- 1.9 Do not block the slots and openings in the case of product. They provide ventilation and prevent the product from overheating.
- 1.10 Except as specifically instructed in this User Manual, do not open or remove covers, otherwise it may expose you to dangerous voltages and other hazards. Refer all servicing to licensed service personnel.
- 1.11 Unplug the product from the wall outlet and refer servicing to licensed service personnel when the following situations happen:
  - If the power cords are damaged or frayed.
  - If liquid is spilled into the product or the product has been exposed to rain or water.

#### 2 Storage

- 2.1 Do not place the product where the cord can be stepped on as this may result in fraying or damage to the lead or the plug.
- 2.2 Never push objects of any kind through cabinet slots. Never allow liquid of any kind to spill into the product.
- 2.3 Unplug this product during thunderstorms or if it is not going to be used for an extended period.
- 2.4 Do not place this product or accessories on top of vibrating equipment or heated objects.

#### 3 Cleaning

- 3.1 Unplug all the cables before cleaning. Use a damp cloth for cleaning. Do not use liquid or aerosol cleaners.
- 4 Remote control (if the accessories are equipped with remote control)
  - 4.1 Using an incorrect battery type in the remote control may result in breakdown. Follow local instructions on how to dispose of used batteries.

#### FCC Warning

This product has been tested and found to comply with the limits for a Class A computer device, pursuant to Article 15-J of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial environment.

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of Industry Canada.

Cet appareil numerique respecte les limites de bruits radioelectriques applicables aux appareils numeriques de Classe A prescrites dans la norme sur le material brouilleur: "Appareils Numeriques," NMB-003 edictee par l'Industrie.



EN55032 (CE Radiation) Warning
 Operation of this equipment in a residential environment could cause radio interference.



### **Chapter 2 Package Contents**





### **Chapter 3 Product Overview**



No	Name	Function Descriptions
1	RECORD	Start/Stop recording
2	SNAPSHOT	Capture a single photo
3	STREAM	On/Off image streaming
4	Single Channel	Display a single channel screen
5	PIP	Switch to PIP display
6	PBP	Switch to PBP display
7	Three Channel	Switch to three-channel display
8	Customize	Customize layout display
9	USB 3.0 Port	USB hard disk interface for storage
10	Switch Channel	Switches between signal sources
11	Channel 1 ~ 3	Quickly switch to CH1/CH2/CH3 signal sources
12	Line In (4 CH)	Line In / Mic In audio input
13	HDMI In (4 CH)	HDMI signal source input
14	Line Out	Allows line audio out to amplifier transfer
15	HDMI 2 Program	Main screen output, display the recording or streaming screen and layout
16	HDMI 1 MultiView	Operation interface output; display the device parameter setting menu and image management
17	USB 2.0 Port	Connect USB keyboard/mouse device operation menu
18	RS-232/RS-485 Port	Control the device through RS-232/RS-485
19	Ethernet	Connecting to LAN
20	DC IN 12 V	DC 12 V power connector
21	Power	On/Off the device power



### 3.3 RS-232/RS-485 I/O pin description



■ RS-232	
Pin NO.	Function
1	TX+
2	RX-
3	GND
■ RS-485	
Pin NO.	Function
4	T/R+
5	T/R-
6	GND



### **Chapter 4 Instruction for installation**

#### 4.1 Product connection diagram





### **Chapter 5 Function Description**

#### 5.1 Real-time operation menu

Connect the HDMI1 MultiView output to the display panel to show the real-time operation menu

Connect the keyboard/mouse through the USB port and use the keyboard/mouse to select the menu settings



No	lcon	Name Function Descriptions	
1	S S S S S S S S S S S S S S S S S S S	Parameter setting	Perform the system network setting, recording/streaming compress setting
2		Casting Management	Input signal source selection, audio management, recording/streaming control, output version selection, and network video camera control
3	G	File management	Conduct the video file content management, including the following functions: Upload, download, delete, replay video files
4	(!)	About	Display the current firmware version and relevant production information of LC200
5	NA	Device IP	When connecting to the router, the current assigned device IP address will be displayed



#### 5.2 Parameter setting

This Section provides descriptions of the web-based interface to control the display items. HDMI MultiView only provides items of [System Settings] and [Video Settings].

- 5.2.1 System Settings
  - 5.2.1.1 System Settings

You may set up the device's basic information, initial date and time, and others here.

CaptureVision Station -	- Configuration	💿 🕒
⊙ System ✓	System Settings	
System Settings	Device Identification	
Network Service	Hostname :	
Configuration		
Display	Device Description :	
<ol> <li>Account</li> </ol>	LC200_FF2223	Apply
Source >	Date and Time	
• Video >	Device Current Date and Time :	
Scenes	2019-10-02 19:18:27	
<b>5</b> 0	Time Zone :	
Storage	Asia/Taipei	
📾 Scheduler	Setting Mode :	
<ul> <li>Backup</li> </ul>	NTP Service	
	pool.ntp.org	
About		Apply
	Frame Rate Mode 📡	
	System Frame Rate :	
	3 System Frame Rate : FPS 30	
		Apply
		$\equiv$
	Welcome Screen	
	Concernos New Browse Reso	File Format File Format : PNG Size (Max.) : 3 MB plution(Max.) : 1920x1080
		Apply

No	Item	Function Descriptions		
1	Device	Defines the device name and device description for LC200		
	Identification	※Display name only accepts English characters and numbers		
2	Date & Time	<ul> <li>LC200 supports different time zone setting. It can synchronize time with NTP service (default) and manual setup</li> <li>Time Zone: Select the correct time zone according to current location</li> <li>Configuration Mode:</li> <li>NTP service: Synchronize time with a network server</li> <li>Manual Setup: Set time manually</li> </ul>		
3	Frame Rate Mode	<ul> <li>You can configure the output frame rate at 30/60 fps</li> <li>※If the frame rate setting of LC200 is 60 fps</li> <li>&gt; Up to 2 network image inputs are supported</li> <li>&gt; Recording can only be Movie Mode</li> <li>&gt; Streaming video compression format is the same as recording</li> </ul>		
4	Welcome Image	You can customize a welcome image for LC200 1 Click [Browse] and select a file to upload. Once done, a thumbnail will be		

### Lumens

	generated	
	%File format:	
	File format: PNG	
	File Size (Max.): 3 MB	
	Resolution Size (Max.): 1920 x 1080	
2	Click [Apply] to save this change. If you need to select another file, click	
	[Cancel] and reselect a file	

# [Remark] You can select different system frame rates in the frame rate mode that affects the supported recording mode and network streaming number. Please refer to the following restrictions on use.

		Streaming	Network Streaming (IP)			
System Frame Rate	Supported Recording Mode	Video Compression Settings	Maximum number of streams supported	Maximum frame rate supported	MultiView signal source selection limits	PGM Maximum Split-screen Quantity
FPS30	Resource Mode	Full HD 30 FPS HD 30 FPS SD 30 FPS	3 streams	Full HD 30 FPS	IP + HDMI = 4 channels IP ≤ 3 (only CH1~3 available for selection)	4 channels
FPS60	Movie Mode	Full HD 60 FPS	2 streams	Full HD 60 FPS	IP + HDMI = 4 channels IP ≤ 2 (only CH1~2 available for selection)	2 channels

#### 5.2.1.2 Network

The factory reset of LC200 is DHCP. The IP address is assigned by the connecting LAN router. If you want to use a static IP address, please configure the connection here.

CaptureVisi	CaptureVision Station - Configuration			
System	<ul> <li>Network</li> </ul>	✓ Network		
System Setti	ngs Network Settin	ອກຕ		
Network		-		
Service	The system	will reboot after changing the network settings. Please re-login.		
Configuration	n IP Assignme	nt:		
Display	DHCP			
Account	IP Address :			
	192.168.4.5			
🚓 Source	> Subnet Masl			
	255.255.25			
• Video	> Default Gate			
Scenes	Primary DNS			
	192.168.1.2			
Storage Storage Secondary DNS Server :		NS Server :		
iii Scheduler		Appiy		
<ol> <li>Backup</li> </ol>				
💬 About				
No	ltem	Function Descriptions		
		DHCP: Dynamic IP address as default		
1	Ethernet Setting	Static IP: Configure static IP address according to the network and		



manually enter network information	
Select and fill in required network setting information and click [Apply] to say	е
the settings	
The system will restart after changing network setting. Please	
connect and log in again	

#### 5.2.1.3 Services

CaptureVision Station - Cor	niguration 🔟	₽
⊙ System	ervice	
System Settings Network	Master Firmware	
Service 1	Master Firmware Version : v4.3.0.29	
Display	Update	
(1) Account		
🚓 Source >	Slave Firmware Slave Firmware Version :	
• Video >	v19.7.26	
Scenes	Update	I
O Storage	Service Data	
🖮 Scheduler	Export the log file to your computer	
① Backup	Description : 🔊	
⊜ About	Export	
	Reset	
	Reset to factory default          Image: Reset to factory default         Image: Reset	
	Restart Device	
5	Restart	

No	ltem	Function Descriptions
1	Main Finn and	Main firmware information and update
I	Main Firmware	Click [Update] and select the main firmware file to update
2	Secondary	Secondary firmware information and update
2	Firmware	Click [Update] and select the secondary firmware file to update
	3 Service History	Saves system log files to user's computer
		1 Enter file name
3		2 Click [Export] to export system log files
		%The length of file name must be between 0 ~ 16 characters.
		{}()'&@~^\$%" ,`:?<>*\/#; symbols, and space are forbidden
4	Reset	Restores LC200 to factory reset
4		%Check [Keep Network Settings] and the network settings will be remained
-	Restart the	
5	device	Restart the LC200



#### 5.2.1.4 Setting File

You can export the configuration files of the device to a computer, and import the configuration files to another device to apply the same configuration.

С	aptureVision Station -	Configuration	) 🕞
0	System 🗸	Configuration	
	System Settings Network	Export	
	Service Configuration Display	☑ Display         ☑ Record, Stream, Storage, and Backup	
•	Account	Scenes	
đ	Source >		2
۲	Video >	Import	
	Scenes	2 Load a configuration.	
Q	Storage		J
曲	Scheduler		
۲	Backup		
•	About		

No	Item	Function Descriptions
1	Export	Export the current configuration of LC200 as a configuration file
2	Import	Import the exported configuration files from a LC200 to another LC200

#### 5.2.1.5 Display Settings

C	aptureVision Station -	Configuration	ŀ
0	System 🗸	Display	
	System Settings	Output Resolution	
	Network	HDMI 1 and HDMI 2 :	
	Service Configuration	1920x1080, 60Hz	
	Display	Apply	
۲	Account		
đ	Source >		
۲	Video >		
	Scenes		
ø	Storage		
輣	Scheduler		
۲	Backup		
•	About		

No	ltem	Function Descriptions
1	Output Resolution	Select a HDMI output resolution on LC200



#### 5.2.2 Account

You can manage accounts for 3 kinds of user mode here: modify the user name and password to [System Management], [Director], and [Content Management].

System Account management	
Account Administrator 🔊	
Source > Username :	
Video     Video     Video	
Confirm Password :	
C Storage	Apply
Scheduler	CABA
Backup Online Director	
About	
2 New Password :	
Confirm Password :	
	Apply
Video Manager 🔖	
Username :	
video	
3 New Password :	
Confirm Password :	
	Apply
	ANA A

No	Item	Username/Password	Function Descriptions			
1	System	odmin (odmin	Sets up the permission of main system management			
I	Management	admin / admin	Sets up the permission of main system management			
2	Director	director / director	Manages playback and changes simple basic image			
2	Director	director / director	settings and the permission of Director			
3	Content	vdee /videe				
3	Management	vdeo / video	Views the permission of file storage and playback			
The leng	th of user name	must be between 4 ~ 16	characters. {}()'&@~^\$%" ,`:?<>*\/#; symbols, and			
space ar	e forbidden					
The leng	th of password r	must be between 8 ~ 16 c	haracters. {}()'~^" ,`:?<>*V; symbols, and space are			
forbidde	n					
Duplicat	Duplicate username is forbidden					



#### 5.2.3 Video Source

#### 5.2.3.1 Network Device Management

Account	(	letwork Cameras						
ource	~	👌 Refresh						
Network Device Manag	er (1)	Host Name	IP Address	MAC	Manufacturer	Status	Connected	
		VC-A50P	192.168.4.56	DC:E2:AC:01:60:49	Lumens	OK	ок	面
Video	>	10 1001					UK	ш.
Scenes		VC-A50P	192.168.4.55	DC:E2:AC:01:61:23		Login	OK	Ĩ
Scenes Storage			192.168.4.55	DCE2.AC01/81/23				
Video Scenes Storage Scheduler Backup		VC-A50P	192.168.4.55 w/ce Name	DCE2.AC01/61/28	URL			

No	ltem	Function Descriptions
		<ol> <li>Click [Refresh] and automatically scan the network cameras in the same LAN</li> <li>Click [Login Verification] and enter login information to connect the camera</li> </ol>
1	Network Camera	Login Authentication × Username : admin Password : Authentication
		3 Once the status display "OK", indicating that the image can be set under the signal source input selection.
2	Network Streaming	<ul> <li>Click [Add]</li> <li>Enter the network streaming name and URL, and then click [Apply]</li> <li>Network Stream</li> <li>Ve-ASOP</li> <li>URL :         <ul> <li>(ve-ASOP</li> <li>URL :</li> <li>(rtsp://192.168.4.56:8557/h264]</li> </ul> </li> </ul>
		3 The newly added network streaming name will be displayed in the list



#### 5.2.4 Video Settings

#### 5.2.4.1 Record Settings

CaptureVision Station -	Configuration	💷 🕒
⊙ System >	Record	
Account	Encoder Settings	
th Source >	Recording Mode : MP4 Mixed Video/ Original Source	Full HD Resolution : 1920x1080 Average Bitrate : 4 Mbps
● Video 🗸	Video Compression :	FPS: 30 GOP: 30 H.264 Profile: high profile
Record		Audio Bitrate : 256 Kbps Audio Sample Rate : 48.0 KHz
Stream	Preferentially record to front USB flash drive :	
Cenes	Loop Recording :	
Q Storage		
Scheduler		Apply
<ol> <li>Backup</li> </ol>	Recording File Name Setting 📡	
O About	2 Prefix Setting :	
		Apply

No	ltem	Function Descriptions
1	Encoder Settings	<ul> <li>Recording Mode: You can select Movie Mode (MP4) and Movie/Resource Mode (MP4)</li> <li>Movie Mode: Only record the single PGM 4-channel composite screen</li> <li>Resource Mode: Can record the single PGM 4-channel composite screen and 4 signal source screens</li> <li>Encode Profile: 6 default encoding formats are available to be selected by resolutions and average bitrate (Please refer to the instructions of Encode Profile). You can also set user-defined image quality.</li> <li>Preferentially record to front USB hard drive: Videos or pictures will be preferentially recorded to the USB flash drive which has already been connected to the front USB port.</li> <li>Cycling Record: Enabling the cycle record function can prevent recording error when storage device is full</li> </ul>
2	Video File Name Setting	Customizes the prefix name of video file

#### ■ Instruction on Encode Profile

Name	Video Resolution/ABR	Description
Full HD	1080p / 4 Mbps	Dynamic scene; Large film site; Local drive recording
Internet Full HD	1080p / 3 Mbps	General scene, Medium film site, Local drive recording
HD	720p / 2 Mbps	Static scene, Small film site, Local drive recording
Internet HD	720p / 1.5 Mbps	LAN director
SD	480p / 800 kbps	Static scene, LAN director
Mobile network SD	480p / 500 kbps	Director via mobile device
User-Defined	Click [] to open Custom (a	as shown in the following figure). Once done, click "Save".

### Lumens®

#### 5.2.4.2 Streaming Settings

You may change the streaming settings here. Related settings must follow the streaming protocol and the settings recommended by server system support.

	Stream				
Account	Encoder Setting	js			
Source >	Video Compre	ssion :			Internet Full H Resolution : 1920x108
	1 Internet Full F	HD	$\sim$		Average Bitrate : 3 Mbp GOP : 3
Video 🗸					H.264 Profile : high profil
Record					Apply
Stream					
Scenes	Streaming Setti	ings			
Storage	Stream 1	Stream 2	Stream 3	RTSP	
Storage	Enable Stream	1			
	riable Stream				
	Stream Type :	RTMP		$\sim$	
Scheduler					
Scheduler Backup	Stream Type :	rtmp://0.0.0.0			
Scheduler Backup	2 Stream Type : Server :	rtmp://0.0.0.0			
Scheduler Backup About	2 Stream Type : Server :	rtmp://0.0.0.0			

1       Encoder Settings       by resolutions and average bitrate (Please refer to 5.2.4.1 for the instructions of Encode Profile in Network Settings). You can also set user-defined image quality.         2       Streaming 1 / Streaming 2 / Streaming 3: You can customize 3 podcast addresses of network streaming Supported streaming type: RTMP / RTMPS / RTP / Youtube / Youtube_Gaming / Facebook Live / Twitch / Smashcast         2       Streaming Settings         2       Streaming Settings	No	ltem	Function Descriptions
2       Streaming Settings         2       Streaming Settings	1	Encoder Settings	instructions of Encode Profile in Network Settings). You can also set
Real Time Streaming Protocol (RTSP): You can customize the real time streaming route of LC200	2	Streaming Settings	<ul> <li>Streaming 1 / Streaming 2 / Streaming 3: You can customize 3 podcast addresses of network streaming Supported streaming type: RTMP / RTMPS / RTP / Youtube / Youtube_Gaming / Facebook Live / Twitch / Smashcast</li> <li>Stream 1 Stream 2 Stream 3 RTSP</li> <li>Enable Stream</li> <li>Stream Type : RTMP</li> <li>RTMP</li> <li>Server : rtmp://192.168.23.157:193</li> <li>Stream Key : livestream</li> <li>Authentication</li> <li>Public URL : rtmp://192.168.23.157:193</li> <li>Start Stream with Record Function</li> <li>Apply</li> <li>Real Time Streaming Protocol (RTSP): You can customize the real</li> </ul>



Stream 1 Stream 2 Stream 3 RTSP
Session : pgm
Port : 554
Authentication
RTSP URL : rtsp://192.168.4.50:554/pgm
Reset to factory default
Apply

#### 5.2.5 Scene

LC200 provides 5 overlay styles, 5 background images, and 5 scenes. You can also add your own styles.



No	Item	Function Descriptions
		Select and delete overlay style. You can upload files to apply.
		Click [ $(ullet)$ ] and select a desired file from the window. Check the
		preview image and file name, and click [Apply] to start uploading and applying this overlay style. Click [Delete] to cancel the upload.
		%File format:
1	Overlay	PNG format
		Supported size: (a) 1920 x 136
		(b) 1080 x 240
		(c) 800 x 320
		(d) 640 x 400
		Select and delete background image. You can upload files to apply.
		Click [ 📀 ] and select a desired file from the window. Check the
2	Background Image	preview image and file name, and click [Apply] to start uploading and applying this background image. Click [Delete] to cancel the upload.
		%File format:
Lun	nens®	

		PNG format
		Supported size: 1920 x 1080
		Scene is the integration of "Overlay," "Background Image," and
		"Recording Layout," which provides the scene made of different
		background images, layout, and overlay style. You can customize the
3	Scene	layout content in 9 scenes.
		Click [ 📀 ] to open scene settings. Enter the scene name and
		select the required overlay, layout, and background image. Once done, click "Apply".

#### 5.2.6 Storage Settings

You can set up recording storage, cycle recording, and view hard drive information here.



No	Item	Function Descriptions
1	Recording Hard Drive Setting	Local storage: Select a storage from internal hard drives Click drop-down menu 🔽 and select local storage hard drive
2	Hard Drive Information	Display hard drive information, free space, and capacity. Click "Format" to clear the internal storage devices. Confirm if you want to format the hard drive in the pop-up dialog and click "Confirm" to delete all video files.



#### 5.2.7 Schedule Setting

CaptureVision Stati	ion - Configuration	💿 🕒
System	> Scheduler	
<ol> <li>Account</li> </ol>	Schedule Settings 🖻	E CONTRACTOR O CON
na Source		
• Video	Schedule Source : Manual Calendar Import	
Scenes	Load a configuration.	
O Storage	Import	
Scheduler		Apply
① Backup	Recording Interruption	
\ominus About	2 Cancel angoing recording task :	Stop

No	Item	Function Descriptions
1	Schedule Setting	<ul> <li>Click [On/Off] </li> <li>Click [Calendar] </li> <li>Check the current schedule status</li></ul>
2	Cancel Recording	Click [Stop] to stop the current scheduled recording

#### 5.2.8 Backup Setting

LC200 provides auto backup service which can upload videos to a designated space automatically. You can set up upload destination and test the connection here.



CaptureVision Station	- Configuration		💿 🕒
System 3	Backup		
① Account	Backup Settings		
🚓 Source	Backup Type : OFF		
Video	> Mode :		
Scenes	FTP V		
C Storage	192.168.4.37		
Scheduler	Port : 21		
Backup	Folder : LC200	Connection Test	
🗢 About	Authentication : Normal		
	Username :		
	nerb		
	Password :		
			Apply

No	Item	Function Descriptions
1	Upload Setting	<ul> <li>Auto upload: Disable / Upload right after recording completes / Upload periodically</li> <li>Mode: FTP / SFTP / Kaltura / Panopto / Opencast HTTP / Opencast HTTPS</li> <li>Connection Test: Click [Connection Test] ↓ to test if a connection can be created with the current setting</li> <li>※ Please refer to the videos of How-to series on Lumens<sup>™</sup> website and YouTube channels for related application settings.</li> </ul>

#### 5.2.9 About

LC200 Device-related Information: Firmware version, device serial number, and technical support link

System	> System Information	
Account	Information	
Source	> Manufacturer : Lumens Digital Optics Inc.	
Video	Model :	
Scenes	LC200 Master Firmware Version :	
Storage	v4.3.0.29	
Scheduler	Slave Firmware Version : v19.7.26	
Backup	Serial Number :	
About	MAC :	
	BC:BA:E1:FF:22:23	
	Webpage :	
	www.MyLumens.com	
	Support :	
	service.lumens.com.tw	
	回 后提 回 教授 教授	



#### 5.3 Director

LC200 is built in Director, which allows you to monitor recording and preview the output video from streaming director.

Related feature description as below:

	CaptureVisi	ion Station - Director ( 192.168	.7.53 , version : v4.3.0.23 ) Home
1	Channel 1 HDM11 HDM12 HDM12 HDM12 HDM13 HDM12 HDM13 HDM14 HD	Channel 2 RTSP 01	
(2)	• REC	Record	ync MP4, 1920x1080, 30fps, 4MB
$\underbrace{)}{3}$	الله 📢 📢 📢	Stream 1	✓ ((∞)) FLV, 1920x1080, 30fps, 3MB
$\overbrace{4}$	Come Scene	s Stream 2	((*))     FLV. 1920x1080, 30fps, 3MB     Snapshot
5	<÷> Camer	ra Control Stream 3	((•)) FLV, 1920x1080, 30fps, 3MB
	No	Item	Function Descriptions
	1	Channel Signal	The drop-down menu of image sources includes 4-channel HDMI source,
		Selection	IP camera, or streaming image
	2	REC Record	Start or stop recording; also select whether to synchronously stream or not
		Setting	
	3	Audio Source	Manage the input and output audio source; adjust the audio volume of the
		Management	recording
	4	Scenes Layout	Fast select the recording layout, or customize the background and scene
		Setting	style
	5	Camera Control	Provide the IP video camera PTZ control or simple function settings
	6	Main Screen Output	Display the layout of current output screens
	7	Recording Progress	Display information of the current status of recording/streaming, such as



#### 5.3.1 REC Record Setting

• RE	C Record Syr	IC PP4, 1920x1080. 30/ps, 4MB
📢 ))) Au	dio Stream1	((v)) [sv, 1920x1080, 30fps, 3MB
Sci	enes Stream 2	((+))         FLV, 1920x1080, 30fps. 3MB           O         Snapshot
<÷→ Ca	mera Control Stream 3	[ ((v)) FLV. 1920x1080, 30fps. 3MB
No	Item	Function Descriptions
1	Recording while	Check stream(s) and click recording button <b>I</b> to strart streaming
	Recording Willio	
	Streaming	and recording function
2	8	
2	Streaming	and recording function

#### 5.3.2 Audio Source Management

REC	Input 1	Input 2	Input 3	Input 4	Output
N) Audio	Î	Ĭ		Î	
Scenes	2 3 HIME-INX	<b>€</b> × HDML-in <b>V</b>	<b>€</b> ® Line-in ▼	Line-In Mic-In H <u>DML-In</u> HDML-In <b>Ve</b>	Line out + PGM MultiView ALL ALL

No	ltem	Function Descriptions	
1	1 Volume Control Adjust the volume of audio input		
2	2 Mute Button Mute audio output		
3	Audio Source Setting	g Select a audio source	

#### 5.3.3 Scenes Layout Setting

Rec	dio 2	Scenes Layout Overlay Background			
No	No Item		Function Descriptions		
1	Scenes		Scenes page is the integration of "Overlay," "Background Image," and		
			"Recording Layout," which can perform a series of scene change		
			according to your needs.		
2	Layout		Apply a different layout to highlight the screen focus of different		
channels. Click a de			channels. Click a desired layout style to apply.		
3	Overlay Select a desired style to apply				
4	4 Background		Display the background images supported by "Director" system. Click the		
			thumbnail to apply		



#### 5.3.4 Camera Setting

Rec	dio			
No	Item	Function Descriptions		
1	Camera	Select a desired camera to control		
2	Preset Setting and Call	Click number keys to perform preset settings and calls		
3	Direction Control Panel	Move the center point to control the shooting direction		
4	Zoom In/Zoom Out	Zooms in/out the lens		
5	Focus Setting	Set up auto or manual focus		
6	Backlight	Enables/disables backlight compensation		
	Compensation			
7	PTZ Speed Setting	Set up the moving speed of Pan Tilt Zoom		



#### 5.4 File management

LC200 provides file management feature which can perform the following functions via the file management interface: Upload, download, delete, replay video files and editing recording information.

	CaptureVision Station - Files Manager (192.168.7.53, version : v4.3.0.23)				
(1	Preview       Window Medializing manufacture         Image: Static st				
4       2019/06/26       2019/07/26       C         6       5010       14.02.20         2019.05.30.13.45.07       2019.05.30.13.44.00         2019.05.23.11.49.16       2019.05.23.11.49.16         2019.05.23.11.5.31       2019.05.23.10.47.42         8       Delete Folder       Backup Folder       Copy to USB		Folder D19_05_30_14_02_20 D19_05_30_13_45_07 D19_05_30_13_44_00 D19_05_23_11_49_16 D19_05_23_11_15_31 D19_05_23_10_47_42	File Name         Date         Size           2019_05_23_11_15_31_Movie.mp4         2019-05-23 11:15         776 MB           2019_05_23_11_15_31_CH1_Channel1.mp4         2019-05-23 11:15         756 MB           2019_05_23_11_15_31_CH2_Channel2.mp4         2019-05-23 11:15         829 MB           2019_05_23_11_15_31_CH3_Channel3.mp4         2019-05-23 11:15         829 MB           2019_05_23_11_15_31_CH4_Channel4.mp4         2019-05-23 11:15         0 Byte		
	No	Item	Function Descriptions		
	1	Preview Screen	Click desired video files to play and control on the Preview screen		
	2	Program Screen	Display the Director screen or switch to synchronize with the Preview screen	en	
	3 Screen Switch Switch the Program Button screen		Switch the Program screen to the LIVE Director screen or the Preview screen		
	4	Discovery	You can search recording video files by selecting date period on the calendar		
	5 Display Mode Video view mode. You can switch to thumbnail mode or list mode Switch				
	6	Folder Display	Display the recording video folders		
	7	7 Video File Display Display the files in the video folder			
	8	File Management	Delete, backup or copy recording video to an external USB flash drive		

### Lumens®

#### 5.4.1 Webpage Interface

The default page after accessing LC200 web page is system setting page. Click the

video management icon i on the top-right corner to access video management

page.



1	2

No	ltem	Function Descriptions
1	Video	Oligi, to access the video monogenerations
	Management	Click to access the video management page
2	Photo	
	Management	Click to access the the picture management page
		Click to access the system setting page
		※ Caution:
3	System Settings	Log in the web page with admin/admin to display system setting subpage
		If you log in the web page with video/video, you will not find the system setting
		subpage and you can only manage videos and photos
4	Logout	Click this icon to log out the web page interface
5	File Management	Upload, download and delete the checked video files
6	Hard Drive Status	Display the used space and the capacity of the current hard drive
	Display	
7	Video File Display	List information, including the file names of recording videos, thumbnails,
		capacity, and date

#### ■ File Management Description

#### Uploading

Check the thumbnails of the videos to upload. Click [ 1] and the videos will be uploaded to the location set in Upload Settings. Please refer to [System Management/Upload Settings] for related settings.



#### Upload Status Description:

lcon	Upload Status	lcon	Upload Status
	Videos are uploaded successfully	P	Videos are queued for upload
	Fail to upload videos		Videos are uploading

#### Download

Check the thumbnails of the videos to download. Click [ ] and the videos will be saved as MP4 video files and datasets.

If only video files are needed, you can click the video thumbnails and access video playback page to download the video files only.

#### > Delete

Check the thumbnails of the videos to delete. Click [ iii ] and the video files will be deleted for good.

#### Video Playback

Right-click video to preview the video, edit the related content data, and download the video file and dataset

(1)	Movie 2019-08-22 13:39:32 2	Content
		Title :         2019_08_22_13_39_32         Organization :         Lumens         Department :         FAE         Event_date :         Camera Color Test         Semester :
3	▶ 001 / 040 1x 40 → x Movie 25 MD Data set	Topic : Level : Audience : Room :
4	Download 5	Apply

No	Item	Function Descriptions
1	Video Control Window	Play back and control recording videos
2	Video Content	Edit and modify video content
3	Video File and Dataset	Select the video files or datasets to download
4	Download Button	Click this button to download the checked video files or datasets
5	Apply Button	After editing and modifying the video content, click this button to apply

### Lumens

#### Photo Management

You can manage the photo files captured by pressing SNAPSHOT. Folders will be named with the shooting date automatically; all photos shot in the same date will be stored in the same folder.

Just like Video Management, you can also upload, download, and delete photos in Photo Management subpage.





### **Chapter 6 Troubleshooting**

This chapter describes problems you may encounter while using LC200. If you have questions, please refer to related chapters and follow all the suggested solutions. If the problem still occurred, please contact your distributor or the service center.

No.	Problems	Solutions
1.	Boot without power signal	Make sure you have plugged in the power cord
		1. Check the power
	No image output	<ol> <li>Check if the input/output device cables are loose</li> <li>Replace the cables and make sure they are not faulty</li> </ol>
2.		4. Make sure if the signal source connects to the device correctly
		5. LC200 cannot record video from a video output including HDCP format
3.	The panel keys are not responding	The panel become non-functional when logging into the system
4.	LC200 cannot perform camera control after connecting to a camera	Please make sure the dial setting of Camera Address Selector is 0. LC200 cannot identify camera correctly if it is not 0
5.	You cannot log in the web page administration interface if you forget the password	If you forget the default password, please press the panel concurrently Snapshot is +Switch Channel is buttons on the panel at the same time for 5 seconds to restore the factory reset
6.	Selections of network streaming can not be more than 3 channels.	You can select different system frame rates in the frame rate mode that affects the supported recording mode and network streaming number. Please refer <u>5.2.1.1 System Settings</u> for <u>the restrictions on use of the system frame rate</u>

