

User's Manual



**8 / 16-CH H.264 Digital
Video Recorder**

DVR-872 / DVR-1672



Copyright

Copyright (C) 2011 PLANET Technology Corp. All rights reserved.

The products and programs described in this User's Manual are licensed products of PLANET Technology, This User's Manual contains proprietary information protected by copyright, and this User's Manual and all accompanying hardware, software, and documentation are copyrighted.

No part of this User's Manual may be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form by any means by electronic or mechanical. Including photocopying, recording, or information storage and retrieval systems, for any purpose other than the purchaser's personal use, and without the prior express written permission of PLANET Technology.

Disclaimer

PLANET Technology does not warrant that the hardware will work properly in all environments and applications, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose.

PLANET has made every effort to ensure that this User's Manual is accurate; PLANET disclaims liability for any inaccuracies or omissions that may have occurred.

Information in this User's Manual is subject to change without notice and does not represent a commitment on the part of PLANET. PLANET assumes no responsibility for any inaccuracies that may be contained in this User's Manual. PLANET makes no commitment to update or keep current the information in this User's Manual, and reserves the right to make improvements to this User's Manual and/or to the products described in this User's Manual, at any time without notice.

If you find information in this manual that is incorrect, misleading, or incomplete, we would appreciate your comments and suggestions.

FCC

This equipment has been tested and found to comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) This device must accept any interference received. Including interference that may cause undesired operation.

CE

This equipment is in compliance with the requirements of the following regulations: EN 55 022: CLASS B

WEEE regulation



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Energy Saving Note of the Device

This power required device does not support Stand by mode operation.

For energy saving, please remove the DC-plug or push the hardware Power Switch to OFF position to disconnect the device from the power circuit.

Without remove the DC-plug or switch off the device, the device will still consuming power from the power circuit. In the view of Saving the Energy and reduce the unnecessary power consuming, it is strongly suggested to switch off or remove the DC-plug for the device if this device is not intended to be active.

Trademarks

The PLANET logo is a trademark of PLANET Technology. This documentation may refer to numerous hardware and software products by their trade names. In most, if not all cases, these designations are claimed as trademarks or registered trademarks by their respective companies.


Revision

User's Manual for PLANET 8 / 16-Ch H.264 Digital Video Recorder

Model: DVR-872 / DVR-1672

Rev: 2.0 (June, 2011)

Part No. EM-DVR872_1672

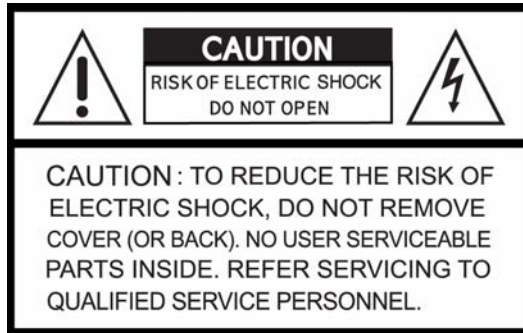

This symbol is intended to alert the user to the presence of unprotected “Dangerous voltage” within the product’s enclosure that may be strong enough to cause a risk of electric shock.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING !!!

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

All the safety and operating instructions must be read before the unit is operated.

- **Make sure to switch the power off before you install the DVR.**
- **There is the danger of an electric shock if the DVR is opened by an unqualified service engineer or installer.**
- **Avoid using the DVR outside of the reference temperature and humidity indicated in the specification.**
- **Avoid exposing the DVR to violent movement or vibration.**
- **Do not use or store the DVR in direct sunlight or near to any source of heat.**
- **Do not place any object into the holes used for air circulation.**
- **Always use the DVR in a well ventilated location to prevent overheating.**
- **Risk of explosion if battery is replaced by an incorrect type.**
- **Dispose of used batteries according to the instructions.**

TABLE OF CONTENTS

Chapter 1 FEATURES	1
Chapter 2 PACKING DETAIL	2
Chapter 3 LOCATION AND CONTROL	3
3.1 Front Panel Controls	3
3.2 Real Panel Connectors	5
3.3 Remote Control	6
3.4 Mouse Control	9
3.5 Playback Mode	11
3.6 PTZ Mode	12
Chapter 4 INSTALLATION	14
4.1 System Configuration	14
4.2 Hard Disk Installation	16
Chapter 5 BASIC OPERATION and MENU SETUP	18
5.1 Main Menu Setup	18
5.2 Record Setup	19
5.3 Event Setup	22
5.4 Schedule Setup	25
5.5 Camera Setup	27
5.6 Account Setup	28
5.7 Network Setup	30
5.8 PTZ & RS-485 Setup	36
5.9 System Setup	37
5.10 Utility Setup	44
5.11 Diagnostic	45
Chapter 6 SEARCH & BACKUP	46
6.1 Search Setup	46
6.2 Backup Setup	49
Chapter 7 iCMS Installation and Usage	50
7.1 iCMS Installation	50
7.2 iCMS Login and Environment	52
7.3 Groups & Events	54
7.4 View DVR/ Group List	54
7.5 Event View	55
7.6 Local PC Information and Control	55
7.7 Main Display	56
7.8 Audio Control	56
7.9 eMaps	57
7.10 PTZ Control	58
7.11 Operation Bar	59
7.12 User administration	60

7.13 DVR Connection Information Setup.....	61
7.14 Group Administration	61
7.15 eMap Setup	63
7.16 Remote-Site Playback.....	63
7.17 HDD Playback	65
7.18 File Playback.....	66
7.19 Event Playback.....	67
7.20 Snapshot Data	68
7.21 Recording Data	68
Chapter 8 NETWORK SURVEILLANCE.....	69
8.1 AP Software Installation and Setup.....	69
8.2 AP Software Operation	70
Chapter 9 Mobile Application	73
9.1 For Symbian System.....	73
9.2 For Windows Mobile System.....	79
Appendix A: Product Specification	83

The author assumes no responsibility for any errors or omissions that may appear in this document nor does the author make a commitment to update the information herein.

Chapter 1 FEATURES

- Two USB ports (for mouse usage and backup).
- Dual streaming enhances the speed of network transmission
- Built-in VGA up to 1280x1024 resolution
- Individual setup of resolution, frame rate and video quality for each channel
- Still image snapshot
- AVI converter with time stamp
- H.264 compression ideal for saving HDD space
- Real time live display
- Live display, record, backup, playback and network access simultaneously
- Picture-in-picture monitoring and 2X to 8X digital zoom display
- Control Methods: front panel, USB mouse, IR remote controller, client viewer
- Intuitive GUI for easy configuration and menu driven operation
- Pan / Tilt / Zoom camera control
- Data backup: USB devices, network and DVD-RW
- Event triggered with email notification: motion detection, alarm, video loss
- Supports Internet Explorer with same GUI as DVR site
- Multi-language OSD
- Central Management System (CMS)
- 3G/ GPRS mobile phone monitorin

Chapter 2 PACKING DETAIL



1. DVR



2. CD Disk



3. Quick Installation Guide



4. Remote Control



5. HDD Kit x 1



6. Power Adapter & Power Cord



7. Battery x 2



8. SATA Cord x2 (DVR-872)
SATA Cord x3 (DVR-1672)



9. HDD Rack x 4 (DVR-872)
HDD Rack x6 (DVR-1672)




10. I/O Cable

Chapter 3 LOCATION AND CONTROL

3.1 Front Panel Controls

- DVR-872/ DVR-1672

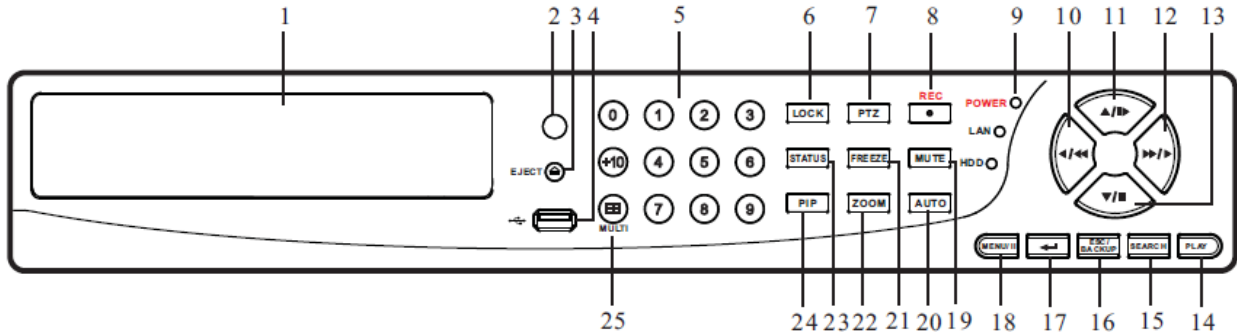


Item	Description
1 DVD-RW Slot	A DVD-RW drive can be installed in the front vacant drive bay. (Optional)
2 IR RECEIVER	Input sensor for the remote control.
3 EJECT	Press EJECT button to open/close the DVD-RW drive.
4 USB 2.0	The USB 2.0 port can be used to connect to numerous USB 2.0 backup devices.
5 NUMERIC BUTTON / CHANNEL SELECT	Camera Select/Numeric Button. Press [+10] button to select channels.
6 LOCK	Enable Keypad Function.
7 PTZ	Start/Stop PTZ Control.
8 REC	Start/Stop recording.
9 STATUS LED	Displays the status of the DVR (standby), HDD read/write and network transmission.
10 LEFT DIRECTIONAL BUTTON/ REWIND	Left Directional Button. Fast Forward Playback, Speed: 2x, 4x, 8x, 16x, 32x and 64x.
11 UP DIRECTIONAL BUTTON/ SLOW	Up Directional Button. Slow Forward Playback, Speed: 1/2x, 1/4x, 1/8x and 1/16x.
12 RIGHT DIRECTIONAL BUTTON/ FAST	Right Directional Button. Fast Forward Playback, Speed: 2x, 4x, 8x, 16x, 32x and 64x.
13 DOWN DIRECTIONAL BUTTON/ STOP	Down Directional Button. Stop Playback.


14	PLAY	Start playing back.
15	SEARCH	Enter search menu screen, use Up/ Down button to navigate. Press ENTER to access selected item.
16	ESC/ BACKUP	Exit various functions and menu screen Video data storage backup.
17	ENTER/ MODE()	Switch to full screen and quad screen.
18	MENU/ PAUSE MENU/	Enter menu mode, use Up/ Down button to navigate menu screen. Press to pause playback.
19	MUTE	Switch to 1-CH Audio Out/ Turn Off Live Audio.
20	AUTO	Enable auto mode, to skip channels. Press MENU to disable auto mode.
21	FREEZE	Turn On/ Off Live Display FREEZE Function. Turn On/ Off Screen FREEZE Function.
22	ZOOM	Enable/ Disable double screen size display. Press ENTER to switch channels.
23	STATUS	Display Status.
24	PIP	Turn on picture-in-picture format, use Up/ Down button to navigate. Press ENTER to access selected item
25	MULTI	This button is used to toggle between multiple display modes: 16, 13, 10, 9 and 4 channel split screen display modes.

3.2 Real Panel Connectors


3.2.1 8-CH Digital Video Recorder: (DVR-872)

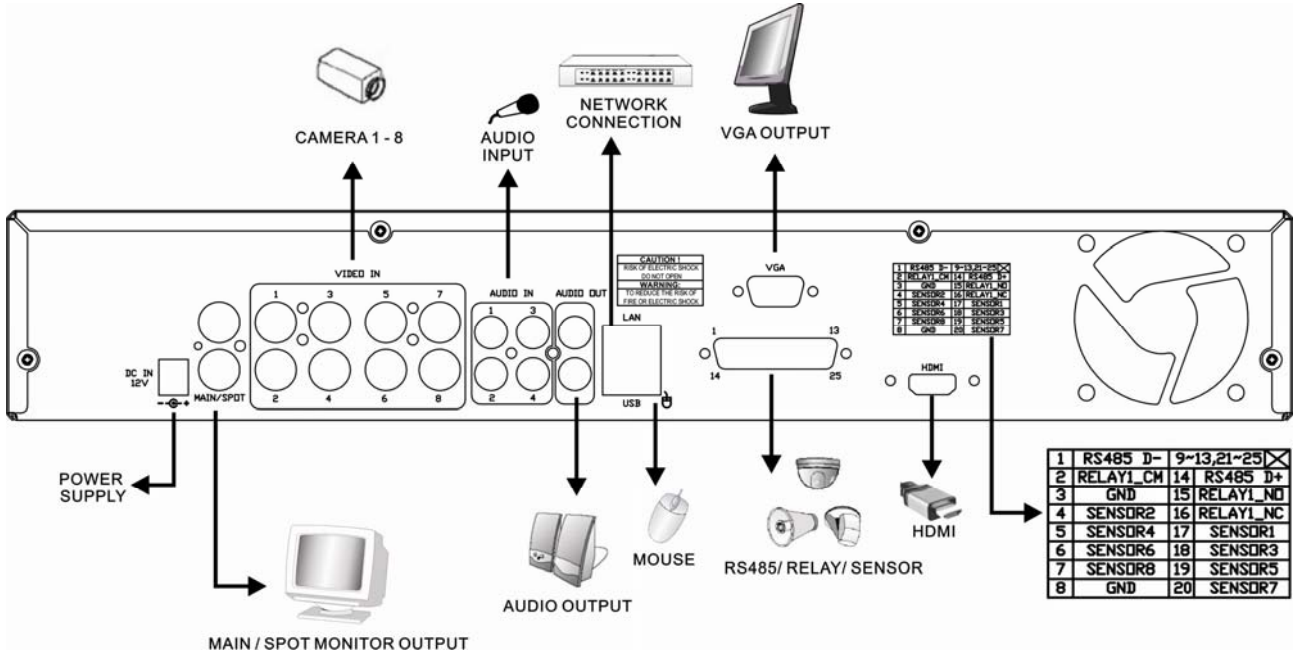



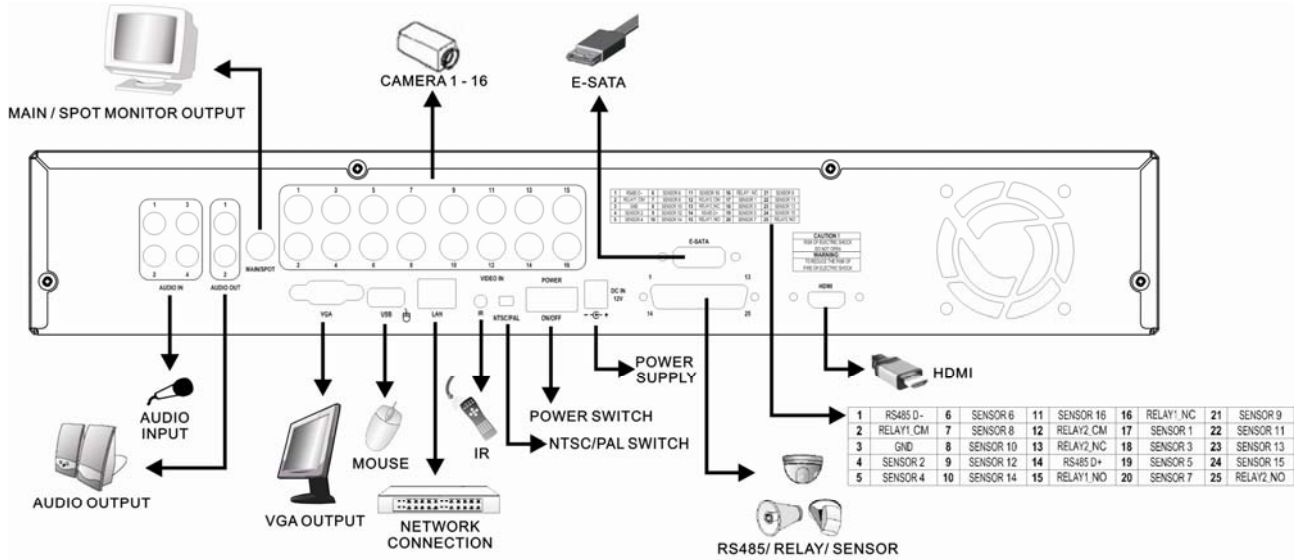



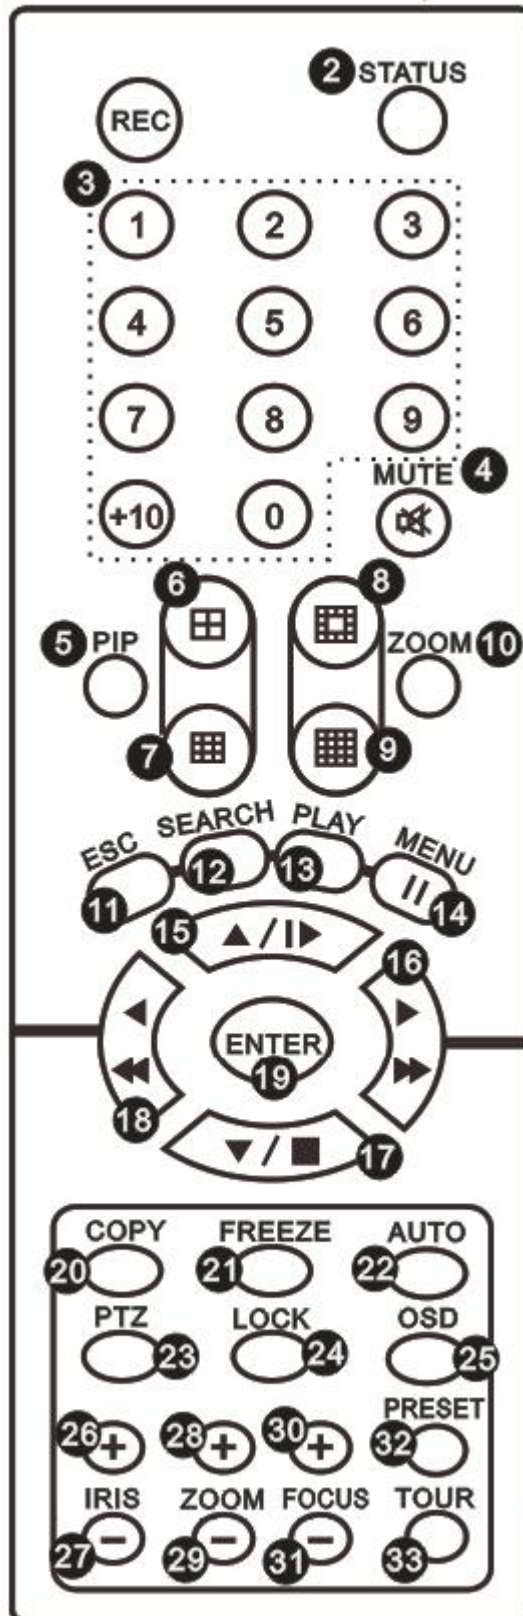


3.2.2 16-CH Digital Video Recorder: (DVR-1672)




3.3 Remote Control



Remote Controller – Button Definition	
① REC	Start/ Stop Recording.
② STATUS	Display Status.
③ CAMERA BUTTONS	Camera Select / Numeric Button. Press [+10] button to select channels.
④ MUTE	Switch to 1-CH Audio Out/ Turn Off Live Audio.
⑤ PIP	Enable/ Disable On Picture-In-Picture Format. Use Directional button to navigate the menu item, and press Enter button to enter the menu item.
⑥ 	Switch to Quad Display.
⑦ 	Switch to 9-Channel Display.
⑧ 	Switch to 13-Channel Display.
⑨ 	Switch to 16-Channel Display.
⑩ ZOOM	Enable/ Disable double screen size display. Use Directional button to navigate the screen display, and press Enter button to switch channels.
⑪ ESC	Exit Button.
⑫ SEARCH	Enter the SEARCH menu. Use Up/ Down Directional Button to navigate the menu item, press Enter button to enter menu item.
⑬ PLAY	Start Playing Back.
⑭ MENU/ 	Enable/ Disable Menu. Pause Playback.
⑮ 	Up Directional Button. Slow Forward Playback, Speed: 1/2x, 1/4x, 1/8x, 1/16x.
⑯ 	Right Directional Button. Fast Forward Playback, Speed: 2x, 4x, 8x, 16x, 32x, 64x.
⑰ 	Down Directional Button. Stop Playback.
⑱ 	Left Directional Button. Fast Rewind Playback, Speed: 2x, 4x, 8x, 16x, 32x, 64x.
⑲ ENTER/ MODE	Switch to Single Screen/ Quad Screen Display.
⑳ COPY	Enter the COPY menu.
㉑ FREEZE	Turn On/ Off Live Display FREEZE Function. Turn On/ Off Screen FREEZE Function.
㉒ AUTO	In AUTO mode, all available channels will be cycled through in full screen.
㉓ PTZ	Start/ Stop PTZ Control.
㉔ LOCK	Enable Keypad Function.
㉕ OSD	Turn On/ Off the Screen Display.
㉖ IRIS +	PTZ Iris-Open.

②7 IRIS -	PTZ Iris-Close.
②8 ZOOM +	PTZ Zoom-In.
②9 ZOOM -	PTZ Zoom-Out.
③0 FOCUS +	PTZ Focus-In.
③1 FOCUS -	PTZ Focus-Out.
③2 PRESET	Lens PreSet Point Setup Press PRESET button+ 2 numeric numbers to save current lens location PLAY+ Numeric Number to move lens to preset point.
③3 TOUR	Activate PTZ Preset Tour.



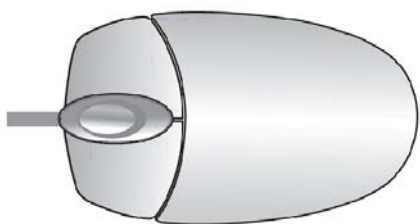









3.4 Mouse Control























Live Mode

Single Channel Display	Move the cursor to the desired channel and double left click.
Change from Single-Channel to Multi-Channel Display	Double left click













Mouse – Menu Mode	
Enter Menu setup	Right click
Select/ Enter	Left click
Return to Previous Page	Right click

 Mouse – Graphic Icons	
	<p>Resting the cursor on this icon will bring up the four (Main Menu/ Search/ Backup/ PTZ) menu icons.</p> <ul style="list-style-type: none">  MAIN MENU  SEARCH SETUP.  BACKUP.  PTZ CONTROL.
	Turn On/Off recording.
	PLAYBACK
	<p>Resting the cursor on this icon will bring up five (PAUSE/ PIP/ ZOOM/ AUTO SEQ/ LOCK) display icons.</p> <ul style="list-style-type: none">  PAUSE, to pause LIVE image  PIP, picture in picture  ZOOM, double the screen size  AUTO-sequence

	LOCK, activate the key lock.
	Full screen display, multiple clicking to switch channels
	Quad display.
	9CH Split-screen display
	13CH Split-screen display
	16CH Split-screen display

Mouse – GUI Hints and Tips	
	Recording is on
	Number represents the current selected LIVE audio channel
	Live Audio is off
	Motion detected on the channel
	Sensor triggered on the channel
	Video loss detected on the channel
	USB device detected
	DVR has been connected onto the Internet.
	AUTO-SEQ is on
	FREEZE is on, screen is frozen
	LOCK is on
	PTZ control is on
	Shows the current hard disk space used-up (99% means that the HDD space has been used up 99%, and the remaining HDD space is 1%)
	Current time which is used when providing the conversion of AVI files is shown on the bottom lower right of each DVR screen.














3.5 Playback Mode

Playback – Quick Function Icon	
	Press 「◀◀ / ◀」 button to Fast Rewind Speed : 2x, 4x, 8x, 16x, 32x, 64x
	Press 「▶▶ / ▶」 button to Fast Forward Speed : 2x, 4x, 8x, 16x, 32x, 64x
	Press 「PLAY」 / 「 」 button to Play/ Pause Playback
	「▲ / SLOW」 slow playback Speed : 1/2x, 1/4x, 1/8x
	「▼ / ■」 stop playback
	Playback channel by channel with snap shot display
	Full screen display
	Quad display
	9CH Split-screen display (available only to 8/ 16CH DVR)
	16CH Split-screen display (available only to 16CH DVR)
	Zoom in video image
	Snap shot image

3.6 PTZ Mode

PTZ – Remote Controller Control	
▲ / SLOW	Move PTZ up.
▼ / ■	Move PTZ down.
◀◀ / ◀	Move PTZ to the left.
▶▶ / ▶	Move PTZ to the right.
ZOOM +	PTZ zoom-in.
ZOOM -	PTZ zoom-out.
FOCUS +	PTZ focus-in.
FOCUS -	PTZ focus-out.
IRIS +	PTZ iris-open.
IRIS -	PTZ iris-close.
TOUR	Activate PTZ pre-set tour. *
PRESET + NUMBER	To save a preset location Press PRESET and a number key. DVR will save the current location.
PLAY + NUMBER	To go to a preset location Press PLAY and a number key. DVR will move to the preset location.
ZOOM	Set current PTZ location as the start of the line-scan. *
PIP	Set current PTZ location as the start of the line-scan. *
FREEZE	Activate line-scan. *


*: Different brands of PTZ protocol sometimes may not be 100% compatible with each other. Therefore, these functions may not be applicable.

PTZ – Quick Function Icon	
	
	Exit PTZ Mode and back to the LIVE mode
	Preset number N. (1~64)
	Go to preset number N.
	Set current PTZ location at preset number N.
	[TOUR] icon, click to activate preset tour
	Same as [PIP]. Set current PTZ location as the starting point of the line-scan.
	Same as [FREEZE]. Activate line-scan.
	Same as [ZOOM]. Set current PTZ location as the ending point of the line-scan.
	To move PTZ in 360°
	PTZ zoom in or PTZ zoom out.
	PTZ focus in or PTZ focus out.
	PTZ IRIS open or PTZ IRIS closes.


Chapter 4 INSTALLATION

4.1 System Configuration

4.1.1 8-CH Digital Video Recorder:

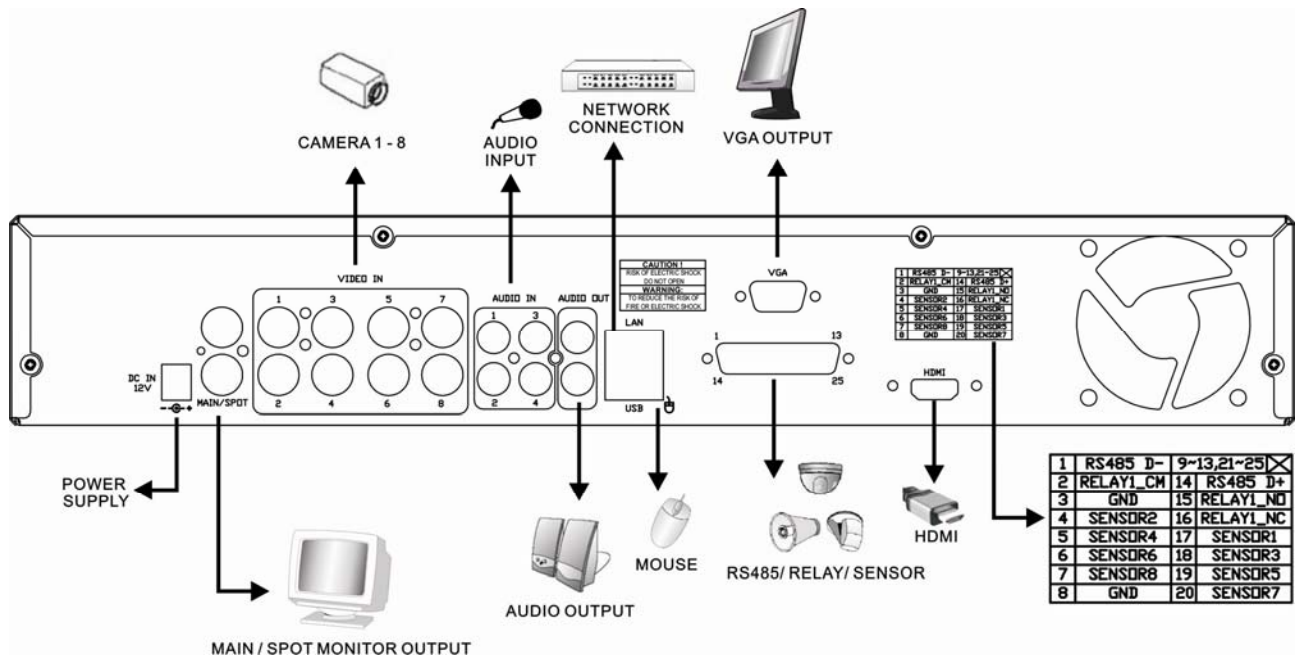


4.1.2 16-CH Digital Video Recorder:

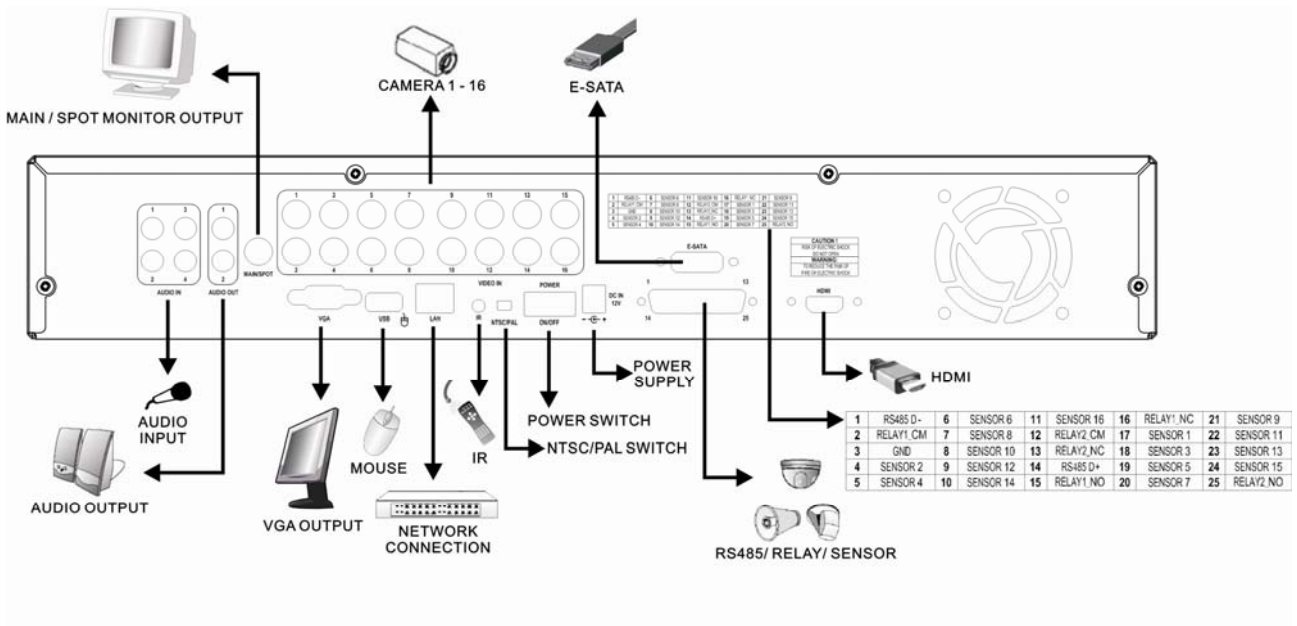

4.2 Hard Disk Installation

Step 1: Remove the upper case.

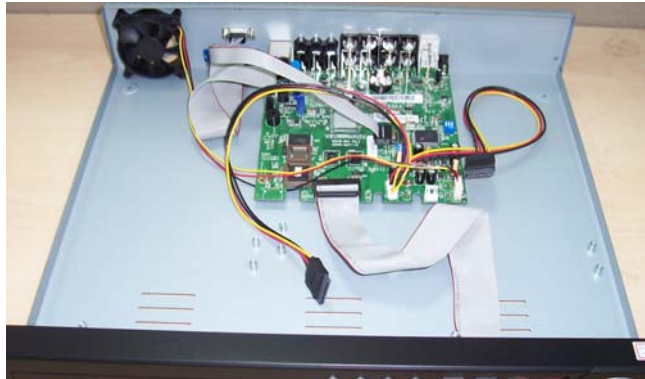

Step 2: Lock the HDD holder symmetrically onto both sides of the HDD.




Step 3: Insert the SATA cable and power cable onto the SATA HDD



Step 4: Place the HDD on the HDD plate of the removed case and connect the power and the SATA cable.





Step 5: Connect the Power and SATA cable into the sockets on the main board. Make sure that the HDD1 cable has been properly inserted into HDD1 socket.

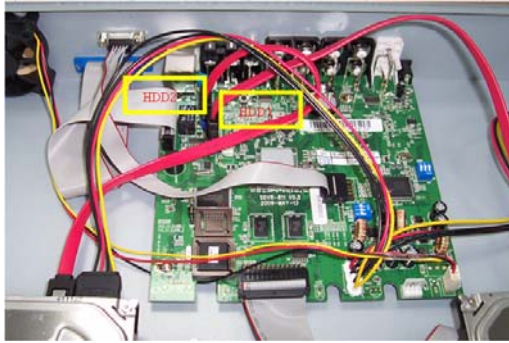

Step 6: The installation has completed.

DVR-872

DVR-1672

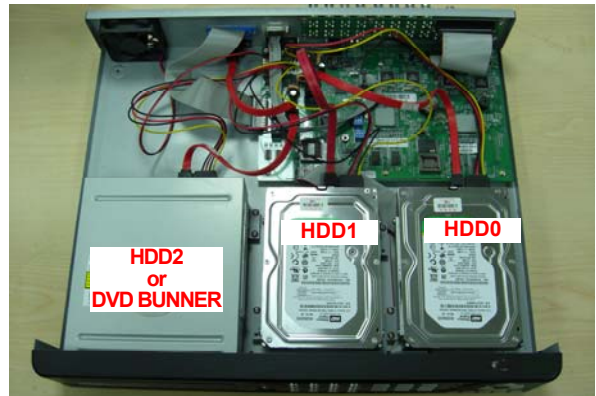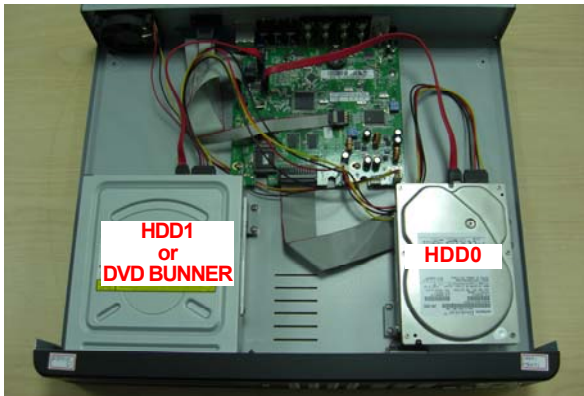







Chapter 5 BASIC OPERATION and MENU SETUP

5.1 Main Menu Setup



To enter the main menu and setup the DVR, please log-in account and enter user password. The default password of the administrator is “**123456**”. Please refer to “Account Setup” for related setup of other log-in users.

Main Menu – Mouse Control	
	Switch between capital and small letters.
	Switch between numbers and letters.
	Press to cancel the setup, and re-choose the login account.
	Delete the last character.
	Enter to identify the password. It will enter the setup menu if the password is verified.
	Space key



Main Menu – Remote Controller and Front Panel Control (Click MENU button to enter Quick Setup Menu)	
◀ ▶	Switch to different options under one item
▲ ▼	Switch to different items
MENU	Press to confirm setup (OK)
ESC	Press to cancel setup (CANCEL)
ENTER	Enter the menu, or display virtual keyboard

5.2 Record Setup



Item	Description
HDD FULL	Select STOP to stop recording or OVERWRITE to reuse the HDD when HDD is full. [Stop] : Stop Recording [Overwrite] : Start to overwrite beginning from the oldest data of HDD, and continue to record.
OSD Position X	Set time stamp of OSD position X
OSD Position Y	Set time stamp of OSD position Y
OSD Position Setup	OSD position time stamp setup
Video Preservation (Hours)	Information stored within the HDD is preserved for only a specified length of time.
Quality & Frame Rate Setup...	Setup the quality and frame rate for each channel under normal recording and event recording type.

5.2.1 Quality & Frame Rate Setup



Item	Description
View Normal / View Event	Setup resolution, quality and FPS separately for different record type.
No.	Check/ Uncheck the box will enable/ disable recording of that channel.
Resolution	Choose record resolution, this value will be used by each channel.
Quality	Choose from Below Basic / Basic/ Normal/ High/ Highest.
FPS	Choose recording frame rate (1~30).
Auto	The maximum recording frames available by the average distribution of each channel.

* Number of “Auto” means the DVR processing ability. Recording data depends on “FPS”.

Ex: If channel 1 to channel 8 set to 15 FPS, the sum will be 120 FPS. (8 x 15 = 120)

5.3 Event Setup




Item	Description
Motion Setup	Enter to set up motion detection
Sensor Setup	Enter to set up sensor detection

5.3.1 Motion Setup



Item	Description
Alarm Duration(Seconds)	Alarm duration time (1~60 seconds).
Motion Popup	Check the box to Enable/ Disable popup screen function for all channels. When motion is detected in LIVE mode, the detected channel image will popup in full screen display.
Enable	Check the box to Enable/ Disable motion detection for each channel.
Sensitivity	Drag the bar or press ◀▶ to set up Sensitivity from value 0 to 10 for each channel. The lower value you set lower the sensitivity it will be
Motion Area Setup	Enter to setup motion detection area
Apply to All	Set all the channels to the same setting.

5.3.1.1 Motion Area Setup

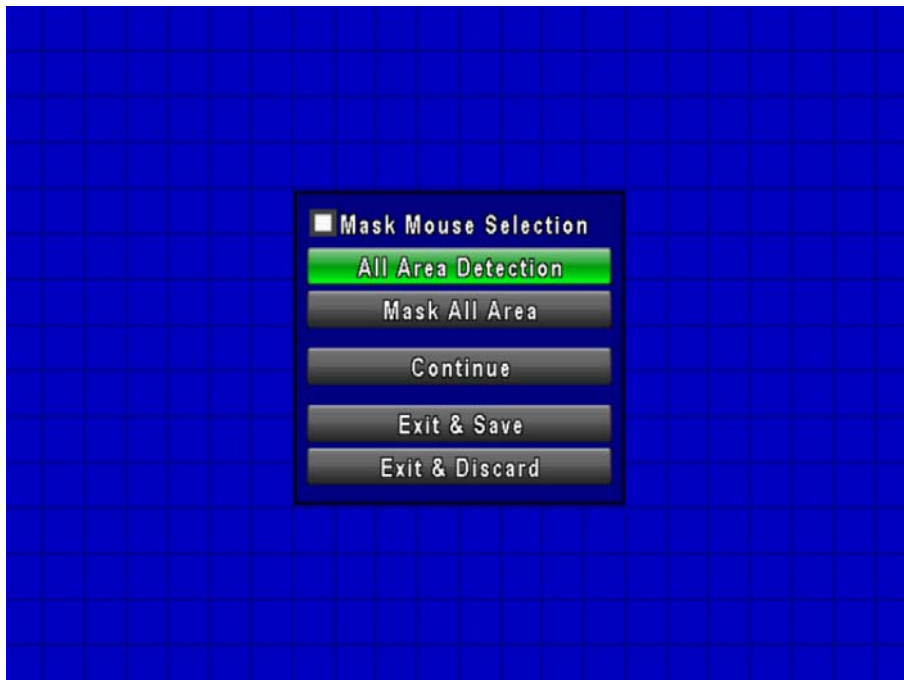

There are partitions in motion detection area (22x15 blocks). Under initializing status, motion detection area is in the entire screen. Red colored area is undetected; yet the detected area is transparent.


Item	Description
Mask Mouse Selection	Select to mask the mouse selected area.
All Area Detection	Select all the images as motion detection area.
Mask All Area	Cancel all motion detection images on the screen.
Continue	Continue setup.
Exit & Save	Save setup and exit setup page.
Exit & Discard	Cancel setup and exit setup page.

5.3.2 Sensor Setup



Item	Description
Alarm Duration(Seconds)	Alarm duration time (1~60 seconds).
Sensor Popup	Check the box to Enable/Disable popup screen function for all channels. When Sensor is detected in LIVE mode, the detected channel image will pop up in full screen display.
Sensor Popup	Check the box to Enable/Disable popup screen function for all channels. When Sensor is detected in LIVE mode, the detected channel image will pop up in full screen display.
Sensor Polarity	Click or press ▼ to select between HIGH/ LOW voltage for triggering sensor detection or OFF to turn off polarity for each channel Low Polarity : Sensor has not been triggered. When connected, sensor will be turned on. High Polarity : Sensor has been triggered. When connected, sensor status will be turned off. Off : Sensor is deactivated, and will not be turned on/off.
All off	Set all sensors polarity to off.
All Low	Set all sensors polarity to low level.
All High	Set all sensors polarity to high level.

5.4 Schedule Setup

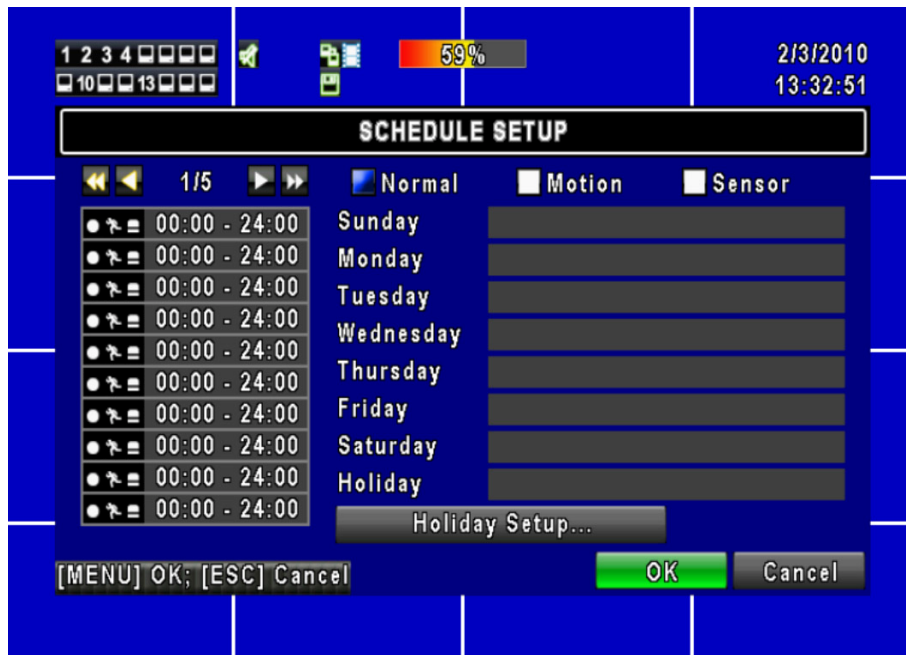

Apart from manual recording, you can also setup the recording time by weeks and schedule recordings include: normal, motion detection, and sensor detection.

Item	Description
Page	Click or press ▼ to select Page. Each page provides 10 schedules for setup. 5 pages in total.
Holiday Setup	Enter to setup holiday, maximum up to 50 days.
View Event Setup	View Normal/ Motion / Sensor Setup.


5.4.1 Schedule Record Setup



Click on the time icon on the left side. The setup menu will be displayed. You can have detail setup by dates, time and event.

Item	Description
Enable Schedule Record	Enables schedule recording according to the time schedule (shown above).
Enable Schedule Motion Detect	Enables schedule motion detection recording according to the time schedule (shown above).
Enable Schedule Sensor Trigger	Enables schedule sensor trigger recording according to the time schedule (shown above).

5.4.2 Holiday Setup

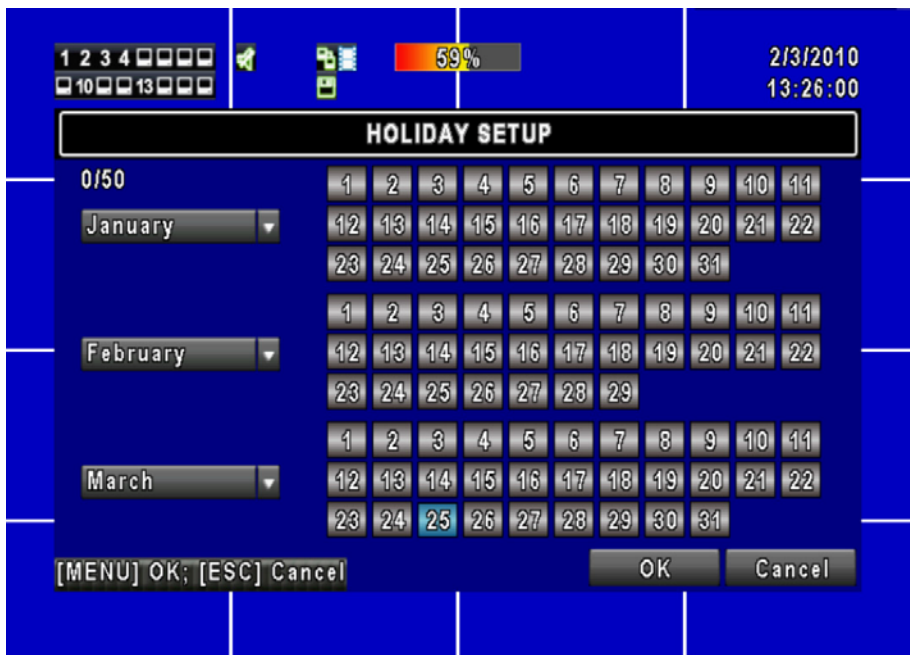

Since holidays are different between countries and regions, you can setup the holiday of your location accordingly (Maximum Setup: 50).

5.5 Camera Setup



Item	Description
Mask	Check the box to Enable/ Disable mask function for LIVE mode
Sharpness	Drag the white bar or press ◀▶ to adjust Sharpness of your camera from value 0 to 15. The default value is 1.
Brightness	Drag the white bar or press ◀▶ to adjust Brightness of your camera from value 0 to 255. The default value is 128.
Contrast	Drag the white bar or press ◀▶ to adjust Contrast of your camera from value 0 to 255. The default value is 0.
Saturation	Drag the white bar or press ◀▶ to adjust Saturation of your camera from value 0 to 255. The default value is 128.
Hue	Drag the white bar or press ◀▶ to adjust Hue of your camera from value 0 to 255. The default value is 150. (This function is ineffective in PAL system).
Name	Set up name of each channel.
Volume	Select to adjust audio volume under LIVE mode and recording mode.

NOTE!
Mask function can not turn the network live image function off. Please use the Playback Mask under master account to turn it off.

5.6 Account Setup



The Account Setup menu is used to provide role-based permission independently for each user (maximum of 4 users) to access the DVR over network. The default admin account is [admin] and password is “123456”.


Item	Description
No.	Check to activate the user's account.
User Name	Edit the user name.
Password	Enter to set up password for each user.
Permissions	Enter to setup Permissions for each user.
Change Admin Password	Enter to change administrator's password.

5.6.1 Permission Setup



The Account Setup is set to provide individual user (maximum of 4 users) role-based permissions, including access to Setup menu, Network operation, and PTZ function, Playback, Utility, Backup and Mask on specific channels while playing back.

5.7 Network Setup

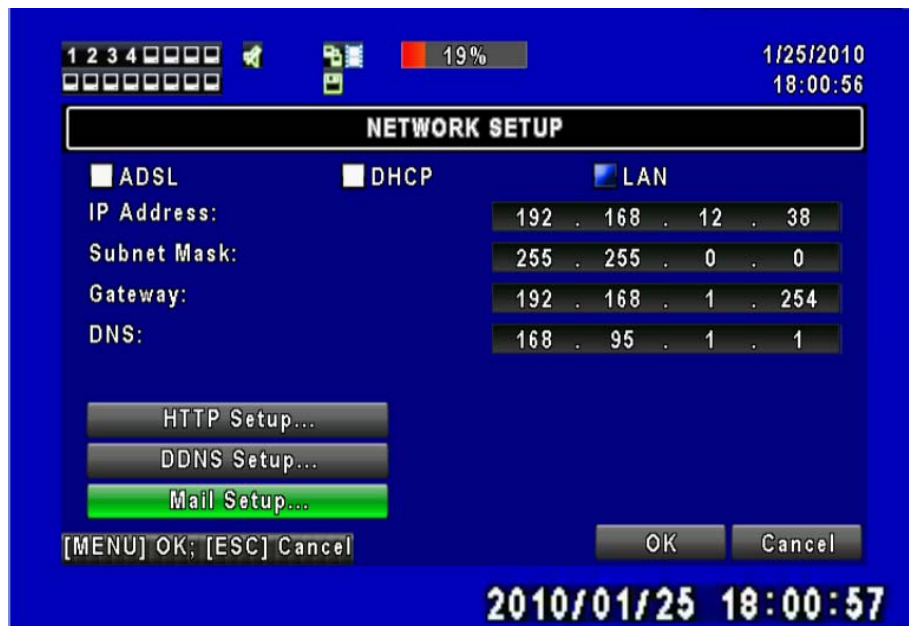


Item	Description
Connect type	Setup mode for network connection: DHCP \ LAN \ ADSL .
HTTP Setup	Enter to set up HTTP for remote access into DVR.
DDNS Setup	Enter to Enable/ Disable DDNS function and set up.
Mail Setup	Enter to Enable/ Disable Email notification and setup.

5.7.1 Networking Setup


The DVR supports DHCP, LAN and ADSL access for network connection.

5.7.1.1 DHCP

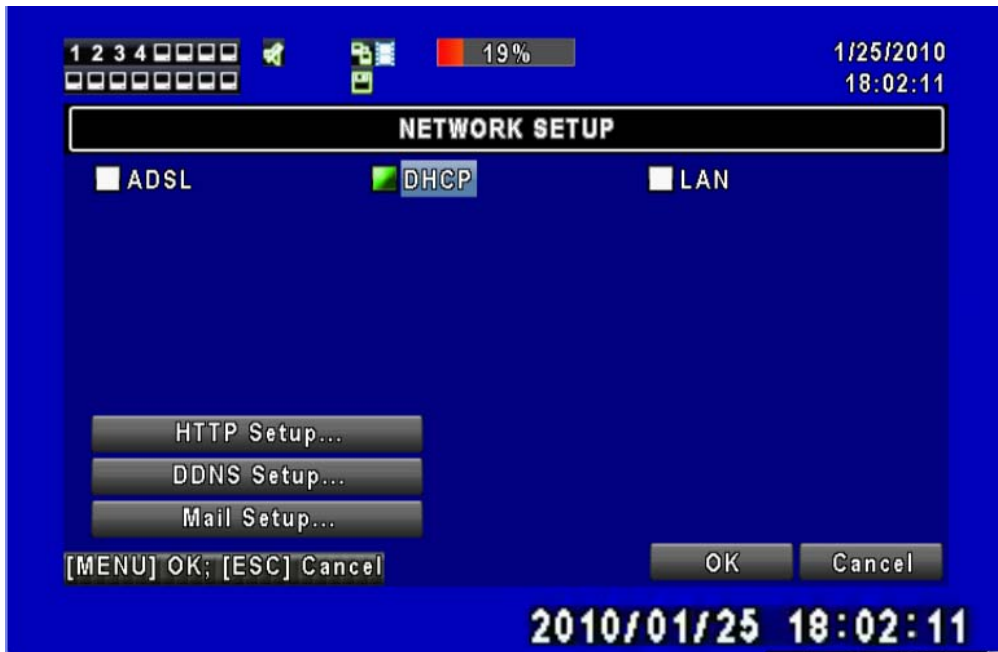

If the DHCP option is used for DVR network connection, an IP address is assigned by the DHCP server automatically.

5.7.1.2 LAN

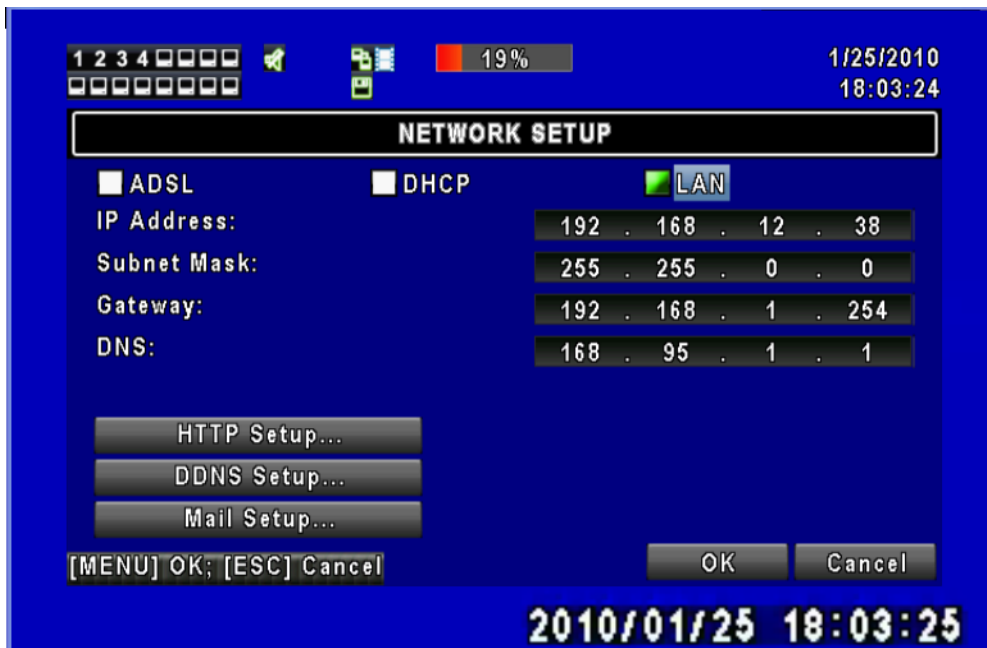


Select LAN for network connection, the following information is required.

Item	Description
IP Address	Enter IP address provided by ISP
Subnet Mask	Enter IP address of Subnet Mask provided by ISP
Gateway	Enter IP address of Gate way provided by ISP
DNS	Enter DNS address provided by ISP. (Note: The correct DNS address must be entered for DDNS function).

5.7.1.3 ADSL

Select ADSL for network connection, the following information is required.

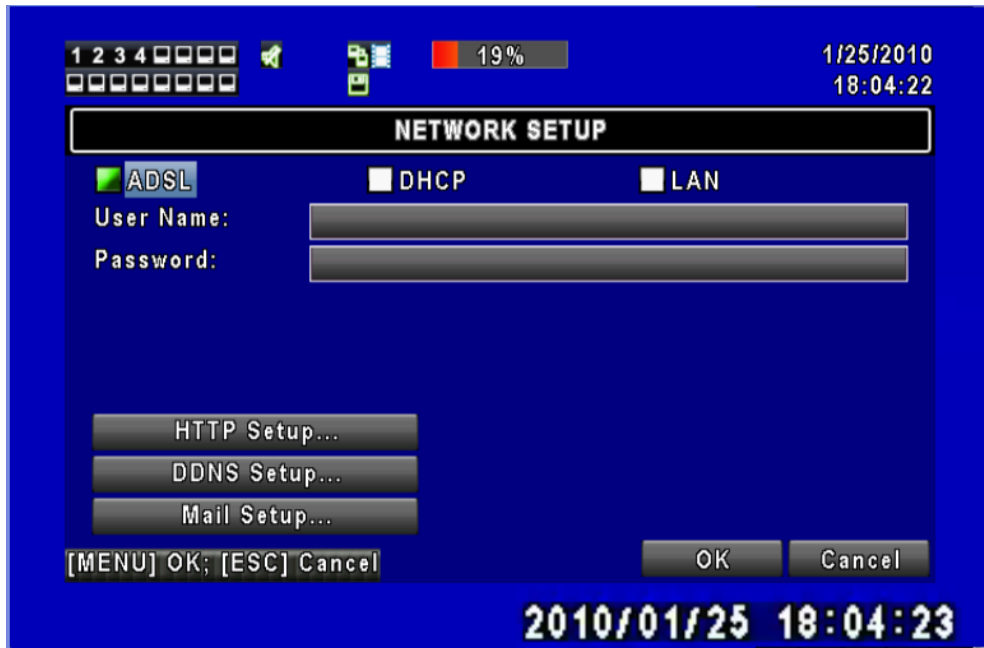


Item	Description
User Name	Enter user name provided by ISP
Password	Enter password provided by ISP

5.7.2 HTTP Setup




Item	Description
Enable HTTP Server	Check to enable HTTP server. Users can remotely access into the DVR over the network if the HTTP function is activated.
Port	Enter a valid port value from 1 up to 65535. The default value is 80.
Quality and Frame Rate Setup for Network Transmission	
No.	Check to activate the transmission of each camera.
Quality	Choose from Below Basic / Basic/ Normal/ High/ Highest.
FPS	Choose recording frame rate (1~30FPS).
Auto	The maximum recording frames available by the average distribution of each channel (totally 60FPS).
<p>This video streaming is used for network transmission; setting is LQ (low quality). Under a low bandwidth capacity, this stream can send out small picture and keep a good video quality and smooth display rate. If the bandwidth is large enough, it can be adjusted to HQ (high quality). Thus, the network streaming will be switched to the condition which this DVR is recording. Therefore, a larger video image can be sent to remote site.</p>	

5.7.3 DDNS Setup

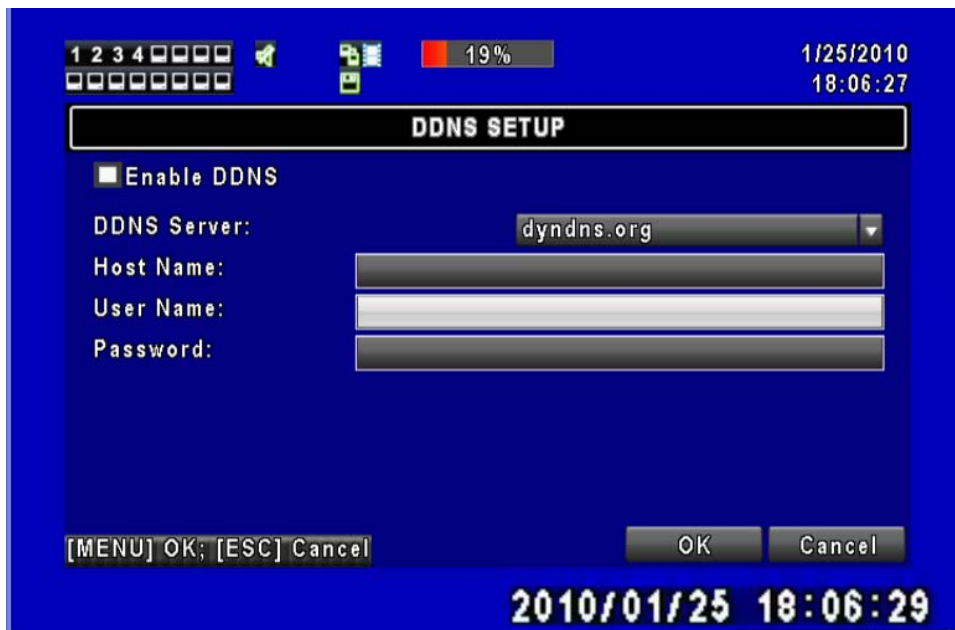

Item	Description
Enable DDNS	Check/ Uncheck to Enable/ Disable DDNS function.
DDNS Server	Enter the registered SMTP Server: DYNDNS.ORG, NO-IP.ORG, CUSTOM.COM
Host Server	Enter the registered SMTP Server.
User Name	Enter user name.
Password	Enter password.

5.7.4 Mail Setup

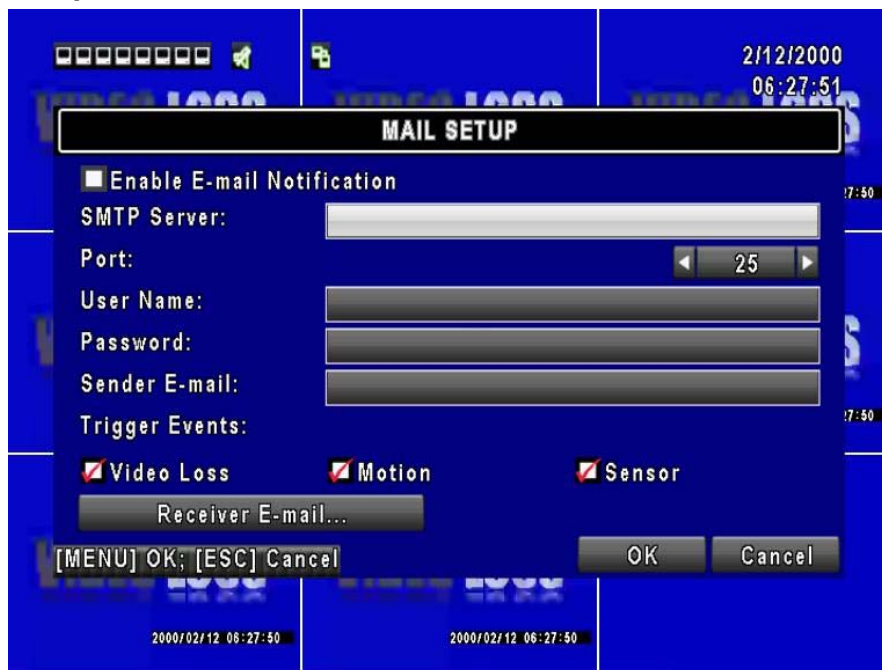

E-mail can be used as a form of notification when an event occurs (VLOSS, MOTION, and SENSOR).

Item	Description
Enable E-mail Notification	Check the box to enable/disable E-mail Notification function.
SMTP Server	Enter to set up SMTP Server name.
Port	Default is 80. Maximum number of port is 65535.
User Name	Enter to set up User Name.
Password	Enter to set up Password.
Sender E-mail	Enter to set up e-mail address of sender.
Trigger Event	Enter to select events to send out E-mail notifications when below

	circumstances happen: Motion, Sensor and Vloss (Video Loss).
Receiver E-mail	Enter to set up e-mail addresses for up to 10 receivers individually.

5.8 PTZ & RS-485 Setup



The DVR allows users to control PTZ functions of your camera. To enable PTZ function, the 485 cable should be connected to the RS-485 port of DVR.


Item	Description
Enable PTZ	Click the box to Enable/Disable PTZ function for each channel.
Protocol	Set up the protocol of PTZ cam.
PTZ ID	Click or press ◀ ▶ to set up PTZ ID. The valid ID value is from 1 to 64.
Baud Rate	Select Baud Rate for PTZ from 2400 、 4800 、 9600 、 19200
RS-485 ID	Reserved.
RS-485 Baud Rate	
Keyboard	

5.9 System Setup



Item	Description																
DVR Name	The name of DVR will be shown when users login from remote access.																
DVR Location	The location of DVR will be shown when users login from remote access																
Language	Click or press ▼ to select OSD language.																
Remote ID	Setting remote controller ID to match the remote code definition retrospectively to particular DVR.																
Auto Lock	After one minute without any action, the DVR will switch to <i>LIVE</i> mode automatically. Auto lock can function differently according to the setting below. Button automatically Auto Lock: The front panel function keys are ineffective only until using the mouse and please re-enter the password again.																
	<table border="1"> <thead> <tr> <th>Setting</th> <th>Function</th> <th>Auto Logout</th> <th>Key Lock</th> </tr> </thead> <tbody> <tr> <td>Key lock</td> <td></td> <td>○</td> <td>○</td> </tr> <tr> <td>Key unlock</td> <td></td> <td>○</td> <td>×</td> </tr> <tr> <td>Disable</td> <td></td> <td>×</td> <td>×</td> </tr> </tbody> </table>	Setting	Function	Auto Logout	Key Lock	Key lock		○	○	Key unlock		○	×	Disable		×	×
	Setting	Function	Auto Logout	Key Lock													
	Key lock		○	○													
Key unlock		○	×														
Disable		×	×														
Display Setup	Enter to set up Display																
Date/Time Setup	Enter to set up Date/Time																
Buzzer & Relay Setup	Enter to set up Buzzer & Relay																
Spot Setup	Enter to set up Spot																


5.9.1 Display Setup

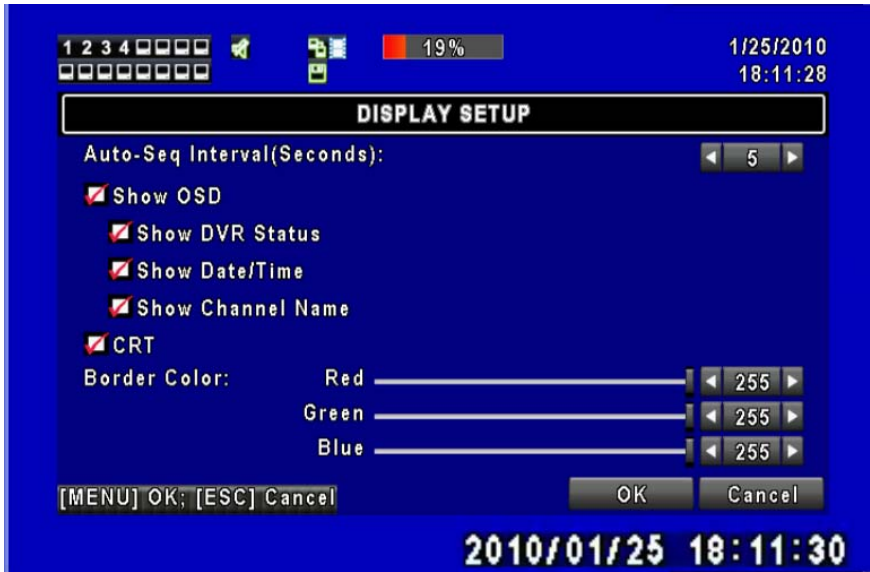

Item	Description
Auto-Seq Interval (Seconds)	Click or press ◀ ▶ to set up duration time in seconds for the interval between channels under Auto-Seq mode (1~999 seconds).
Show OSD	Turn On / Off OSD display
Show DVR Status	Turn On / Off DVR illustration and record status display
Show Date/Time	Turn On / Off date and time display
Show Channel Name	Turn On / Off channel name display
Video System	Auto / NTSC / PAL video system setting (available to DVR-872)
CRT	Make the display more suitable for CRT monitor. (available to DVR-1672)
Border Color	Set up the color of border in LIVE , PLAYBACK mode. (black, dark grey, light grey, and white)

※Time tolerance of **Auto-Seq Interval** is ± 2 seconds.


5.9.2 Date/ Time Setup

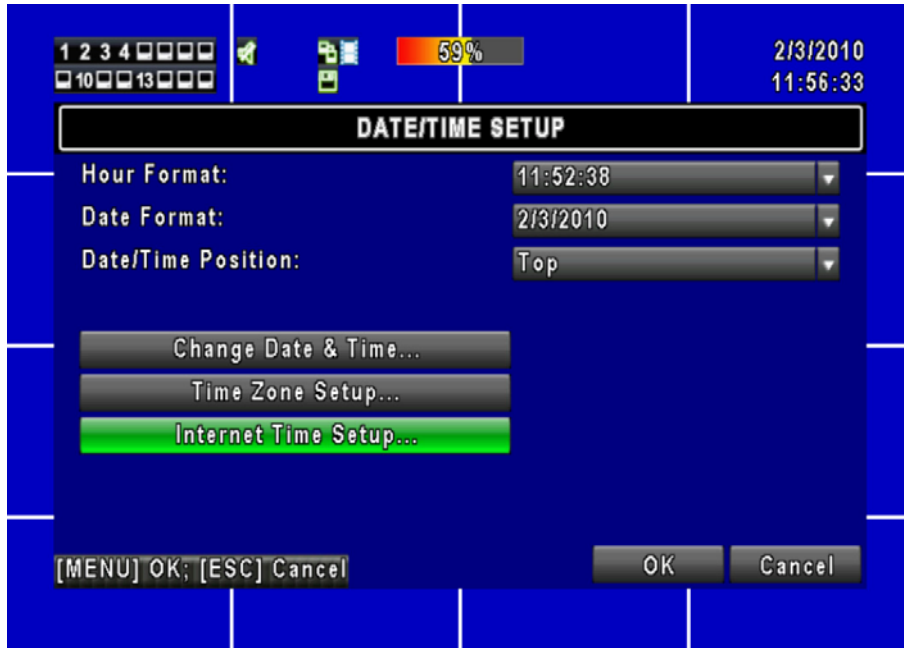


Item	Description
Hour Format	12HOURS/ 24HOURS
Date Format	MM-DD-YY/DD-MM-YY/YY-MM-DD
Date/Time Position	Choose the position of Time and Date display
Change Date & Time	Setup time and date of DVR
Time Zone Setup	Set up GMT and Daylight Saving Time.
Internet Time Setup	Setup automatic synchronization with internet server

5.9.2.1 Change Date & Time

Users are allowed to setup date and time of the DVR.

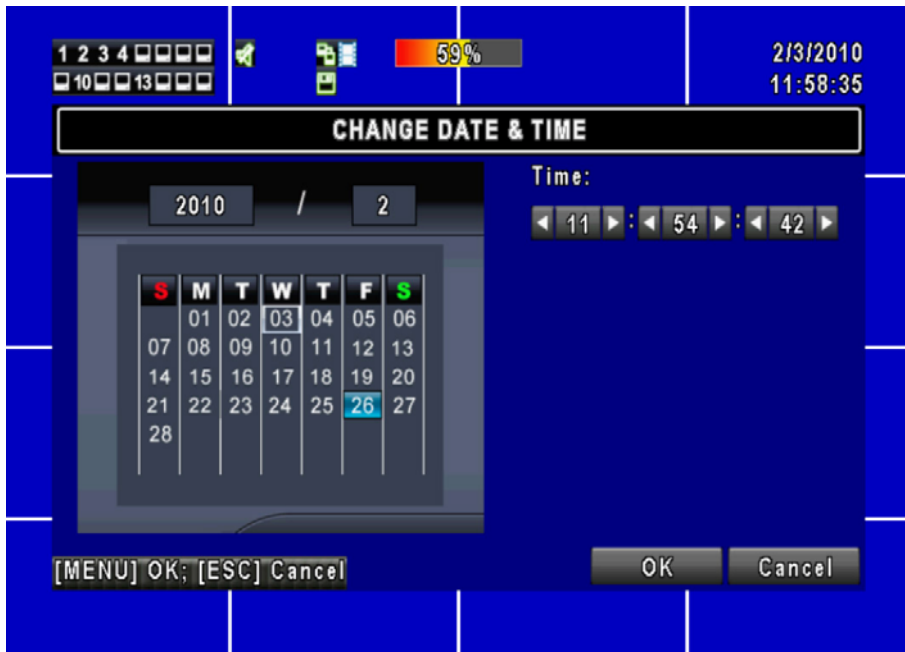


5.9.2.2 Time Zone Setup

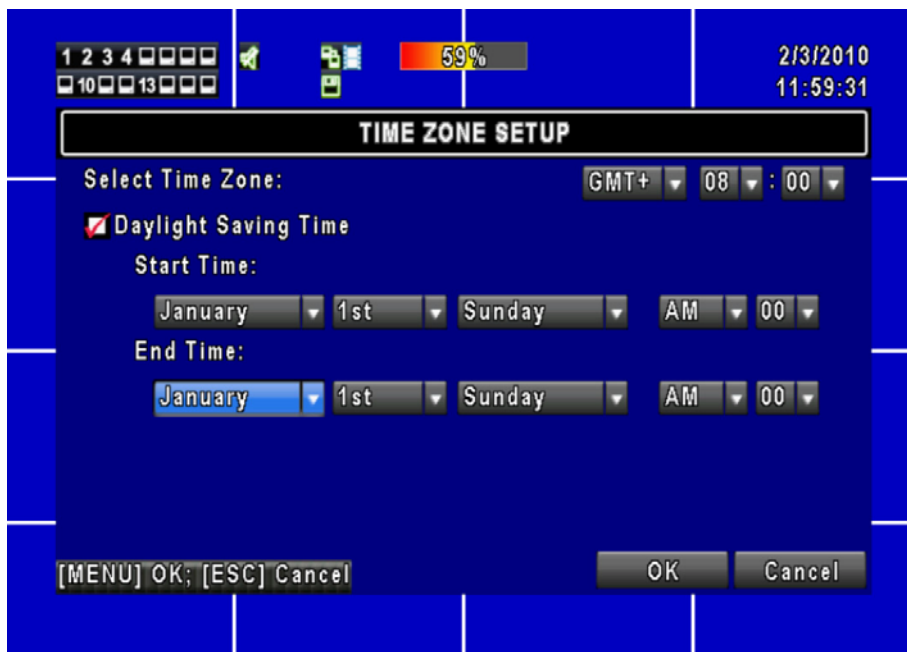

In time zone setup, users can change the time zone and activate Daylight Saving Time function according to your DVR location.

Item	Description
Select Time Zone	Enter to modify GMT from GMT- 13 to GMT+ 13
Daylight Saving Time	Turn On/ Off Daylight Saving Time

5.9.2.3 Internet Time Setup

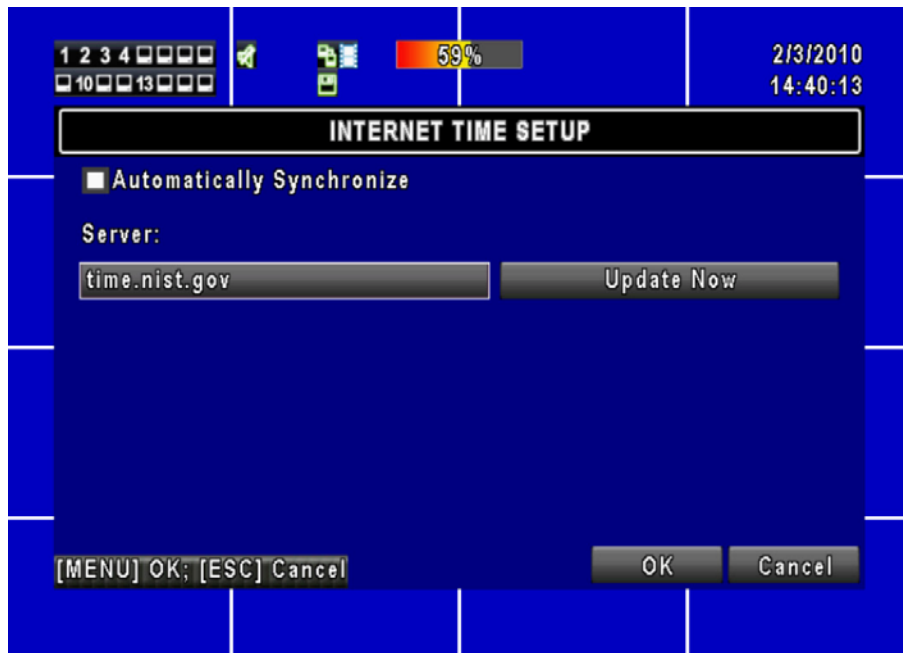

Synchronize your DVR time with internet time server.

Item	Description
Automatic Synchronization	Check to enable DVR automatic synchronization function. Select this option to enable the function, DVR will automatically synchronize the time upon rebooting or by every 24 hours after booting.
Update Now	Date and Time show on DVR will immediately correspond with those in internet server.

5.9.3 Device Setup



Item	Description
Mouse Speed	Adjust the mouse moving speed
Buzzer & Relay Setup	
Key Tone	Enable/ Disable keystrokes.
Alarm Buzzer	Enable/ Disable buzzer operation when the alarm is triggered for HDD error, sensor, motion and vloss (Video Loss).
Alarm Relay	Enable/ Disable the signal to be sent to the RELAY OUT blocks when the alarm is triggered for HDD error, sensor, motion and vloss.

5.9.4 Spot Setup



The DVR has two modes of video output; one is the main video output, the other is spot video output. SPOT setup is for controlling orders of channels that the system cycles through in SPOT mode. User can monitor every channel in the SPOT mode.

Item	Description
Auto-Seq. Interval (Seconds)	The duration interval time between channels is in seconds under SPOT mode (1~999 seconds).
Enable Spot	When setting "Enable Spot", the "MAIN/SPOT" BNC terminal will be confined/restricted to Spot output port only.
Skip Video Loss Channel	Whether to skip channels without video signal.
Channels	Select which channels will be displayed in the sequence.


5.10 Utility Setup



Item	Description
HDD Initialization	Select to enter hard disk initialization menu. Please stop recording before entering this menu. Enter the menu, system will show all the data (model/ volume) of HDD that is installed in the DVR. Check the HDD you'd like to initialize, and then press "Start". HDD initialization is successful when the status shows "Succeed".
USB Initialization	Clean up all data on USB. Enter USB initialization and press "YES" to clean up all data on your USB. The initialization is done when it shows "Succeed".
System Recovery	Restore system default values.
Reset System Events	Reset all the recording events in the DVR.
Copy Setup to USB	Copy configuration to a USB device. There will be a file named "sdvr.config" on your USB.
Download Setup from USB	Download configuration from a USB device into DVR.
Upgrade	Upgrade DVR through USB. Please stop recording and backup setup configuration before upgrading. System will reboot automatically when the upgrade is completed.

NOTE!! DO NOT TURN OFF POWER OR UNPLUG USB DEVICE DURING THE UPGRADE as it may cause incomplete firmware upgrade and damage to the DVR.

5.11 Diagnostic

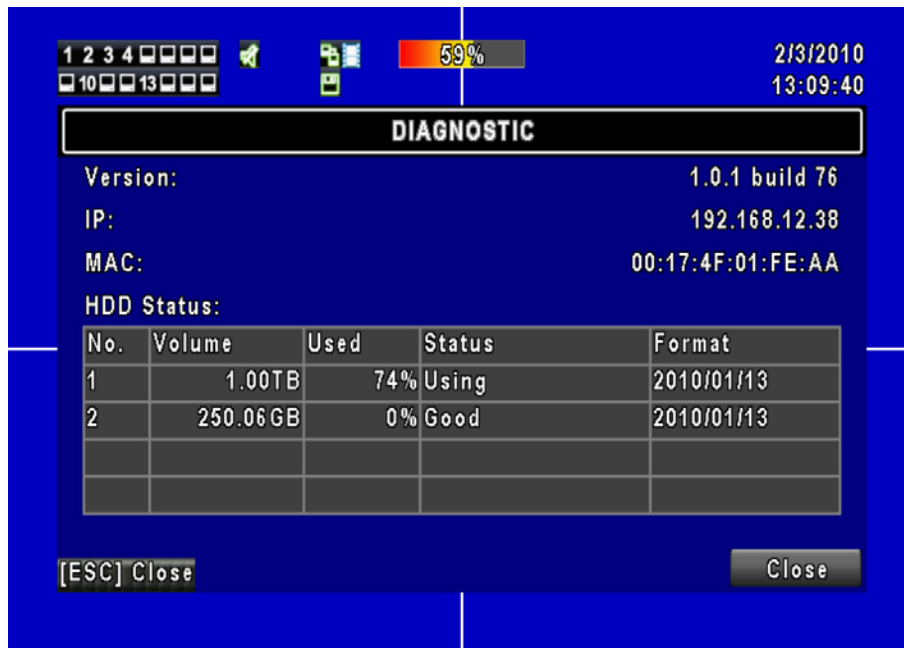

Item	Description
Version	The current firmware version of DVR
IP Address	The connected IP address of DVR. If disconnected from network, the screen will display "NETWORK DISCONNECT".
MAC Address	MAC Address of DVR
HDD Volume	The capacity of HDD
HDD Used Rate	Percentage of space used on HDD.
HDD Status	Shows HDD status. USING means the HDD is now used for recording. GOOD/ BAD means the HDD has a known/ unknown format for the DVR. (Note: Please initialize your newly-installed HDD before using it, otherwise it can be recognized as BAD by the DVR).
Format Time	The latest format time of HDD

Chapter 6 SEARCH & BACKUP

6.1 Search Setup




Item	Description
Event Search	Press to enter event search menu.
Time Search	Press to enter time search menu.

6.1.1 Event Search



The DVR automatically records events with type, time and channel information included.

If there is recording data for an event, a yellow signal  icon will be shown on the left side of time information. Rest your cursor under the line and press “enter”, or left click your mouse to playback the recording data.

Item	Description
Criteria	Setup conditions of the event search function
Page	Convert pages of events
Date/Time	Date/ time when the event occurred.
Event Type	Event type, defined as following: Motion Motion Detected Sensor Sensor Detected Video Loss Video Loss Remote Login User log-in over the network Remote Logout User log-out over the network Power On System Rebooting HDD Full HDD is FULL HDD Error HDD is error
Channel	The channel where the event occurred.

6.1.1.1 Criteria Setup for Event Search



The amount of events can be numerous. Therefore, you can facilitate event sorting by

setting up “criteria”. Setup “start time” and “end time” for each event search, then the search result will be limited to this specific period of time. Only events and channels that are checked will be sorted in event search as well.

6.1.2 Time Search




TIME SEARCH, you can search for a specific time of the recording data to playback. Dates with recording are shown by data marked with a red square []. System will start playing back according to the date that you’ve selected. Calendar will be shown by using mouse to click on “year” and “month”.



Click “date” to display recording time of that specific date with time bar. You can change time (hour/ minute/ second) or click on a specific time of time bar by mouse then press “YES”. DVR will playback the selected recording data.

6.2 Backup Setup

User can back-up any segment of recorded data in a specified time frame. To do so, connect a USB to the DVR. The format of backup file is *IRF* file and can be played by “DVRremoteDesktop.exe” or “iCMS”.

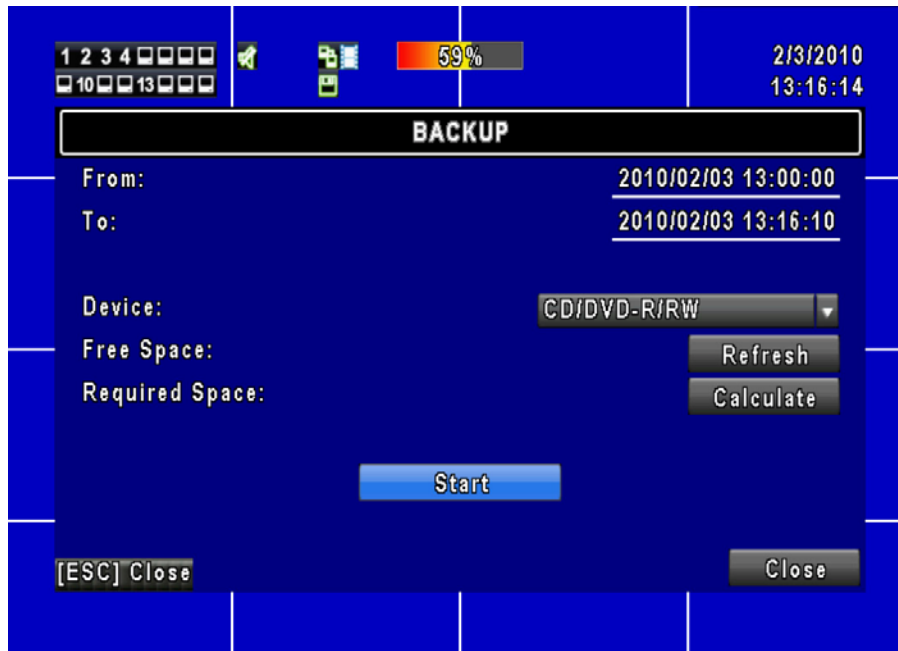

Item	Description
From	Backup file starting time
To	Backup file ending time
Device	Select USB, CD, or DVD-R/RW as the backup device (From remote site, the device will be PC.)
Free Space	The available space in your backup device
Refresh	Recalculate the available space of backup device
Required Space	Calculate the required size of backup file
Calculate	Calculate the size of backup file
Start	Start backup operation. Be sure to calculate the size of backup file BEFORE operating backup.

NOTE!! Do not unplug the USB device or turn off the DVR during the backup process to avoid unrecoverable error. When backup is completed, you need to re-plug in order to insure proper function.

Chapter 7 iCMS Installation and Usage

DVR-462 has provided a simple use and powerful utility called – iCMS. When this utility installed to Windows platform, user can get more functions than on the web browser. When you want to fully control your DVR-462, you may install the iCMS into your PC and refer to instructions below to know and manage those functions in the iCMS.

7.1 iCMS Installation

System Requirement:

- ◆ Intel Pentium 4 processor or equivalent.
- ◆ Microsoft Windows Vista 、 Windows XP 、 Windows 2003 Server.
- ◆ 512MB memory above.
- ◆ 20MB HD space. Recording and image capturing require extra space for storage.


Installation Guide:

Step 1: Install the CD that is packed with the DVR and into your CD-ROM drive.


Step 2: You will see a welcome web page. Please click the iCMS utility hyper-link. If the welcome web page doesn't appear, you can find the program in E:\Utility\Setup.exe. Suppose "E" is your CD-ROM drive.

Step 3: If the PC doesn't install Visual C++ plug-in, you will see this screen below, please select "Install" to install this plug-in.



Step 4: Please click "Next".

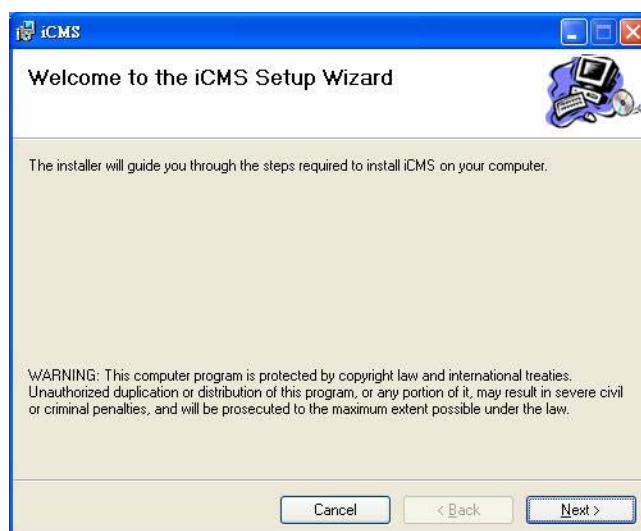


Step 5: Select **“Browse”** to change installation path if needed. To check available space on hard disk, please select **“Disk Cost”** then please select **“Next”** to the next step.

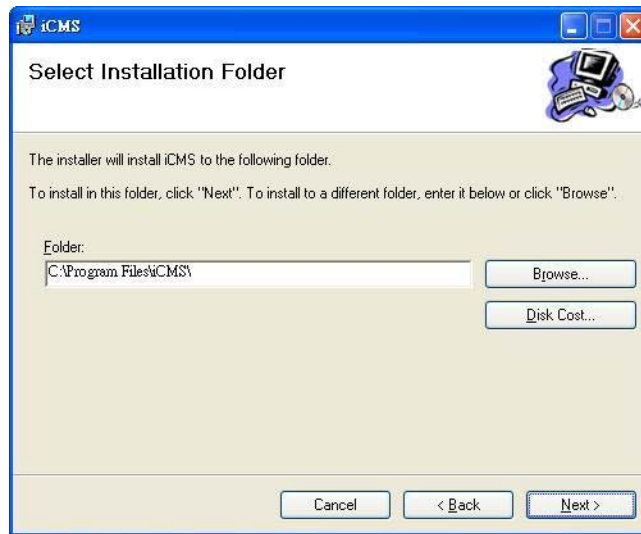

Step 6: **“Confirm Installation”** window shows. Select **‘Next’** then the installation starts.

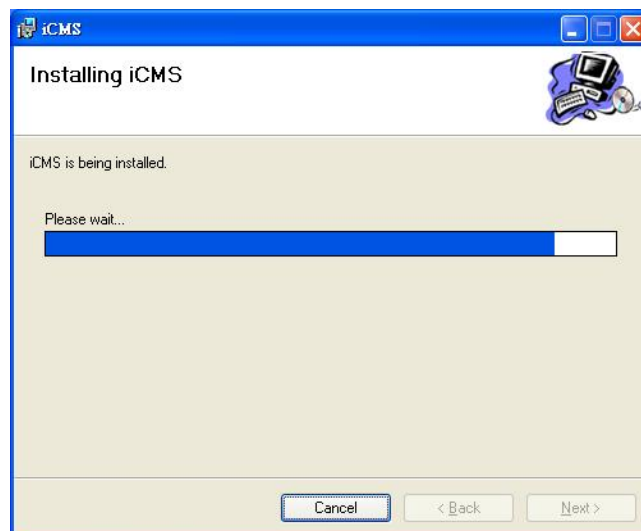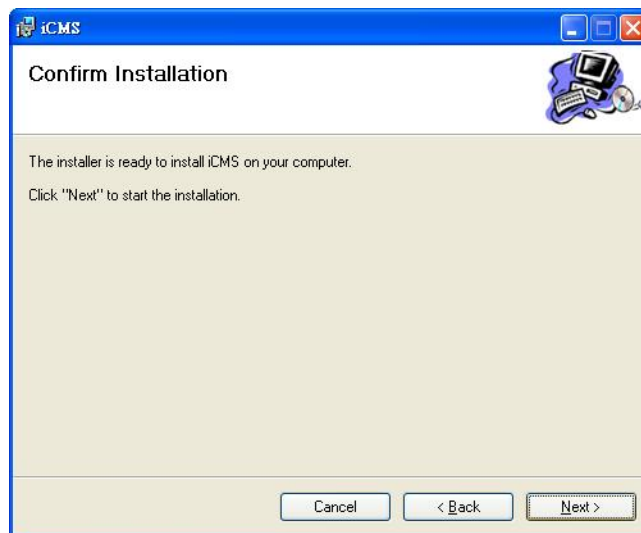


Step 7: Select **'Close'** to finish installation when the **"Installation Complete"** window shows.

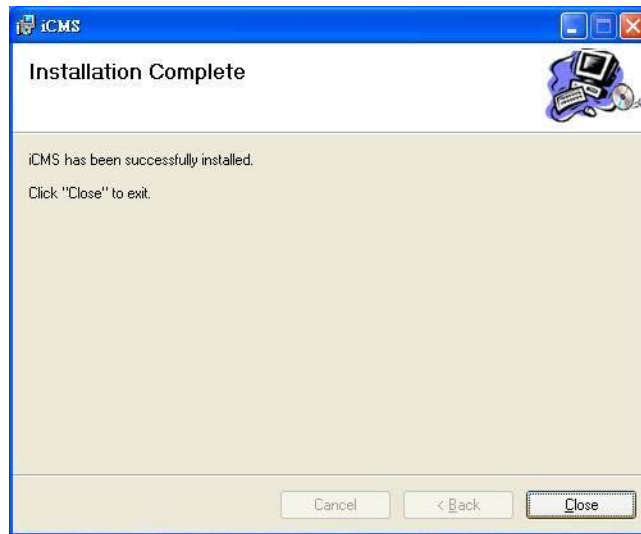


7.2 iCMS Login and Environment

To enter iCMS, the administrator's user name and password are required. The defaults are 'admin' and '123456'.

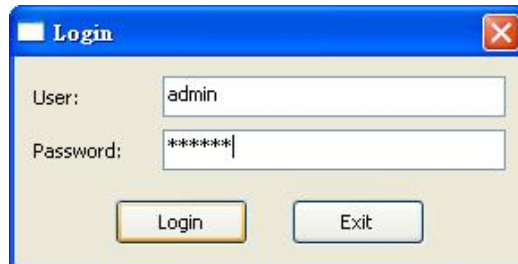

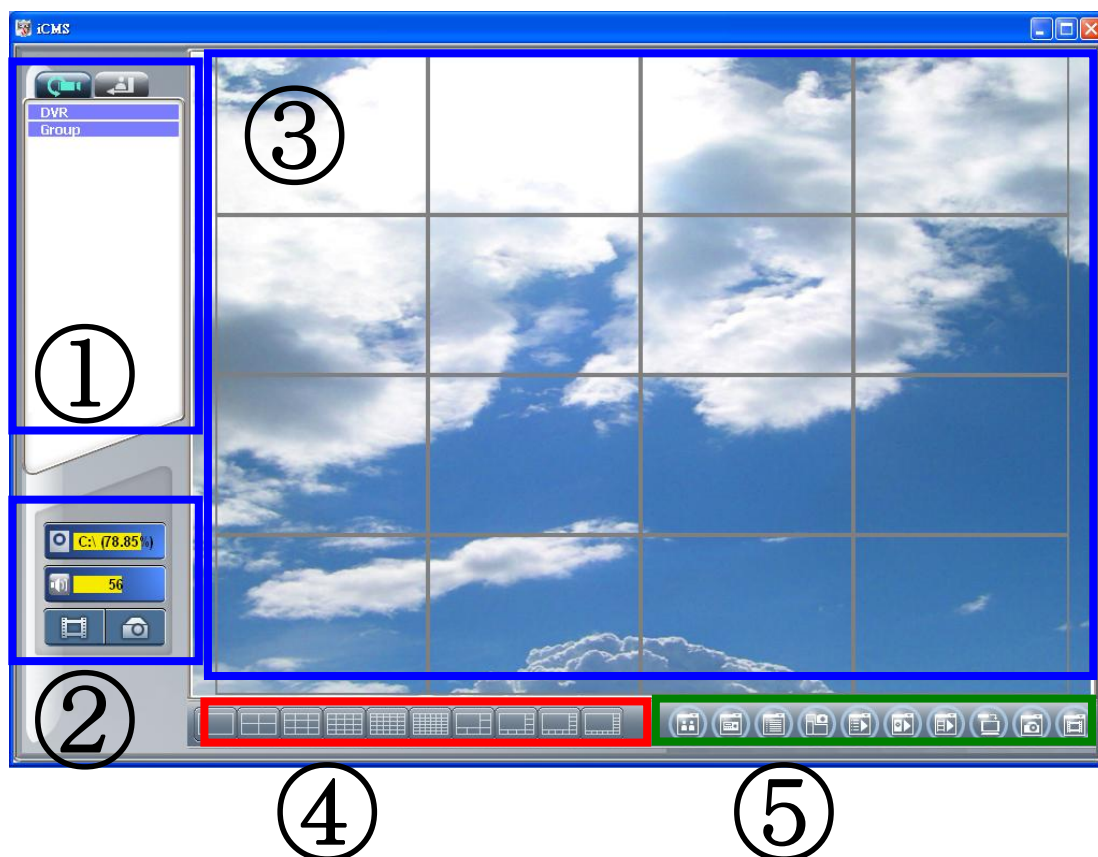

After successful login, the following image is shown on your screen:



<input type="checkbox"/> DVRs, Groups & Events	Information about DVRs, groups and events. See “7.3 Groups & Events” for more details.
<input type="checkbox"/> PC information and control	Information about local PC’s hard disk, volume, recording...etc. See “7.6 Local PC Information and Control” for more details.
<input type="checkbox"/> Main Display	Live image display area. See “7.7 Main Display” for more details.
<input type="checkbox"/> Display Modes	Several choices of display modes supported by iCMS.
<input type="checkbox"/> Operation Bar	A set of 10 operations are provided by iCMS. See “7.11 Operation Bar” for more details.

7.3 Groups & Events

Icon	Description
	View list of logged in DVR/ Group.
	View Logs : DVR event information list.




7.4 View DVR/ Group List

Single left click on 'DVR' or 'Group' will expand/ shrink the entire DVRs and groups list.

On the DVR list, double left click on a connected DVR will show its image in the main display. See "7.13 User Administration" for further information.

On the Group list, double left click on a group will show live image from the channels of the group in the main display. See "7.14 Group Administration" for further information.




Icon	Description
	Video Loss
	Motion
	Sensor



7.5 Event View

This window lists all the events recorded on the DVR. Each DVR has a list of different categories of events. According to Remote in/ Remote out, Video Loss, Motion, Sensor, and Other (Power Reset, Key lock, Key unlock, HD Full) .

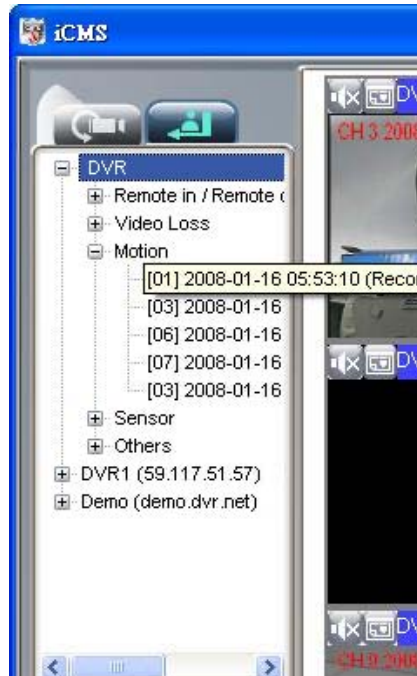


7.6 Local PC Information and Control

Located on the left lower corner of the screen, please see the chart below:

Icon	Function	Description
	HDD info	Shows the ratio of available space / HDD capacity of C:\ drive (where iCMS is installed).
	Volume	PC volume or playback volume control bar.
	Recording	Record live image to local PC storage. To view locally stored data, use "Record" under the operation bar. Also see "7.21Recording data" for detail.
	Snapshot	Take snapshot to save in local PC storage. To view all the snapshots you've taken; please go to "Snapshot" under the operation bar. See "7.20Snapshot data" for detail.



7.7 Main Display

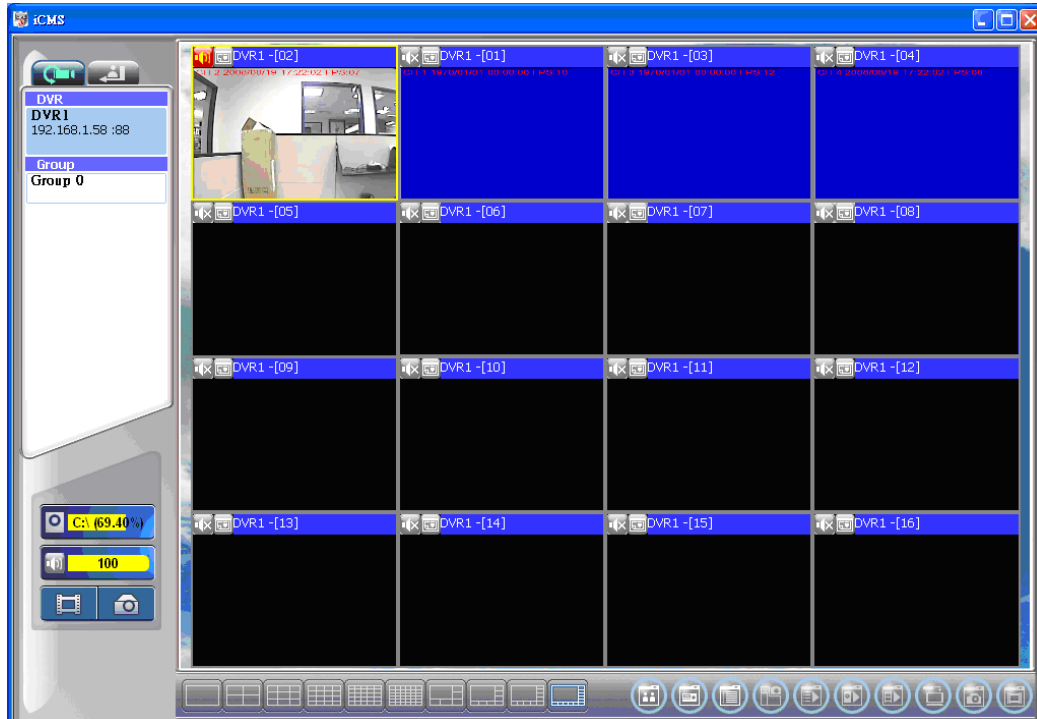The main display area is where the live image of DVR is shown. You can drag to change the location of the screen for each channel and turn On/Off audio signal by clicking the mouse.



7.8 Audio Control


In live mode, you can turn On/ Off the audio signal of Ch1~Ch4 (4CH DVR supports only 1Channel audio recording):

-  Audio signal is On
-  Audio signal is Off

Turn On/Off by clicking on the graphical icon, please note that each time only one audio signal channel is allow turned on.



7.9 eMaps







 

 
 
In LIVE view, press 「」 to show eMap window. If a channel has e-Map settings added, a drop-down menu will appear showing the related e-Map names added in this channel. The channel that has not been added with any e-Map settings will have "No eMaps" shown on the screen.

For more information about e-Map setup, please refer to "7.15 eMap Setup".



7.10 PTZ Control

Right mouse click on the screen, PTZ control icon will appear, as shown below:

Icon	Description
8 Directional Button	PTZ Movement
	ZOOM+ : Zoom In
	ZOOM- : Zoom Out
	Preserved Function
	FOCUS+ : Focus Near
	FOCUS- : Focus Far
	Preserved Function
Set PTZ Preset	16 PTZ Preset Points
Goto PTZ Preset	16 PTZ Goto Preset Points
	Activate Auto Tour
PTZ Sensitivity	PTZ Sensitivity Setup
	Set the start and the end point of Cruise function
	Activate Cruise Mode
	Preserved Function
AUX 1~8(Customize)	AUTO+1 - AUTO+8



7.11 Operation Bar





10 Operations listed as below:


Icon	Description
	User Administration. Please see 「7.12 User administration」
	DVR Administration. Please see 「7.13 DVR Administration」
	Group Administration. Please see 「7.14 Group Administration」
	eMap Administration. Please see 「7.15 eMap Setup」
	Remote Playback. Please see 「7.16 Remote-Site Playback」
	HDD Playback. Please see 「7.17 HDD Playback」
	File Playback. Please see 「7.18 File Playback」
	Event Playback. Please see 「7.19 Event Playback」
	Snapshot Data. Please see 「7.20 Snapshot Data」
	Recording Data. Please see 「7.21 Recording Data」

7.12 User administration

Before the iCMS can be used on a PC, user accounts should be added with proper authority. Each user should be assigned with a password and optionally a description. If a user does not have certain authority assigned, he/ she will not be able to operate the corresponding function on the Operation Bar. The default is none of the authority assigned. The administrator should assign proper authority to each user. These user accounts can be deleted or edited later on.

Select “**OK**” to save the setup.


Icon	Description
	Add a user account. The default authority has none permission.
	Delete a user account.

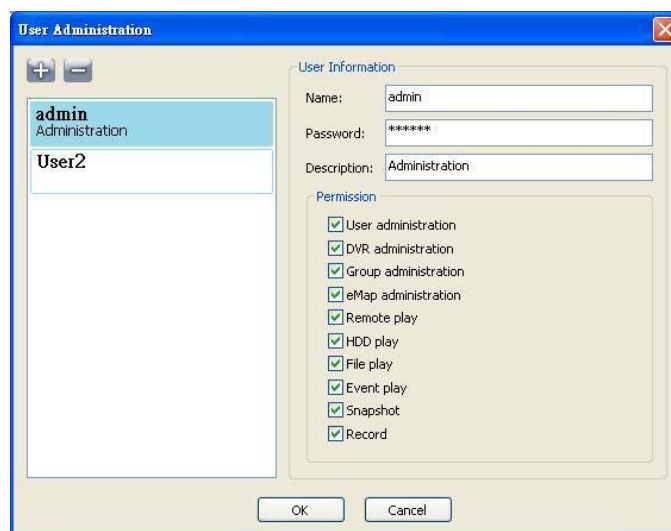

The image shows a screenshot of the 'User Administration' dialog box. It features a list of users on the left, with 'admin' and 'User2' visible. The 'admin' user is selected. On the right, there are input fields for 'Name' (admin), 'Password' (masked with asterisks), and 'Description' (Administration). Below these fields is a 'Permission' section with a list of checkboxes, all of which are checked: User administration, DVR administration, Group administration, eMap administration, Remote play, HDD play, File play, Event play, Snapshot, and Record. At the bottom of the dialog are 'OK' and 'Cancel' buttons.

7.13 DVR Connection Information Setup

You can add or delete the DVR connection, information and description editing, also enter names of the channels (Please select Generic DVR for DVR Model). After setup, please click "OK" to store setup.

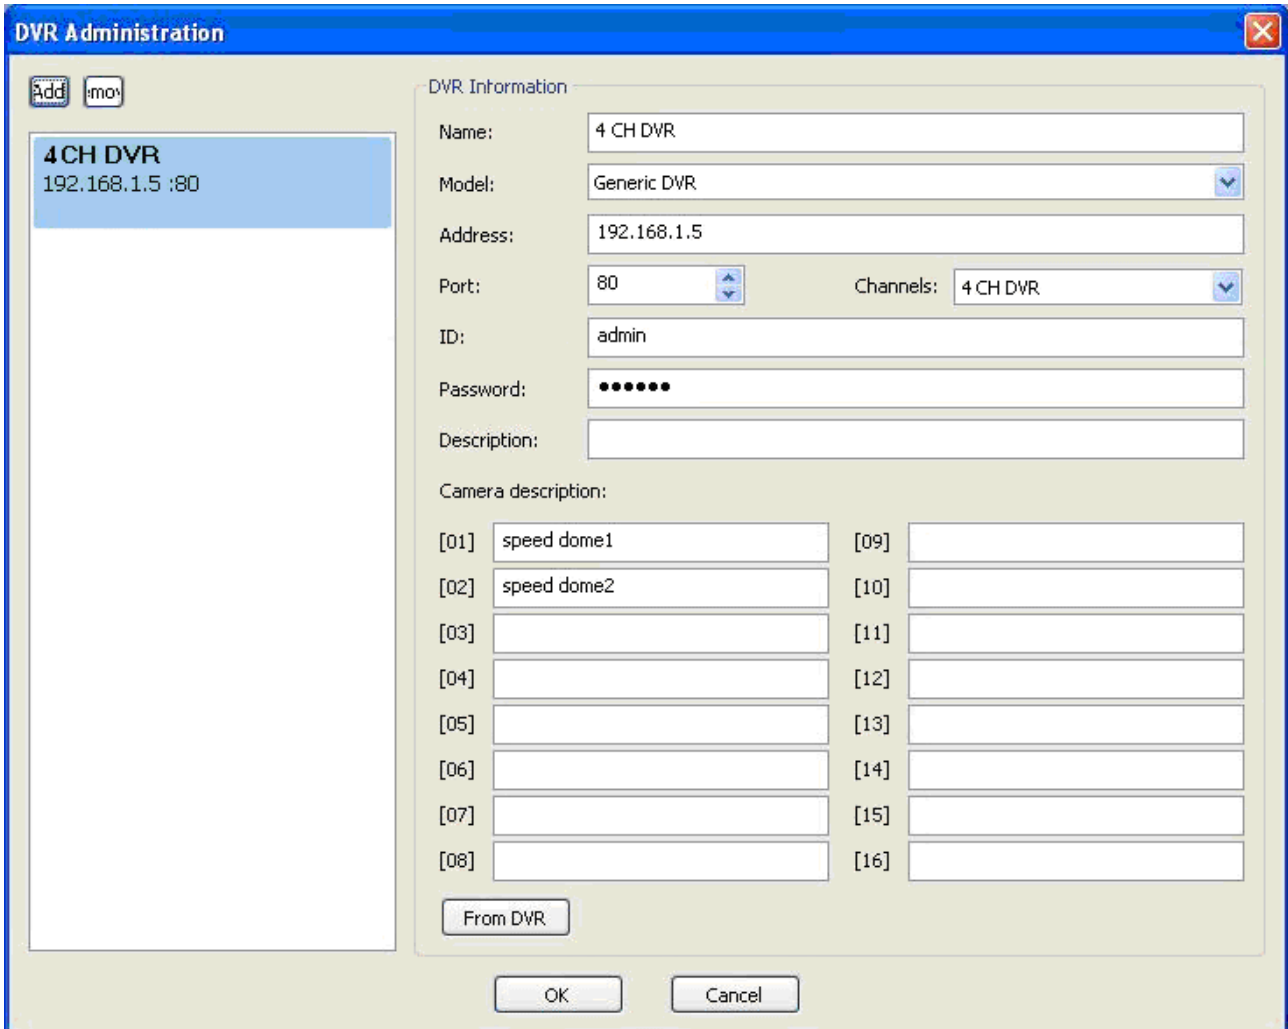

The screenshot shows the 'DVR Administration' window. On the left, there is a list of DVRs with one entry selected: '4 CH DVR' at IP '192.168.1.5 :80'. On the right, the 'DVR Information' section contains the following fields:

- Name: 4 CH DVR
- Model: Generic DVR (dropdown menu)
- Address: 192.168.1.5
- Port: 80 (dropdown menu)
- Channels: 4 CH DVR (dropdown menu)
- ID: admin
- Password: [masked with dots]
- Description: [empty text box]

Below these fields is a 'Camera description' section with a grid of 16 input boxes, numbered [01] to [16]. The first two boxes contain 'speed dome1' and 'speed dome2' respectively. At the bottom of the window are 'From DVR', 'OK', and 'Cancel' buttons.

7.14 Group Administration


A 'Group' means a set of video channels from one or many DVRs, which means, user can organize channels from different DVRs to be set in a group. This function allows you to monitor and manage channels from multiple DVRs easily and flexibly.

Steps:

Step 1: Add a new group and set its name and description.

Step 2: Click 'Select' which will bring up a new window.

Step 3: Check the specific channels that you'd like them to be included in the group. To include all channels of a DVR, just uses icon to check the DVR.

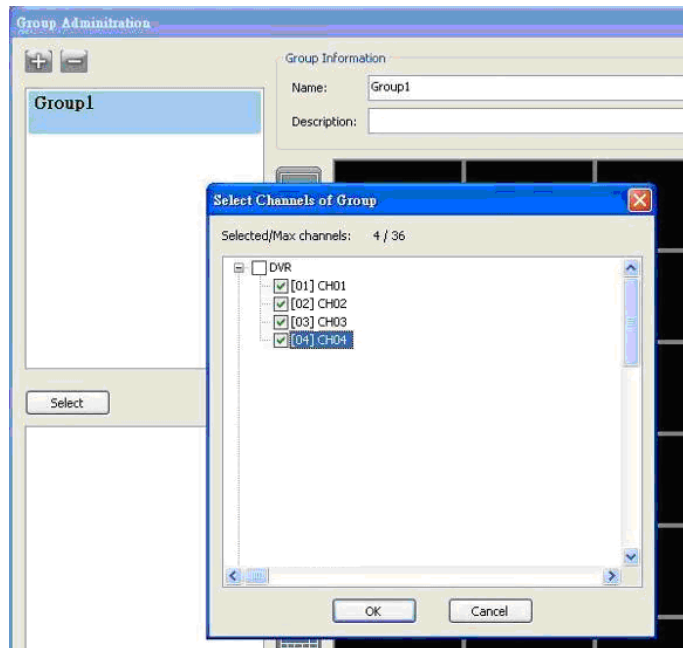


Step 4: Click “OK” to return to the previous window.

Step 5: Select a display mode, system will auto select.

Step 6: Drag a channel from the lower left panel into the main display to a preferred location. Or, change the channel location in the main display by mouse dragging.

Step 7: You can ‘Select’ again to add other channels, but the un-saved channel locations will be lost.


Step 8: Click “OK” to save the setup.

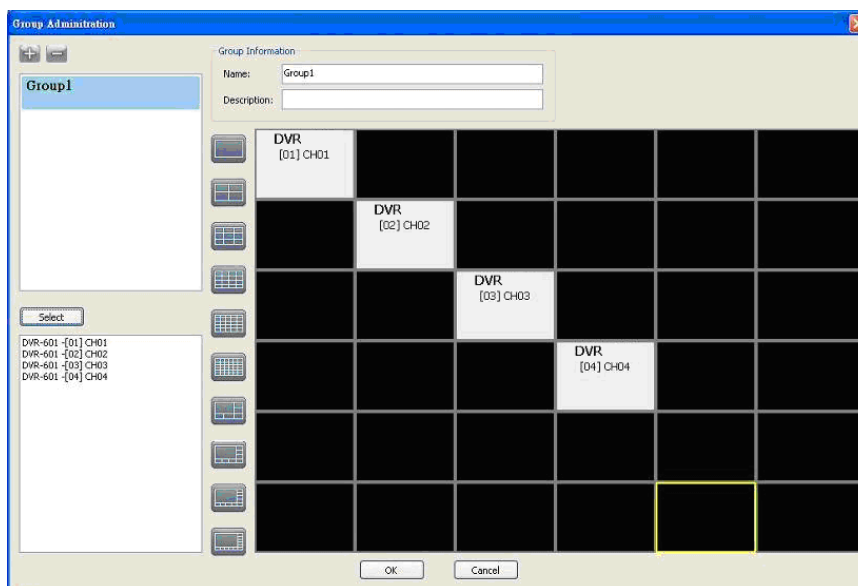


7.15 eMap Setup

If the DVR has the sub-region, or would like to have a picture on the background to monitor the channel, you can use the eMap.



Steps:



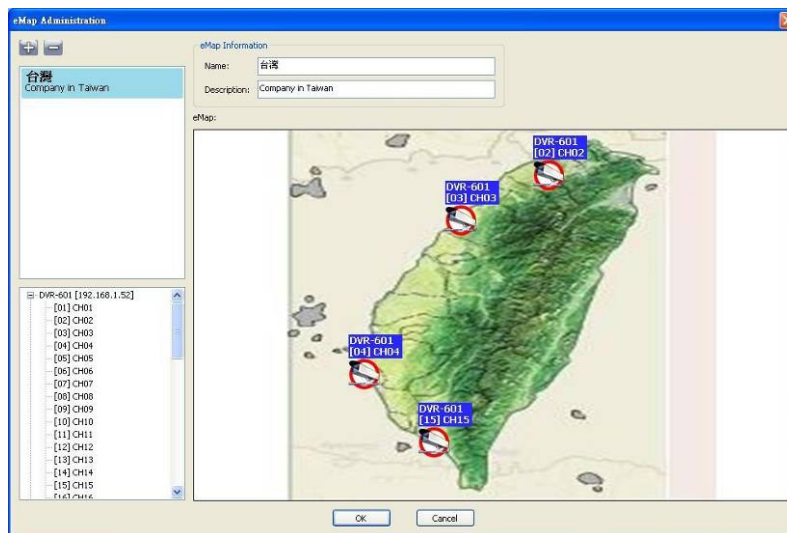


1. Click [] icon to select a path of the window picture.
2. Click [OK] button after selecting a picture, a window will show on the right picture content.
3. Use left mouse button to drag to any location.
4. To delete a channel, please right-mouse click on the channel icon (CH1-CH4), and select item option "Remove".
5. Click [OK] button after setup has been completed to store setup.

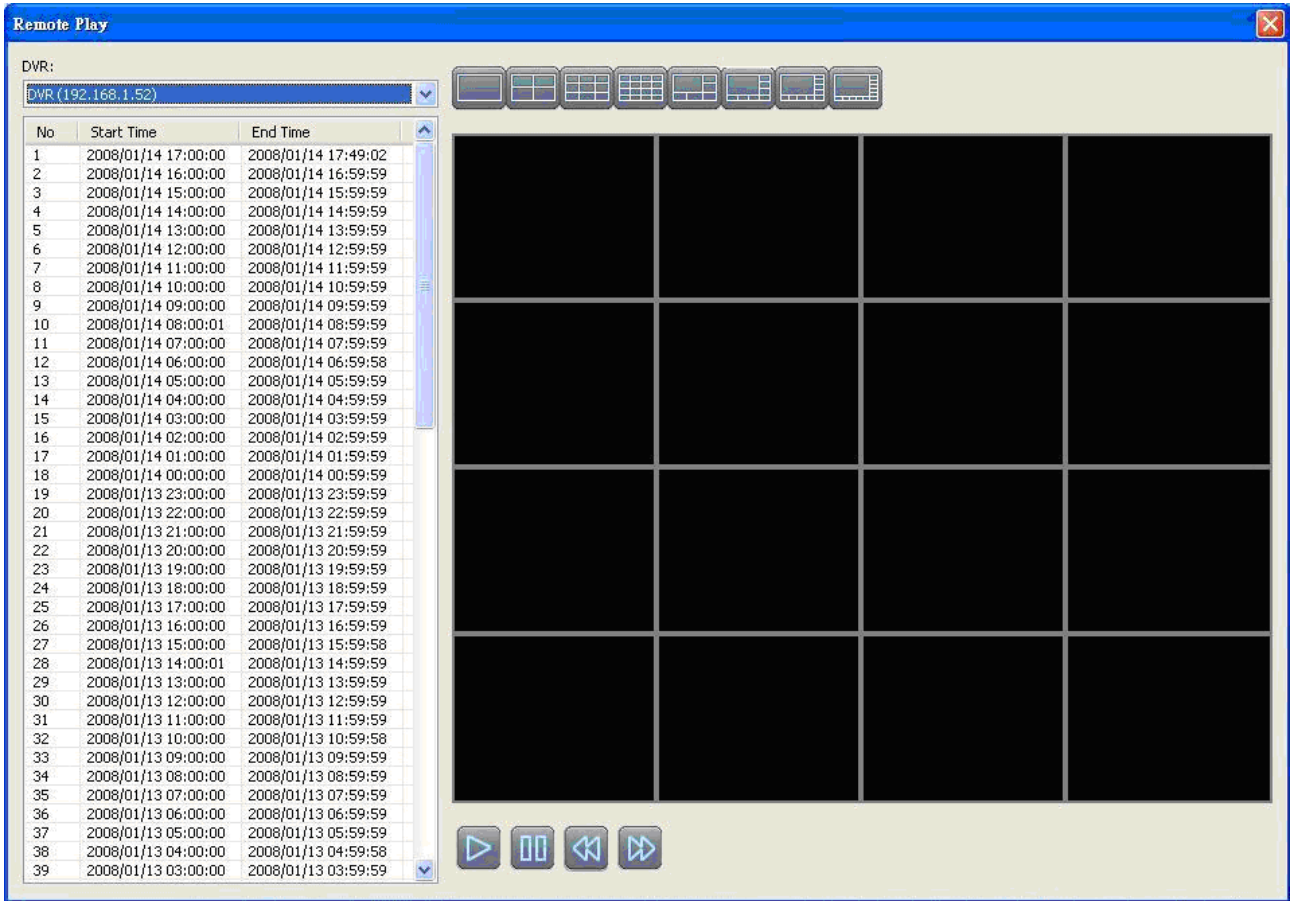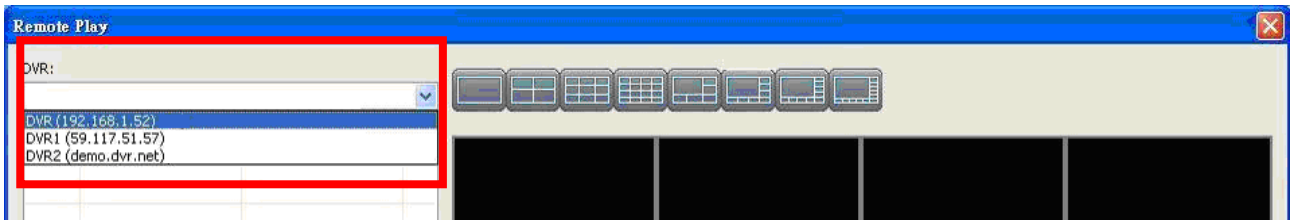

7.16 Remote-Site Playback


You can playback recorded images of the DVR on the remote-site. First select a DVR, DVR recording information list appears below, double-click to playback selected video time period, a video information screen will appear on the right. There are different split-screen options to select from, as shown below.



Icon	Description
	Start Playback
	Pause
	Stop playback
	Fast forward
	Fast rewind

7.17 HDD Playback



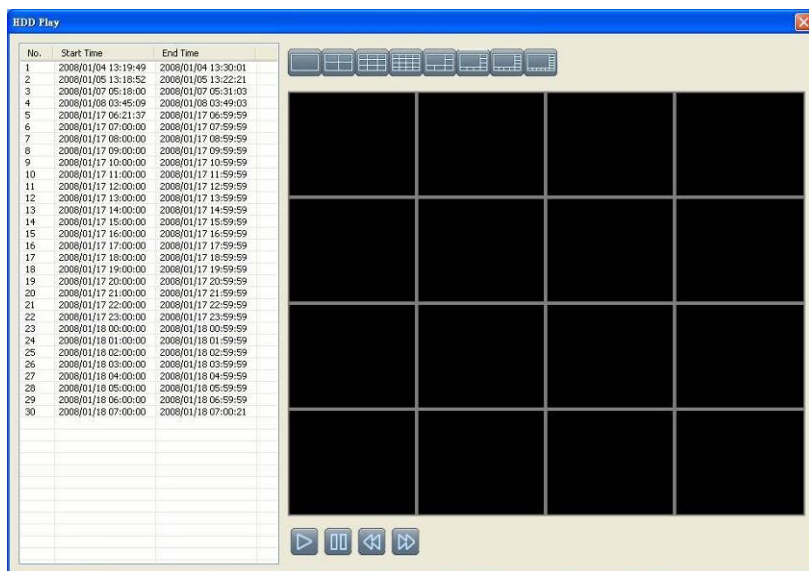


You can directly play the recording data in the HDD that's uninstalled from DVR by iCMS. See the picture below, the left part of the screen shows the recording data in a list form that's separated by hour and the right part is the main display. You can change the display modes and play files fast forward or rewind.



7.18 File Playback

You can play the recorded *.irf files by “File Play” in iCMS. It allows you to change the display mode, forward or rewind the file and drag the time bar.




Icon	Description
	Start Playback
	Pause
	Stop playback
	Fast forward
	Fast rewind

7.19 Event Playback

You can play the event recorded by the DVR.


Steps:

1. Select DVR.
2. Select date.
3. Double-click on the selected "Event type" (table on the left hand side, bottom row), video will be shown on the right side of the screen.
4. Select split-screen.
5. Use the 4 icon functions on the bottom of the screen to operate video playback.

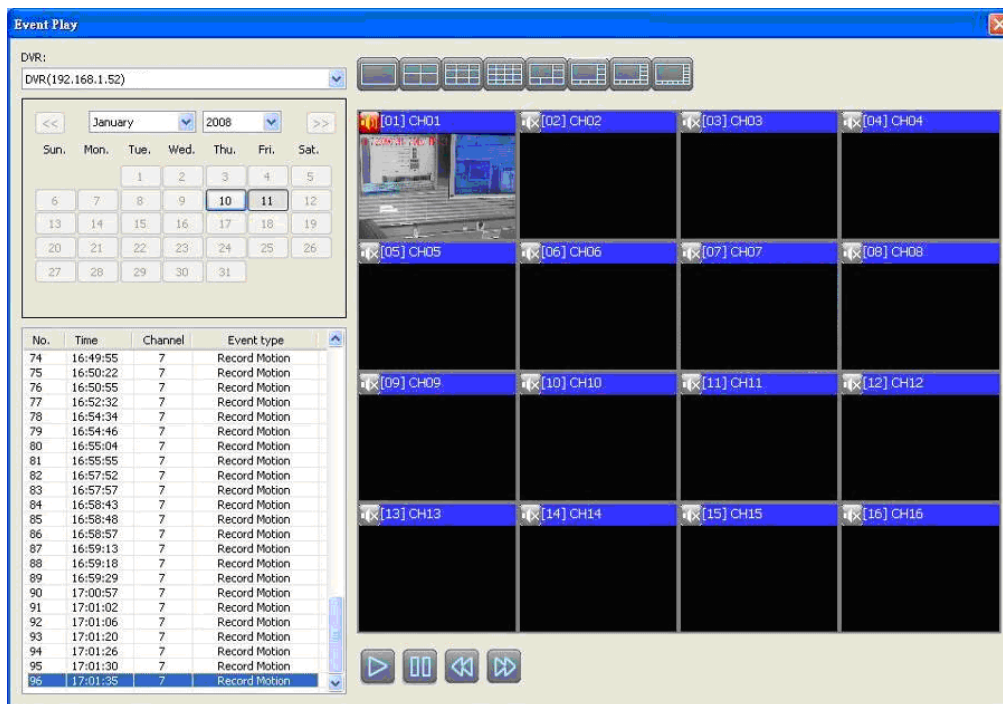

7.20 Snapshot Data

It can display all the snapshots you've taken, into "Snapshot Data". You can review, delete or save as other files.

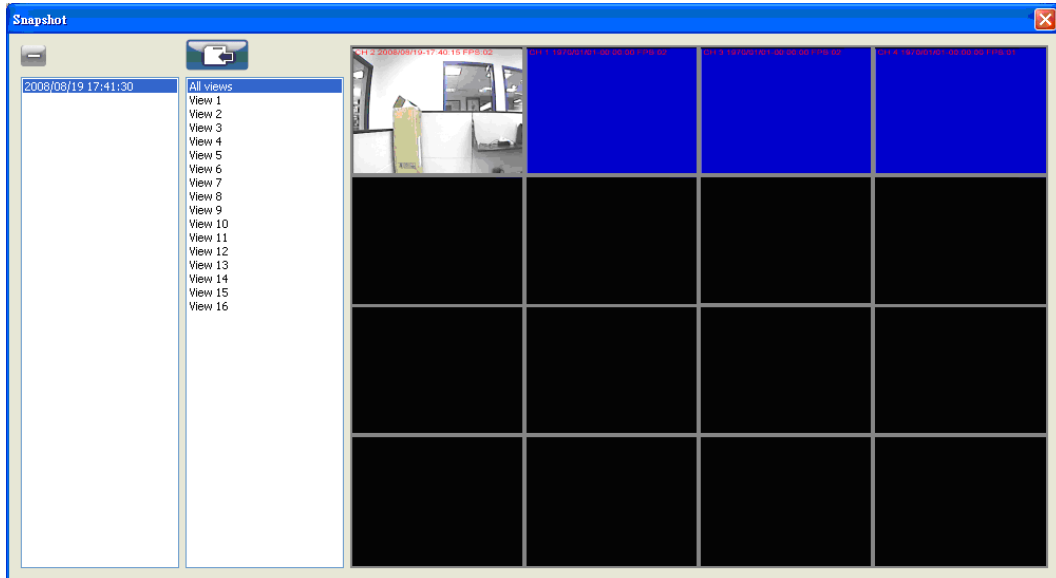

7.21 Recording Data


It can play all the recording files you've recorded, into "Recording Data". You can play or delete them.

Steps:

Step 1: Choose the recording time at upper left corner, it will be played on the main display.

Step 2: You can choose the display mode.


Step 3: Time bar will be shown on the right lower corner, please drag the time bar to specify the recording time you'd like to play.

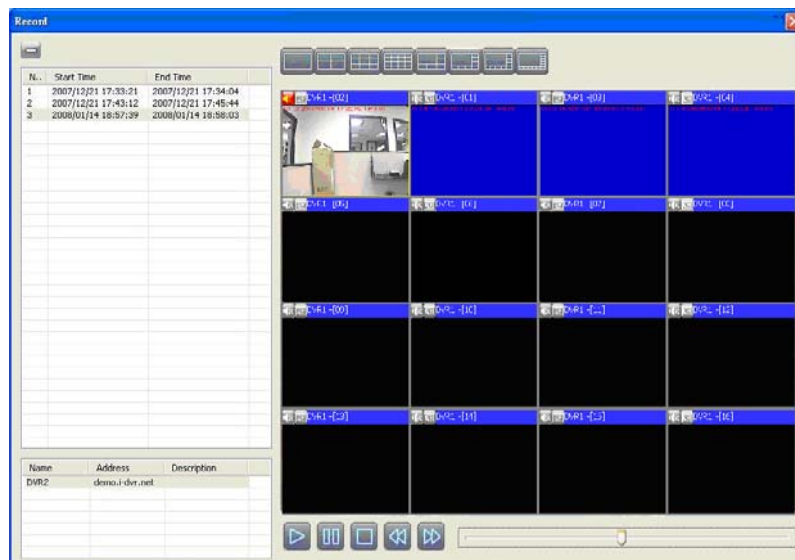


Chapter 8 NETWORK SURVEILLANCE

8.1 AP Software Installation and Setup

 
Step 1 : Enter the IP address of the DVR in the IE browser.



Step 2: A window will pop-up. Please enter the user name and password. Default user name is **admin** and password is **123456**. Other related setup about user account and password, please refer to “**5.6 Account Setup**”.

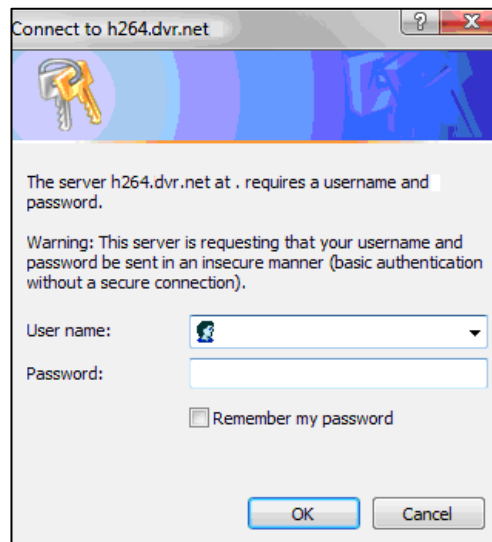


Step 3: You've logged into the DVR

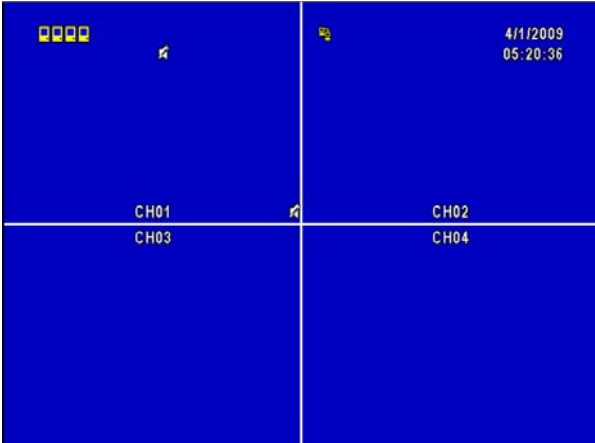


8.2 AP Software Operation

User-friendly operation, DVR remote interface provides the DVR with the same local client interface.

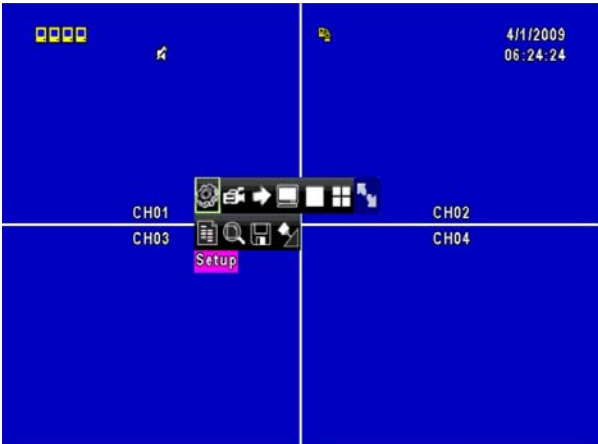


8.2.1 Remote Record

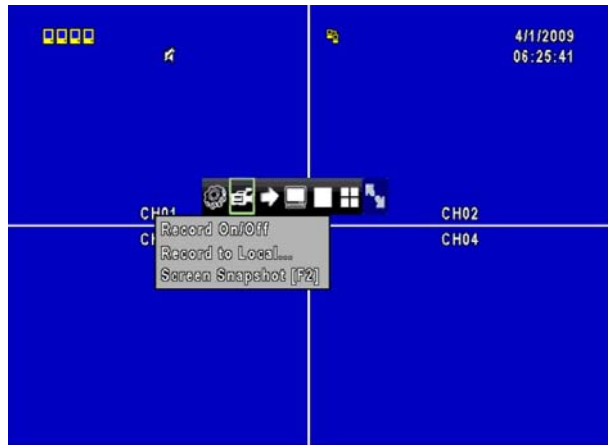

Click Record icon to select between 3 recording options (Record On/ Off, Record to Local..., Screen Snapshot [F2]). Record switch can activate DVR client to record, record to local client can be backed up onto the PC, may also use snapshot to capture video image onto the PC.

8.2.2 Lock

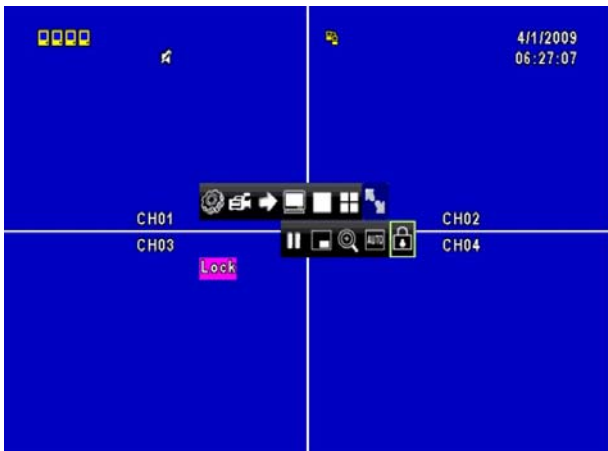


Click Lock icon to lock remote-site function and to unlock, account and password must be entered all over again.

8.2.3 Full Screen




Click Full Screen icon to enlarge the screen to full screen display.

8.2.4 Camera Name

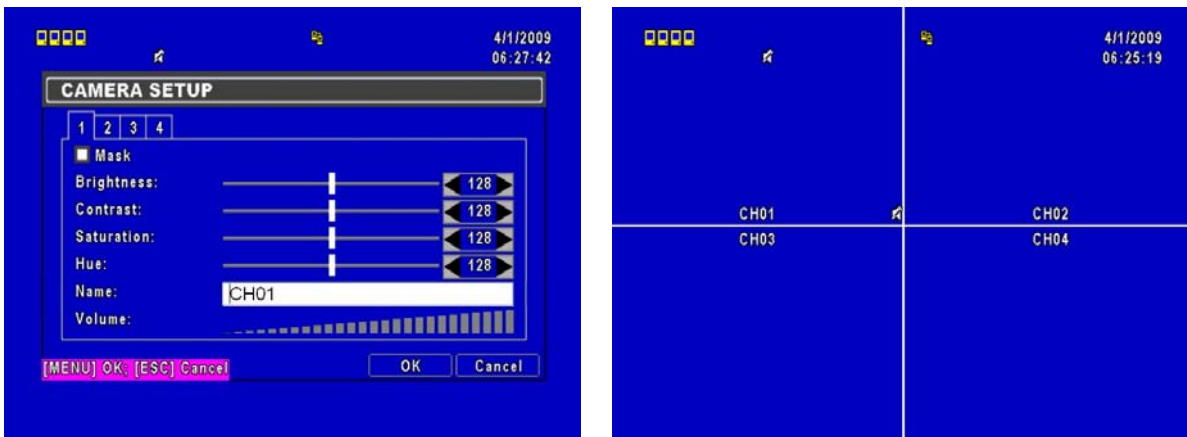

A variety of languages can be used to setup the PC client camera names; and simultaneously changes the display of the local client DVR.

8.2.5 Remote-Site Backup

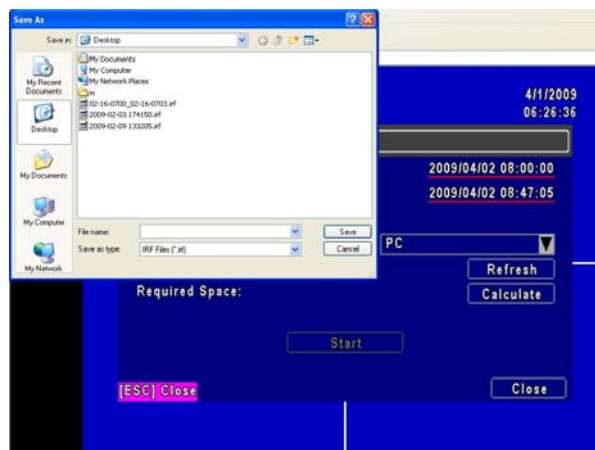

Select backup function to backup the data to PC.

Chapter 9 Mobile Application

You can remotely monitor all channels of the DVR through your mobile device. The required mobile application is from the DVR manufacturer and it supports mobile OS for both Windows mobile 5.0 above and Symbian.

Please confirm that the network function of the DVR has been activated before mobile connection: Main menu → Network Setup → HTTP Setup → Check the “Enable HTTP Server”.

9.1 For Symbian System

Mobile Device: Nokia, SonyEricsson...etc.

System requirement:

GPRS/ 3G must be provided from your telecom service.

Mobile device that supports GPRS/ 3G protocol and Java cldc1.0/midp 2.0 environment.

9.1.1 Mobile Application Installation

Please follow the steps shown below to perform the mobile device surveillance function.

Step 1: You need to install the mobile application called “**DVRH264.jar**” into your mobile device. The application can be downloaded from the CD that packed with DVR through Bluetooth or USB cable. You can find it in e:\utility\mobile\. For example, e is your CD-ROM drive.

Step 2: Install the application software “**DVRH264.jar**” in your mobile device. It might be installed automatically after downloading; otherwise, select it from the downloading file for installation.



9.1.2 Mobile Application Operation

After the installation, enter Program Files menu in your mobile device to run a file called “H264 MIDlet”.

Select “Menu” at the right lower corner of your mobile screen, 4 commands, **Login Add Modify** and **Delete**, will show up.

9.1.2.1 Add New Login DVR

To log into the DVR, you need to enter the logging-in DVR information. Find “**Add**” under the “Menu” then enter logging-in DVR’s IP address, Port number, account name and password. Press “**Add**” to save this information after entering.





9.1.2.2 Logging onto the DVR

Use the Login command to log onto a DVR and monitor live images. If multiple DVRs have been added to the mobile application, they will be listed by name, you can select one to log onto.

A confirmation message might show up for a network charge before connection. The fee rate will depend on the telecom company and package fee that you go with.



Network connectivity will take some time. It will be affected by networking environment and bandwidth flow. Live image will show up after a successful connection.

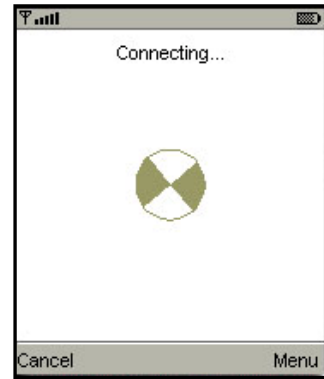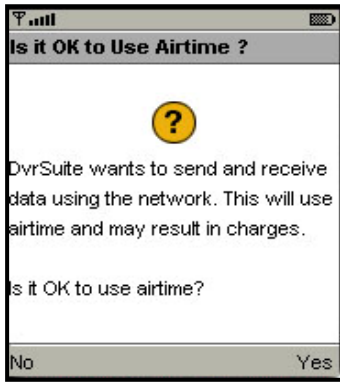

Note: *Live images can not be displayed in your mobile when the recoding is set to off on local DVR.*


9.1.2.3 Modify the Login Information of the DVR

 You can use “**Modify**” command to change the login information of the DVR. The dialogue is identical to that of “Add” command.

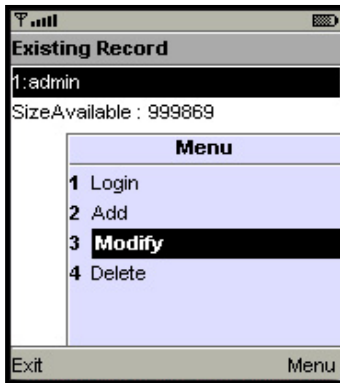

9.1.2.4 Delete the Login Information of the DVR

“Delete” command can be used to remove the DVR information when it is no longer useful. Select the DVR on the name list, then choose “Delete”.

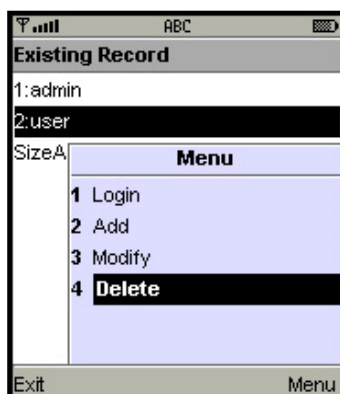

9.1.3 Live Monitoring Operation

This paragraph describes some operation under the LIVE monitoring mode in your mobile device.



9.1.3.1 Scroll the Image

You can use the keypad on your mobile device to scroll the image when it is oversized.

Key	Action
2	Scroll Up
4	Scroll Left
6	Scroll Right
8	Scroll Down

9.1.3.2 Image Quality Setup

 Select “Quality” under the “Menu”. There will be 5 levels for you to choose: Low, Normal, Middle, High and Highest.

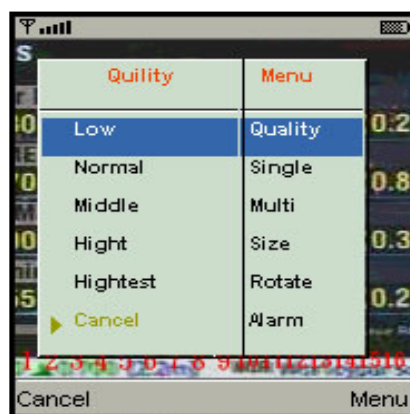

9.1.3.3 Channel Display

Select “**Single**” under the “Menu”, all channels will be listed for you to choose from.


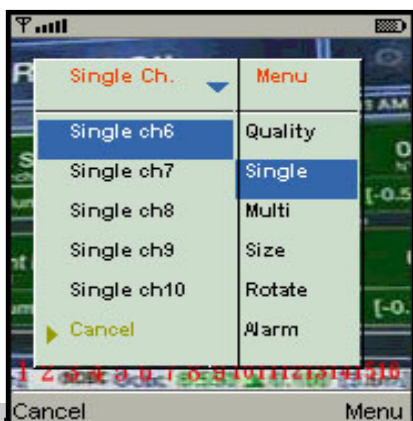


Fig. 9. Live images can not be displayed in your mobile when the recoding is set to off in local DVR.

9.1.3.4 Size of Image

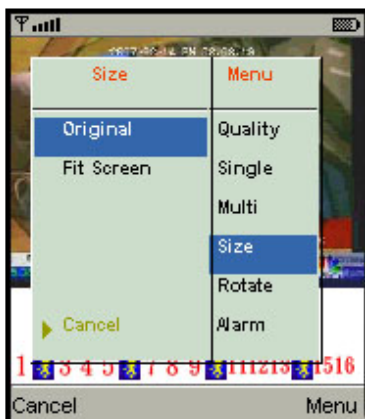

The screen size of different mobile device can be different. You can select “**Size**” under the “Menu” to choose from “**Original**” or “**Fit Screen**” to resize the display image.

Item	Description
Original	The image will be shown in original size.
Fit Screen	The image will be shown to fit the screen.

9.1.3.5 Rotate the image




 
 
Live image can be displayed by normal image or rotate to 90 degrees. Select “**Rotate**” under the “Menu” for this operation.

9.1.3.6 Alarm



This application will not only allow user to remotely monitor through mobile device but receive the alarm that has been triggered by events such as Motion Detected, Sensor Triggered and Vloss (Video Loss).

Select the “Alarm” under the “Menu” to switch this function on or off.

Item	Description
	Motion detected
	Sensor triggered
	Video loss

9.2 For Windows Mobile System

There are two kinds of applications for Window Mobile OS: JPEG compression and H.264 compression. The one for H.264 compression can transfer both audio and video signal to your mobile device.

System Requirement:

Mobile device OS : Windows mobile system 5.0 and above.

Mobile device need to support internet: GPRS/3G/Wifi... etc.

9.2.1 Mobile Application Installation

Please follow the steps shown below to perform the mobile device surveillance function on your mobile device (mobile phone, PDA ...etc).

Step 1: The mobile application called “**Jrviewer.CAB**” and “**H264Pocket.CAB**” need to be installed in your mobile device. The application can be downloaded directly from the manufacturer’s website to your mobile or; alternatively, it can be transferred to your mobile device from the CD that is packed with DVR through Bluetooth or USB cable. You can find it in e:\utility\mobile\. For example, e is your CD-ROM drive

Step 2: Install the application software “**Jrviewer.CAB**” and “**H264Pocket.CAB**” in your mobile device, two folders named “**Jrviewer**” and “**H264Pocket**” will be created. It might be installed automatically after downloading; otherwise, select it from the downloading file for installation.




9.2.2 Mobile Application Operation

After the installation, enter the Program Files menu in your mobile device to run files named “Jrviewer” and “H264Pocket”.


This application allows you to remotely logon and monitor the DVR. Press “OK” to bring up the operation menu; see chart the below for further information.

Item	Function	Description
Add	Add login DVR	Enter DVR’s name, IP address, Port, Account user, Password then press “OK”
Login	Logon DVR	<ul style="list-style-type: none"> • Choose the DVR that you’d like to logon , then press “OK” • PS. Live image can not be displayed in your mobile when the recoding is off. • PS. Network connectivity will be affected by networking environment and bandwidth flow. The fee rate will depend on the telecom company and package fee you go with.
Modify	Modify Login DVR	Choose DVR, press “Modify”, and press”OK” to save change.
Delete	Delete Login DVR	Choose DVR and press”Delete” to delete the DVR info.

The operation of Jrviewer

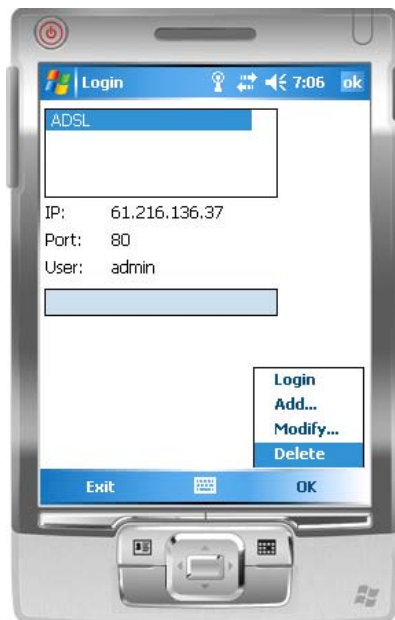

The operation of H264 Pocket

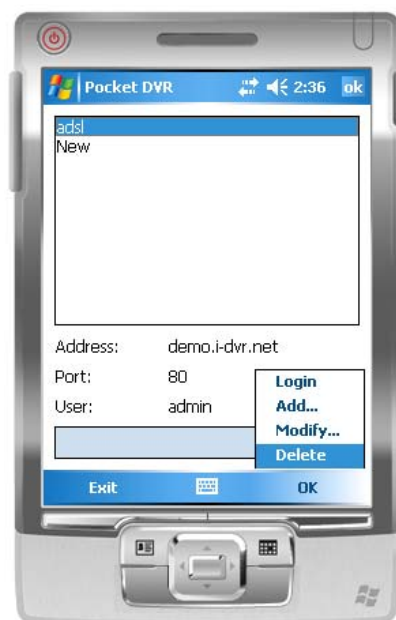



 







9.2.3 Operation under the LIVE monitoring

After successful logon to the DVR, press “View” to bring up operation menu. You can choose the channel, resize the image, choose the quality, and turn On/ Off the status

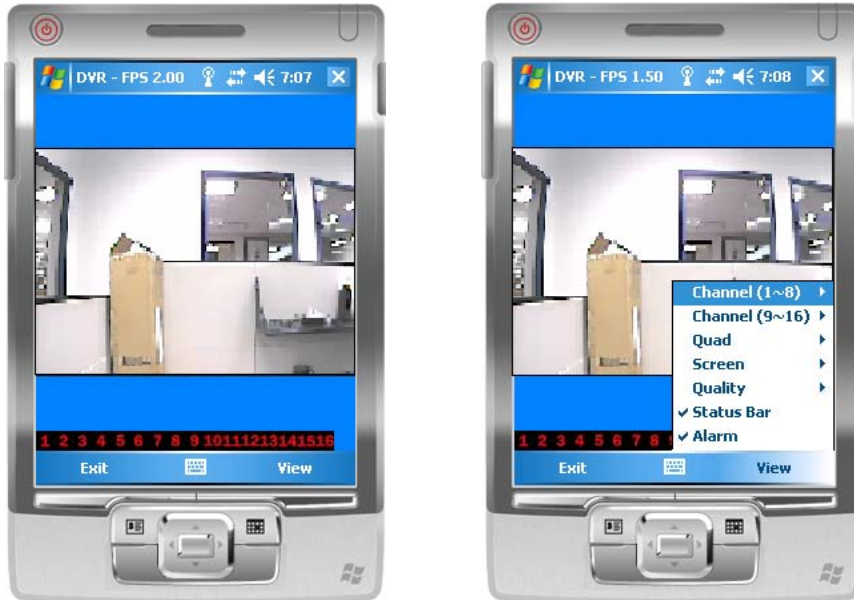bar, alarm, full screen display....etc

  9.2.3.1 jrvviewer Operation under the LIVE monitoring



Item	Function	Description								
Channel 1~16	Display for CH 1~16	Choose from CH1~16 to display								
Screen	Size of image	Original : image size as original Stretch : stretch the size as full screen Fit: resize the image to fit the screen								
Quality	Quality	Change the quality of image. Please note the better quality, the slower data transfer rate.								
Status Bar	Status Bar	Graphical icons indicated below will be shown on the status bar if there is event such as motion detected, sensor triggered and video loss to be detected on any channel. You can also uncheck the “ Status Bar ” to inactivate this function. <div style="text-align: center; margin-top: 10px;"> <table border="1"> <thead> <tr> <th>Icon</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td></td> <td>Motion Detect</td> </tr> <tr> <td></td> <td>Sensor Trigger</td> </tr> <tr> <td></td> <td>V-Loss</td> </tr> </tbody> </table> </div>	Icon	Description		Motion Detect		Sensor Trigger		V-Loss
Icon	Description									
	Motion Detect									
	Sensor Trigger									
	V-Loss									
Alarm	Alarm	Alarm through your mobile device can be triggered if there is event to be detected. You can also uncheck the “ Alarm ” under the “ View ” to inactivate this function.								

9.2.3.2 Operation under the LIVE monitoring for H264 Pocket



Item	Function	Description								
Channel 1~16	Display for CH 1~16	Choose from CH1~16 to display. CH1 can receive audio signal.								
Status Bar	Status Bar	<p>Graphical icons indicated below will be shown on the status bar if there is event such as motion detected, sensor triggered and video loss to be detected on any channel. You can also <input type="checkbox"/> uncheck the “Status Bar” to inactivate this function.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>Icon</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td></td> <td>Motion Detect</td> </tr> <tr> <td></td> <td>Sensor Trigger</td> </tr> <tr> <td></td> <td>V-Loss</td> </tr> </tbody> </table>	Icon	Description		Motion Detect		Sensor Trigger		V-Loss
Icon	Description									
	Motion Detect									
	Sensor Trigger									
	V-Loss									
Alarm	Alarm	Alarm through your mobile device can be triggered if there is event to be detected. You can also <input type="checkbox"/> uncheck the “ Alarm ” under the “View” to inactivate this function.								

Full Screen	Full screen display	<input checked="" type="checkbox"/> Check this function to choose one channel to display in full screen.
-------------	---------------------	--

Appendix A: Product Specification

Model	DVR-872	DVR-1672
CONNECTOR		
Video System	Auto Detect	NTSC / PAL Switch
Video Input	8CH BNC	16CH BNC
Video Output	1CH BNC (MAIN / SPOT)	
SPOT Output	1CH BNC (MAIN / SPOT)	
VGA Output	1280x1024	
Audio Input	4CH RCA	
Audio Output	2CH RCA	
Audio Backup	YES	
Sensor	8 input / 1 output	16 input / 2 output
RS-485	Pan / Tilt / Zoom camera	
USB Port	2 ports	
Mouse	USB mouse	
IR Remote Controller	YES	
STORAGE		
HDD Support	SATA HDD x2 (Max. 2TB each) or SATA HDD x1 + DVD writer x1	SATA HDD x 3 (Max. 2TB each) or SATA HDD x2 + DVD writer x1
DVD Writer	Optional	
OSD		
Display Division	1,4,9,13,16	1,4,9
Title	14 characters	
RECORDING		
Video Compression	H.264	
Audio Compression	ADPCM	

Resolution	720x480, 720x240, 360x240 (NTSC) 720x576, 720x288, 360x288 (PAL)	
Frame Rate	60, 120, 240 (NTSC) 50, 100, 200 (PAL)	120, 240, 480 (NTSC) 100, 200, 400 (PAL)
Quality	Highest, High, Normal, Basic, Below Basic	
Record Mode	Manual, Schedule, Event(motion detection/sensor)	
Pre-Alarm Recording	16MB (around 10 sec)	
Post-Alarm Recording	1-60 sec	
Motion Detection	22X15 (sensitivity 0~10)	
PLAYBACK		
Search Mode	Time, Event	
Playback Speed	fast forward/backward 2X/4X/8X/16X/32X/64X slow forward/backward 1/2X, 1/4X, 1/8X play/pause	
Backup Mode	USB flash driver / Network / Optional DVD media	
NETWORK		
Network Compression	H.264	
Network Software	Internet Explorer / CMS / 3G Mobile Phone	
Network Users	5	
Remote Notification	Email message	
Service	TCP/IP, SMTP, DHCP, DDNS, PPPoE	
OTHER		
Daylight Saving	YES	
Password	5 users including 1 administrator user authority selectable	
Event List	10000	
Key Lock	YES	
Firmware Update	USB device	
Dimension	430mm (W) x 70mm (H) x 360mm (D)	
Power Source	DC12V	
Operating Environment	30 ~ 80% RH, 5°C ~ 40°C (41°F ~ 104°F)	