


 

 


















 







 












 



 

 










Фото	Артикул	Характеристика	Кол-во в коробке	Цена(тг)
 F1-001 1 Gang 1 Way Switch	F1-001	1 Gang 1 Way Switch	100	1040
 F1-002 2 Gang 1 Way Switch	F1-002	2 Gang 1 Way Switch	100	1170
 F1-003 3 Gang 1 Way Switch	F1-003	3 Gang 1 Way Switch	100	1274
 F1-004 1 Gang 2 Way Switch	F1-004	1 Gang 2 Way Switch	100	1040
 F1-005 2 Gang 2 Way Switch	F1-005	2 Gang 2 Way Switch	100	1274
 F1-007 Door Bell Switch	F1-007	Door Bell Switch	100	1118
 F1-008	F1-008	Russian Socket	100	1118
 F1-011 Russian Socket With Waterproof Cover	F1-011	Russian Socket With Waterproof Cover	80	1274
 F1-012 German Socket	F1-012	German Socket	100	1274
 F1-014 German Socket With USB A+C	F1-014	German Socket With USB A+C	80	4290
 F1-020 SAT TV Socket	F1-020	SAT TV Socket	100	910
 F1-022 DATA Socket	F1-022	DATA Socket	100	1274

	F1-026	TEL+DATA Socket	100	1430
 F1-029 Dimmer Switch	F1-029	Dimmer Switch	80	2600
 F1-032 Double Russian Socket	F1-032	Double Russian Socket	50	1690
 F1-033 Double German Socket	F1-033	Double German Socket	50	1898
 F1-FX-002 2 Frame	F1-FX-002	2 Frame	100	520
 F1-FX-003 3 Frame	F1-FX-003	3 Frame	100	676
 F1-FX-004 4 Frame	F1-FX-004	4 Frame	100	1014
 F1-FX-005 5 Frame	F1-FX-005	5 Frame	100	1352
 F2-001 1 Gang 1 Way Switch	F2-001	1 Gang 1 Way Switch	100	1196
 F2-002 2 Gang 1 Way Switch	F2-002	2 Gang 1 Way Switch	100	1430
 F2-003 3 Gang 1 Way Switch	F2-003	3 Gang 1 Way Switch	100	1690
 F2-004 1 Gang 2 Way Switch	F2-004	1 Gang 2 Way Switch	100	1274
 F2-005 2 Gang 2 Way Switch	F2-005	2 Gang 2 Way Switch	100	1534
 F2-007 Door Bell Switch	F2-007	Door Bell Switch	100	1274

	F2-008	Russian Socket	100	1352
 F2-011 Russian Socket With Waterproof Cover	F2-011	Russian Socket With Waterproof Cover	80	1534
	F2-012	German Socket	100	1534
	F2-014	German Socket With USB A+C	80	4940
 F2-020 SAT TV Socket	F2-020	SAT TV Socket	100	1170
 F2-022 DATA Socket	F2-022	DATA Socket	100	1430
	F2-026	TEL+DATA Socket	100	1586
	F2-029	Dimmer Switch	80	3120
 F2-032 Double Russian Socket	F2-032	Double Russian Socket	50	2106
 F2-033 Double German Socket	F2-033	Double German Socket	50	2444
 F2-FX-002 2 Frame	F2-FX-002	2 Frame	100	676
 F2-FX-003 3 Frame	F2-FX-003	3 Frame	100	1014
 F2-FX-004 4 Frame	F2-FX-004	4 Frame	100	1664
 F2-FX-005 5 Frame	F2-FX-005	5 Frame	100	2366

 F3-001 1 Gang 1 Way Switch	F3-001	1 Gang 1 Way Switch	100	1196
 F3-002 2 Gang 1 Way Switch	F3-002	2 Gang 1 Way Switch	100	1430
 F3-003 3 Gang 1 Way Switch	F3-003	3 Gang 1 Way Switch	100	1664
 F3-004 1 Gang 2 Way Switch	F3-004	1 Gang 2 Way Switch	100	1274
 F3-005 2 Gang 2 Way Switch	F3-005	2 Gang 2 Way Switch	100	1521,0
 F3-007 Door Bell Switch	F3-007	Door Bell Switch	100	1274
 F3-008 Russian Socket	F3-008	Russian Socket	100	1352
 F3-011 Russian Socket With Waterproof Cover	F3-011	Russian Socket With Waterproof Cover	80	1508
 F3-012 German Socket	F3-012	German Socket	100	1508
 F3-014 German Socket With USB A+C	F3-014	German Socket With USB A+C	80	4940
 F3-020 SAT TV Socket	F3-020	SAT TV Socket	100	1196
 F3-022 DATA Socket	F3-022	DATA Socket	100	1430
 F3-026 TEL+DATA Socket	F3-026	TEL+DATA Socket	100	1612
 F3-029 Dimmer Switch	F3-029	Dimmer Switch	80	3016

 <p>F3-032 Double Russian Socket</p>	F3-032	Double Russian Socket	50	2106
 <p>F3-033 Double German Socket</p>	F3-033	Double German Socket	50	2444
 <p>F3-FX-002 2 Frame</p>	F3-FX-002	2 Frame	100	676
 <p>F3-FX-003 3 Frame</p>	F3-FX-003	3 Frame	100	1014
 <p>F3-FX-004 4 Frame</p>	F3-FX-004	4 Frame	100	1690
 <p>F3-FX-005 5 Frame</p>	F3-FX-005	5 Frame	100	2340
 <p>F3-FX-006 6 Frame</p>	F3-FX-006	6 Frame	100	676