

Polycom® RealPresence® Group Series with Touch Monitor Quick Tips

3725-84123-001A | February 2016

Wake the System

To wake the system, touch the screen or lift the remote.

Place a Video Call

Enter a Name or Number

- 1 On the Home screen, tap ^(S) Place a Call.
- 2 Tap **Keypad** and tap **Onscreen Keyboard**. Enter a contact's name or number.
- 3 Tap 🔽 Dial.

Call a Contact

- 1 On the Home screen, tap S Place a Call and tap S Contacts.
- 2 Do one of the following:
- » Choose the desired contact from the list of contacts, and tap Call.
- » Tap a group and select a contact.
- » Using the onscreen keyboard, enter your contact's name and select your contact in the search results.

Call a Recent Contact

- 1 On the Home screen, tap S Place a Call and tap **Place a Call** and
- 2 Tap a recent placed or received call.

Call a Speed Dial Contact

- On the Home screen, tap Speed Dial.
- 2 Tap a contact image on the Speed Dial screen.

Place a Multipoint Conference Call

- 1 Place a call using your preferred method.
- 2 In an active call, touch the screen.
- 3 Tap ••• More > 🕙 Add a Call.

Answer a Call

If the system is not set to answer calls automatically, you can manually answer an incoming call.

To answer an incoming call:

» Tap Answer.

To answer a call during a call:

» Tap Hold + Answer or tap Hang Up + Answer.

Ignore a Call

» Tap Ignore.

Hold a Call

Place an active call on hold to answer an incoming call, place a call, or switch between calls.

- 1 In an active call, touch the screen.
- 2 Tap ••• More > II Hold.

Resume a Held Call

Resume a held call when ready. If you completed a separate call while another call was on hold, the held call will not automatically resume.

» On the Home screen, tap Resume Call.

End a Call

Only active calls can be ended.

» In a point-to-point call, tap = > 🚱 Hang Up.

End a Multipoint Conference Call

- In a multipoint conference call, tap ≡ > Hang Up.
- 2 Select Hang Up to end one call or select Leave Conference to hang up all calls.

Mute the Microphone

- 1 In a call, touch the screen.
- 2 Tap 🌡 Mute.

Unmute the Microphone

- 1 In a call, touch the screen.
- 2 Tap 🚱 Unmute.

www.polycom.com

© 2016, Polycom, Inc. All rights reserved. Polycom® and the names and marks associated with Polycom's products are trademarks and/or service marks of Polycom, Inc.,

and are registered and/or common-law marks in the United States and various other countries. All other trademarks are property of their respective owners.

Join a Meeting

Join a meeting from the meeting reminder, the Home screen, or the Place a Call screen.

Do one of the following:

- » On a meeting reminder, tap Join.
- » On the Home screen, tap a meeting and tap **Join** or tap ••• to use the Keypad to enter the meeting number.
- » Tap Place a Call > Calendar and tap Join to attend the meeting.

Adjust the Volume

- 1 Touch the screen, and tap **Volume**.
- 2 Place your finger on the Volume slider and move your finger to the left to lower the volume and to the right to raise the volume. Tap anywhere on the bar to set the volume.

Adjust the Video Layout in a Call

Control the display of the video layout during calls.

- 1 In a call, touch the screen.
- 2 Tap ••• More > PIP Layout. Select one of the available layouts.

Start Video

» To start video, tap 💋 Camera On.

Stop Video

» To stop video, tap
Camera Off.

Select a Camera

Do one of the following:

- » On the Home screen, tap 🔤 Camera.
- » In a call, tap 📰 > Camera.

Adjust a Camera

1 Navigate to 😳 Camera Control.

- **3** Tap **Near Cameras** or **Far Cameras** to switch between cameras during a call.

Power the System On and Off

- To power on the system, press in on the remote control or the power sensor on the front of the system.
- To power off the system, press and hold on the remote control or the power sensor on the front of the system for 3 seconds. Wait 15 seconds before you unplug the power cord.

Video Call Etiquette

- Be prepared with the name or number of the site you want to call.
- Connect and test any additional equipment before the meeting.
- Avoid wearing bright colors, all-light or all-dark clothing, or "busy" patterns. Solid pastels and muted colors look the best on the screen.
- Ensure that the far site can see and hear you.
- Mute the microphone unless you are speaking.
- Adjust your settings to see and hear the far-site participants.
- Introduce all participants when the meeting starts. Speak and gesture naturally.

More Information

For more information about setting up and using the system, refer to support.polycom.com.



www.polycom.com