



ASSEMBLY INSTRUCTION OF HOM EX36

1-Put main body of the trolley on floor.

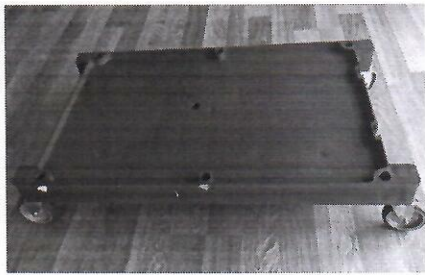


2-Insert extension body on the main body.

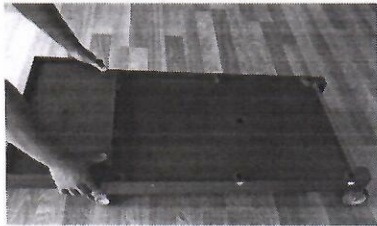

3-Fixing U metal on the main body. Straight part of U metal must be inside of the body.




4-Insert the Column according to color code on the body.

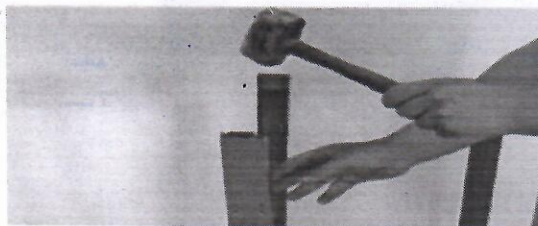

5 - Fixing Column and U metal on the body with screws and "L" spanner. Long screws for columns and short ones for U metal



5- OUTSIDE Walls pass through inside Column channels from top to down. Make sure that Walls of protuberance look the inside the trolley.

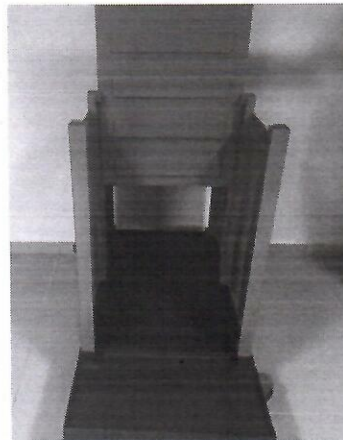

6- INSIDE WALLS for DRAWERS pass through inside Column channels from top to down. Make sure that Walls of protuberance look the inside the trolley.



7-Place top shelf on the 4 columns. Make sure that shelf holes must be same position with column




8- Insert carriage cover into top shelf channels and columns.

ASSEMBLY INSTRUCTION OF HOM EX36



9 -Fixing top shelf and garbage cover on the column with scrow by using scrow driver.

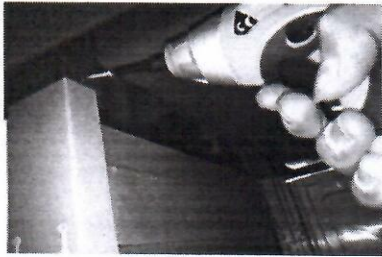

10- Replace Red and Blue bucket.



11-Repacw wringer on the U metal.



12-Replace mop holder base



13- Replace DRAWERS



TROLLEY IS READY TO USE

