

**Anritsu** envision : ensure

# Spectrum Master™

Compact Handheld Spectrum Analyzer

MS2712E      MS2713E  
9 kHz to 4 GHz    9 kHz to 6 GHz



# Anritsu Introduces its Next Generation Compact Spectrum Analyzer



The wireless communications market is rapidly growing as the telecommunications and defense sectors continue to evolve. Whether you are installing, troubleshooting, or solving problems for military communications facilities, public safety providers, or wireless service providers, Anritsu has a solution.

Anritsu's new Spectrum Master has been designed for technicians, installers, field radio frequency (RF) engineers, and contractors who struggle with both keeping track of the growing number of interfering signals and assessing signal quality on a wide range of increasingly complex signals. Easy-to-use, integrated and high performing, the Spectrum Master helps users address those challenges and more. Its feature-rich and compact design helps users comply to regulatory requirements, manage and maximize efficiency, improve system up-time, and increase revenue – all in a rugged and field-proven device designed to withstand even the most punishing conditions.

This next generation of Anritsu's best-in-class Spectrum Master series is ideal for spectrum monitoring, interference analysis, RF and microwave measurements, field strength measurements, transmitter spectrum analysis, electromagnetic field strength, signal strength mapping, and overall field analysis of cellular 2G/3G/4G, land mobile radio, Wi-Fi, and broadcast signals.

## Designed For Field Use

The Spectrum Master was designed specifically for field environments. Weighing less than 3.45 kg, it is small compact and easy to carry. Its field replaceable Li-Ion battery typically lasts for more than 3 hours, and a new bright 8.4-inch color display provides visibility even in broad daylight. With an operating temperature range from -10 °C to 55 °C, a rugged case and splash proof design, the Spectrum Master works in the most extreme weather conditions with guaranteed performance anywhere and anytime.

## Integrated Solution

The Spectrum Master is a multifunctional instrument that eliminates the need for you to carry and learn multiple instruments. It can be configured to include a broad range of parameters, including a 4 GHz or 6 GHz spectrum analyzer, an interference analyzer with signal mapping, coverage mapping, Tracking Generator, channel scanner, power meter, high accuracy power meter, AM/FM/PM Analyzer, and GPS receiver for time/location stamping and accuracy enhancements.

In addition, the Spectrum Master can be equipped with a GSM/EDGE Analyzer, W-CDMA/HSPA+ Analyzer, TD-SCDMA Analyzer, CDMA Analyzer, EV-DO Analyzer, Fixed and Mobile WiMAX Analyzer, LTE Analyzer, ISDB-T Analyzer, thus eliminating the need to carry multiple instruments to the field.

## Easy-To-Use

The new Spectrum Master leverages the user interface from Anritsu's popular MS2721B analyzer, giving users intuitive spectrum analyzer menus. A touchscreen keypad combination provides you with an intuitive menu-driven interface designed to give a familiar menu structure with quick access to popular measurements.

## Key Facts

- 9 kHz to 4 GHz (MS2712E)
- 9 kHz to 6 GHz (MS2713E)
- One-button measurements: ACPR, Channel Power, Field Strength, Occupied BW, AM/FM/SSB Demod
- Interference Analyzer: Spectrogram, Signal Strength, RSSI, Signal ID, Interference Mapping
- Indoor and Outdoor Coverage Mapping
- 3GPP Signal Analyzers: LTE, GSM/EDGE, W-CDMA/HSPA+, TD-SCDMA/HSPA+
- 3GPP2 Signal Analyzers: cdmaONE/CDMA2000 1X, CDMA2000 1xEV-DO
- IEEE 802.16 Signal Analyzers: Fixed WiMAX, Mobile WiMAX
- ISDB-T Signal Analyzer
- CPRI RF Measurements
- DANL: > -162 dBm in 1 Hz RBW
- Dynamic range: > 102 dB in 1 Hz RBW
- +33 dBm TOI typical @ 6 GHz
- < Phase Noise: -100 dBc/Hz @ 10 kHz at 1 GHz
- Frequency accuracy: < ± 50 ppb with GPS on
- Detection methods: Peak, RMS, Negative, Sample, Quasi-peak
- Save-on-event: Automatically saves a sweep when crossing a limit line or at the end of the sweep.
- Gated sweep: View pulsed or burst signals only when they are on, or off.
- Three hours of battery life
- Touch-screen display
- USB and Optional Ethernet for data transfer and instrument control
- Line Sweep Tools
- 8.4-inch daylight viewable touchscreen display
- Lightweight: < 3.45 kg


# Integrated Measurement Capabilities




## Configuration Overview

FUNCTION	DESCRIPTION
<b>Spectrum Analyzer, 9 kHz to 4/6 GHz</b>	Locates and identifies various signals over a wide frequency range. Detects signals as low as -152 dBm with phase noise better than -100 dBc/Hz.
<b>Interference Analyzer (Option 25)</b>	Includes everything you need to monitor, identify, and locate interference using the spectrogram display, RSSI, Signal ID, signal strength meter, and interference mapping.
<b>Coverage Mapping (Option 431)</b>	Provides indoor and outdoor mapping capabilities of RSSI, and ACPR measurement levels.
<b>GPS Receiver (Option 31)</b>	Provides location and UTC time information. Also improves the accuracy of the reference oscillator.
<b>Tracking Generator (Option 20)</b>	Features high dynamic range with power steps ranging from -50 dBm to 0 dBm in 0.1 dB steps.
<b>Bias Tee (Option 10)</b>	Possesses a built-in 32 V bias tee that can be turned on as needed and applied to the RF In port.
<b>High Accuracy Power Meter (Option 19)</b>	Connects high accuracy 4, 6, 8, 18, and 26 GHz USB power sensors with better than $\pm 0.16$ dB accuracy.
<b>Power Meter (Option 29)</b>	Makes channelized transmitter power measurements.
<b>Channel Scanner (Option 27)</b>	Measures the power of multiple transmitted signals. Scans up to 1200 channels using Script Master.
<b>Gated Sweep (Option 90)</b>	Views pulsed or burst signals such as WiMAX, GSM, and TD-SCDMA only when they are on.
<b>AM/FM/PM Analyzer (Option 509)</b>	Analyzes AM/FM/PM signals and measures FM/PM deviation, AM depth, SINAD, Total Harmonic Distortion and much more.
<b>PIM Analyzer (Option 419)</b>	The PIM Analyzer measures the 3 <sup>rd</sup> , 5 <sup>th</sup> , or 7 <sup>th</sup> order intermodulation products in the receive band of two high power tones generated by the 40 Watt PIM Master.
<b>10 MHz Bandwidth Demod (Option 9)</b>	The 10 MHz BW demod option enables users to turn the Spectrum Master in to a Signal Analyzer.
<b>GSM/EDGE Measurements (Option 40, 41)</b>	RF and Demod Measurements enables end users to increase data rate and capacity by ensuring good signal quality.
<b>W-CDMA/HSPA+ Measurements (Option 44, 45, 65, 35)</b>	Uses Spectrum Master's RF, Demod, and OTA Measurements to verify frequency error, multipath signals, EVM and much more.
<b>LTE (Option 541, 542, 546)</b>	Spectrum Master's LTE Measurements enables users to make RF, Demod, and OTA Measurements. Verify ACLR, Cell ID, Frequency Error, EVM, and much more.
<b>TD-SCDMA/HSPA+ Measurements (Option 60, 61, 38)</b>	The TD-SCDMA/HSPA+ analyzer includes RF, Demod, and OTA measurements and the ability to measure EVM and Peak CDE. It also includes an OTA Tau scanner.
<b>cdmaOne/CDMA2000 1X (Option 42, 43, 33)</b>	RF, Demodulation, and OTA Measurements. Measures EVM, Noise floor, ACPR and much more.
<b>Fixed and Mobile WiMAX (Option 46, 47, 66, 67, 37)</b>	RF Demod, and OTA Measurements verify Cell ID, Sector ID, Preamble, EVM, RCE, and much more.
<b>ISDB-T (Option 30, 32)</b>	Makes RF and Demod Measurements to verify Spectrum Mask and MER. Ensures digital TV transmitters are configured according to license agreements.
<b>CPRI RF (option 751)</b>	Converts the IQ data in the CPRI link into RF measurements.
<b>Ethernet Connectivity (Option 411)</b>	Provides the ability to operate automated testing from remote PC, or conversely, to upload data from field test to the PC. Remote access control is also provided through Master Software Tools.

# Designed for the Field

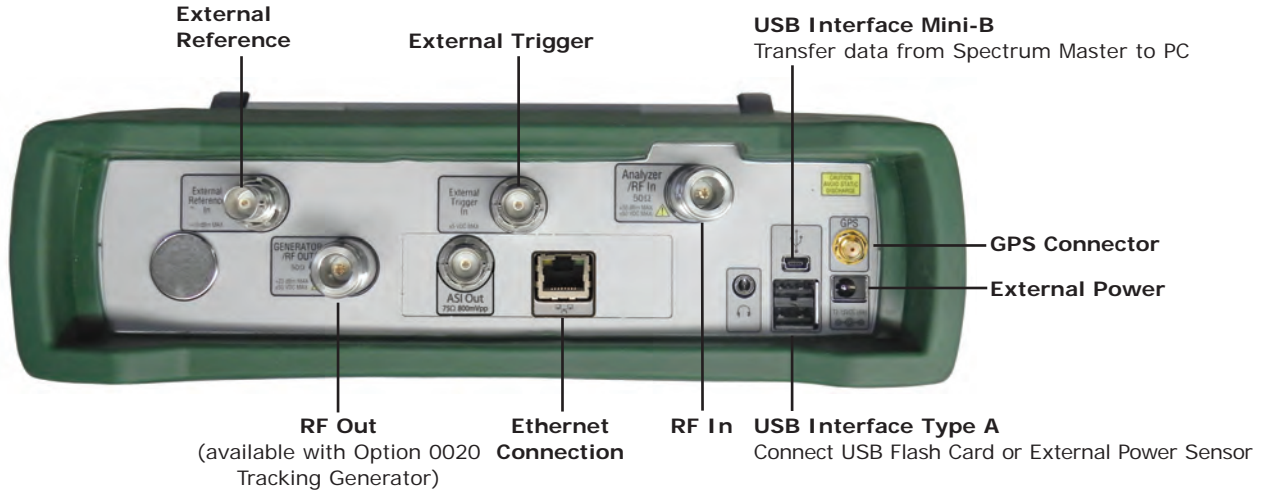

All connectors are conveniently located on the top panel, leaving the sides clear for handheld use.

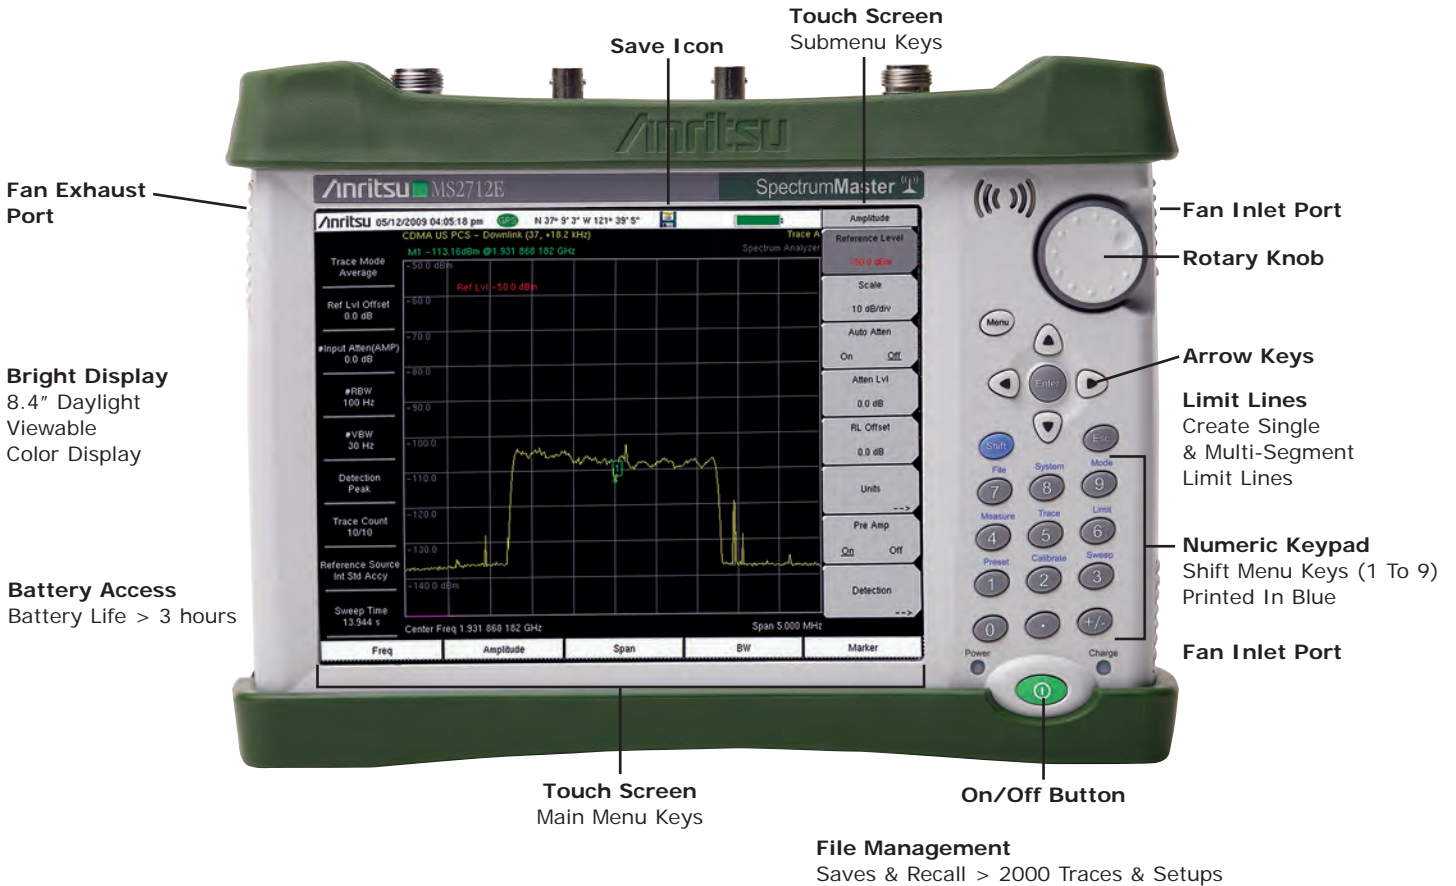

## Convenient Soft Case and Tilt Bail

---




Tilt Bails are integrated into the case and soft case for better screen viewing.


# Best Performance in its Class

Anritsu's MS2712E and MS2713E Spectrum Master spectrum analyzers provide users with high-performance for field environments and for applications requiring mobility. There is no other spectrum analyzer in this class that can deliver the same performance.


The combination of its performance and compact design makes it ideal for a broad range of activities, including spectrum monitoring, interference analysis, field strength measurements, transmitter spectrum analysis, electromagnetic field strength, signal strength mapping, and overall field analysis of cellular 2G/3G/4G, land mobile radio, Wi-Fi, and broadcast signals.

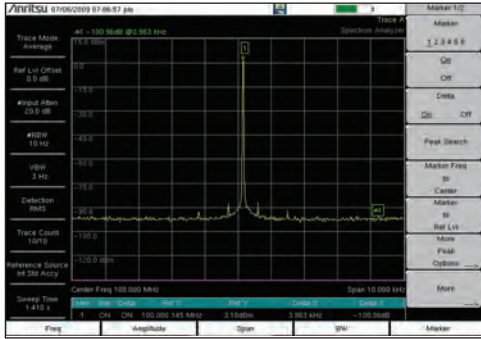


Dynamic Range Performance

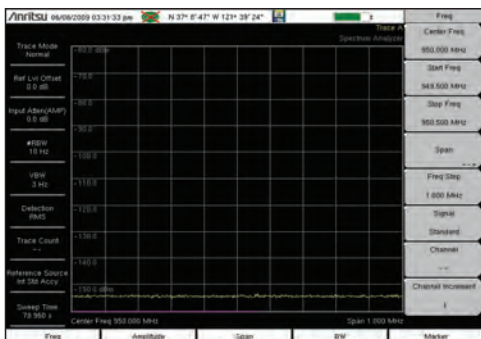

Low Level Performance

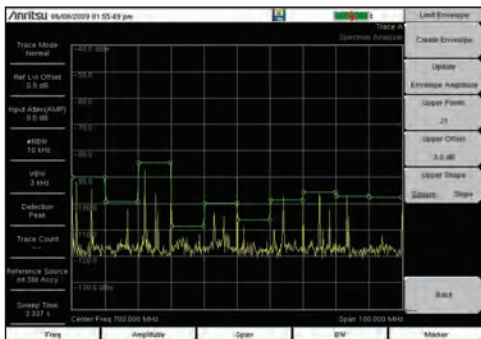

Limit Envelope

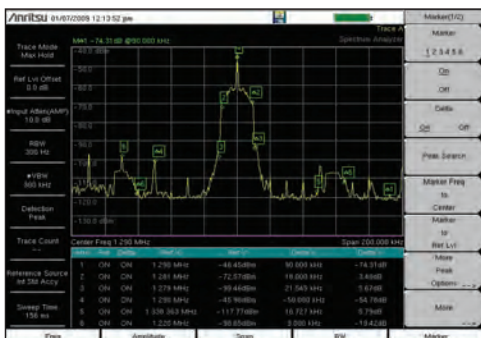

Comprehensive Marker Menu

## High Performance

The dynamic range is better than 102 dB in 1 Hz, enabling measurement of very small signals in the presence of much larger signals. The picture demonstrates the dynamic range in the Spectrum Master

## Displayed Average Noise Level

Spectrum Master delivers impressive and best-in-class DANL performance. With the built-in pre-amp, better than 102 dBm DANL can typically be realized in 1 Hz RBW. This low-level performance capability is essential when looking for low-level interference signals.

## GPS-Assisted Frequency Accuracy

With GPS Option 0031 the frequency accuracy is < 50 ppb. This additional accuracy is important when characterizing 3GPP signals using counted frequency markers. Also all measurements can be GPS tagged for exporting to maps.

## Simple but Powerful for Field Use

Convenience is a must in the field. This is why the Spectrum Master is equipped with features that will enhance productivity in the field.

The Spectrum Master is equipped with limit lines for all user levels. You can create single limit lines and segmented limit lines in one step using the one-button limit envelope feature.

The Spectrum Master automatically sets the fastest sweep possible while still ensuring accurate measurements. This allows users to rely on the instrument to optimize accuracy and consistency.


Auto Attenuation ties the input attenuation to the reference level eliminating the need for the user to determine how much attenuation is needed.

Six regular and six delta markers can be displayed with a marker table that can be turned on as needed. The capability to measure noise level in terms of dBm/Hz or dBμV/Hz is a standard feature of the Spectrum Master.

# Master Transmitter Testing

## Smart Measurements for Transmitter Systems

Commonly needed transmitter measurements are built in and can be accessed easily. These include field strength, occupied bandwidth, channel power, adjacent channel power ratio (ACPR), and emission mask.

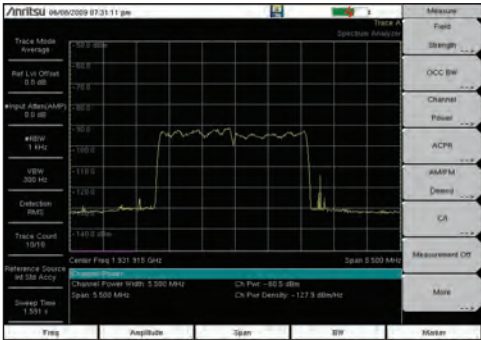


### Occupied Bandwidth

This measurement determines the amount of spectrum used by a modulated signal. The Spectrum Master allows you to choose between two different methods of determining bandwidth: the percent-of-power method or the “x” dB down method.

### Adjacent Channel Power Ratio

Adjacent Channel Power Ratio is a common transmitter measurement. High ACPR will create interference for neighboring carriers. This measurement can be used to replace the traditional two-tone Intermodulation Distortion (IMD) test for system non-linear behavior.

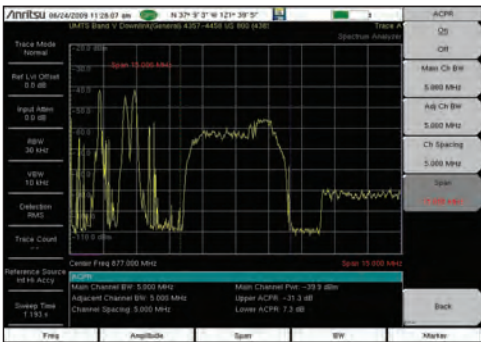


### Field Strength Measurements

The Spectrum Master can determine the effects of electromagnetic fields caused by transmitter systems. Specific antenna factors of the connected antenna are automatically taken into account, and field strength is displayed directly in dBμV/m. The Spectrum Master also supports a wide range of directional antennas. If you are using a different antenna, Master Software Tools can be used to edit the antenna list and upload the custom antenna list to the instrument to accurately measure the maximum field strength.

### Emission Mask


The emission mask is a segmented upper limit line that will display frequency range, peak power and frequency, relative power and pass/fail status for each segment of the mask. The emission mask must have at least two segments. Emission mask adjusts to the peak power value of transmitted signal level per government emission mask requirements.

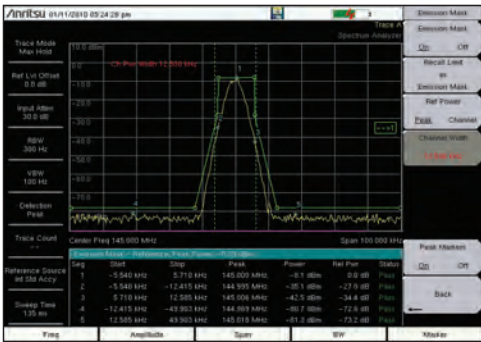

# Master the Location of Interference

As the wireless industry continues to expand, more diverse uses for the radio spectrum emerge, and the number of signals that may potentially cause interference is constantly increasing.

Compounding the problem are the many sources that can generate interference, including intentional radiators, unintentional radiators, and self interference. Interference causes Carrier-to-Interference degradation robbing the network of capacity. The goal of these measurements is to resolve interference issues as quickly as possible.

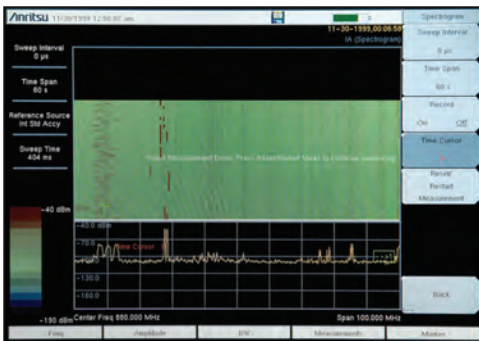


Spectrogram Display

## Interference Analysis (Option 25)

The interference analyzer option provides you with a spectrogram display, RSSI, signal strength meter, signal ID, and signal mapping capabilities. Spectrum Master's integrated spectrum analyzer can detect signals as low as  $-152$  dBm.

### Spectrogram Display

This option provides you with a three-dimensional display of frequency, power, and time of the spectrum activity to identify intermittent interference and track signal levels over time. The dual display screen allows for easy viewing of both the spectrum and 3D display. The Spectrum Master allows you to save a history of data up to one week.

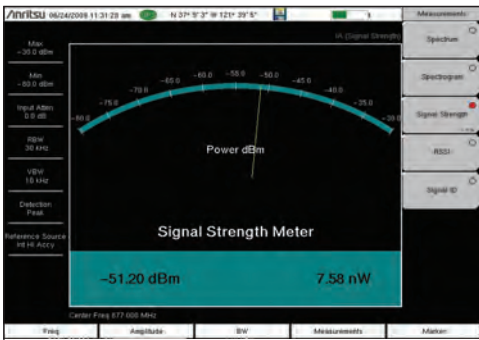


Signal Strength Meter

### Received Signal Strength Indicator (RSSI)

You can use the Spectrum Master's RSSI measurement to observe the signal strength of a single frequency over time, and collect data for up to one week.

### Signal Strength Meter


The Spectrum Master's signal strength meter can locate an interfering signal by using a directional antenna and measuring the signal strength. It displays power in Watts or dBm, in the graphical analog meter display and by an audible beep proportional to its strength.

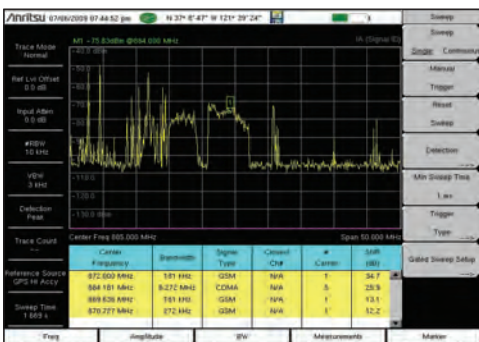

Signal ID

### Signal ID

Spectrum Master's signal ID feature in the interference analyzer can help you quickly identify the type of the interfering signal. You can configure this measurement to identify all signals in the selected band or to simply monitor one single interfering frequency. The Spectrum Master then displays results that include center frequency, signal bandwidth, and signal type (FM, GSM/EDGE, W-CDMA/HSPA+, CDMA/EV-DO, Wi-Fi).

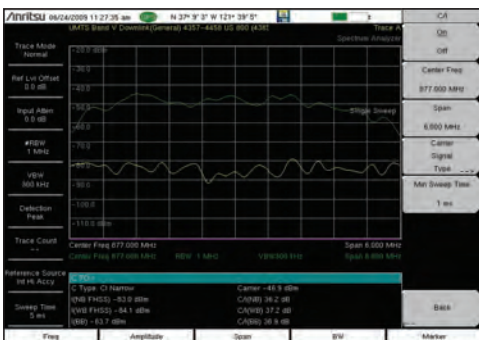

Carrier-to-Interference (C/I)

### Carrier-To-Interference Measurement

Spectrum Master's carrier-to-interference measurement capability makes it simple for you to determine if the level of interference will affect users in the intended service area.

### AM/FM/SSB Demodulation

A built-in demodulator for AM, narrowband FM, wideband FM and single sideband allows you to easily identify the interfering signal.



# Pin Point Location of Interfering Signal with Interference Mapping



Interference Mapping with Google Earth™

## Interference Mapping

The Interference Mapping measurement eliminates the need to use printed maps and draw lines to triangulate the interfering signal.

Using Map Master, it is easy to convert maps and make them compatible with the Spectrum Master. With a valid GPS signal, the instrument identifies the user location on the map. Using one of the recommended Anritsu Yagi antennas, you can identify the direction of the interfering signal and input the angle information with the rotary knob. With two or more lines from different locations, it is possible to obtain an estimate location of the interfering signal. The Interference Mapping can be done directly on the Spectrum Master. Files can also be saved as kml and opened with Google Earth™.


## Directional Antennas

Anritsu offers more than eight different directional antennas covering a wide range of frequency bands including: 822 to 900 MHz, 885 to 975 MHz, 1710 to 1880 MHz, 1850 to 1990 MHz, 2400 to 2500 MHz, 1920 to 2170 MHz, 500 to 3000 MHz, and 600 to 21000 MHz.



## GPS Antenna


The 2000-1528-R GPS antenna and Option 31 are required for the interference mapping and coverage mapping measurements.

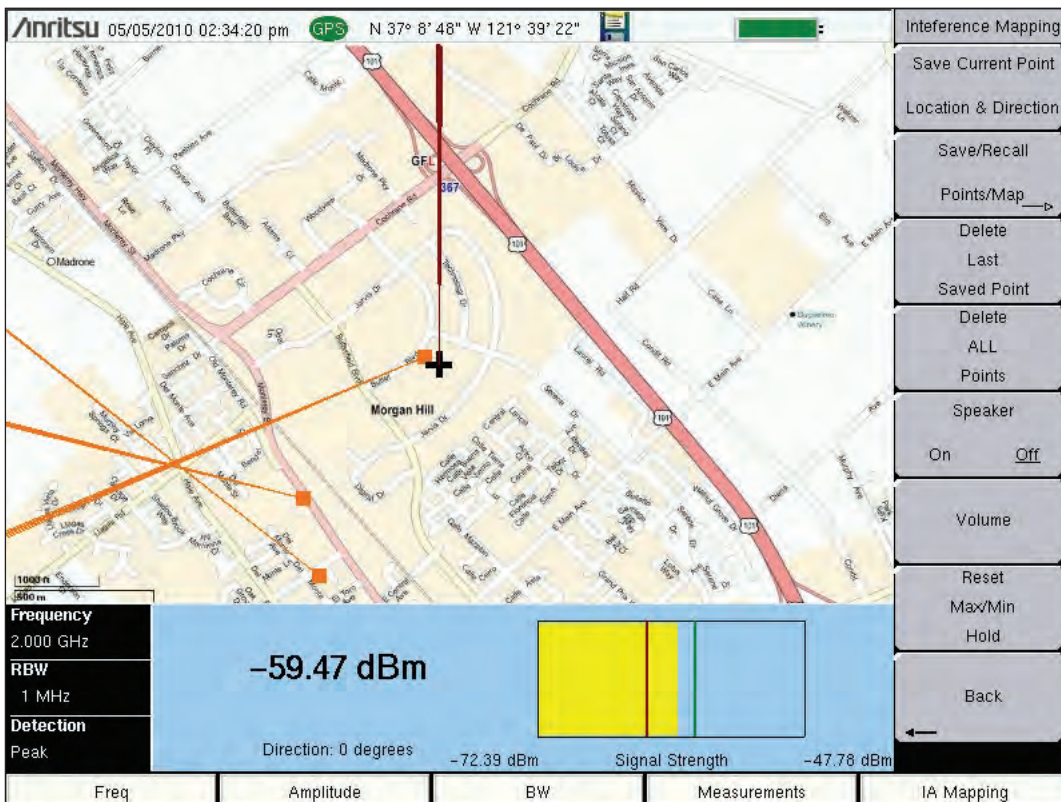

On Screen Interference Mapping

# Indoor and Outdoor Coverage Mapping Solutions (Option 0431)

There is a growing demand for coverage mapping solutions. Anritsu's Coverage Mapping measurements option provides wireless service providers, public safety users, land mobile radio operators, and government officials with indoor and outdoor mapping capabilities

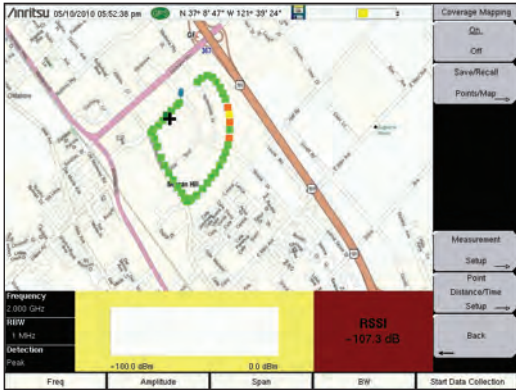


Outdoor Mapping

## Outdoor Mapping

With a GPS antenna connected to the instrument and a valid GPS signal, the instrument monitors RSSI and ACPR levels automatically. Using a map created with Map Master, the instrument displays maps, the location of the measurement, and a special color code for the power level. The refresh rate can be set up in time (1 sec, minimum) or distance.

The overall amplitude accuracy coupled with the GPS update rate ensures accurate and reliable mapping results

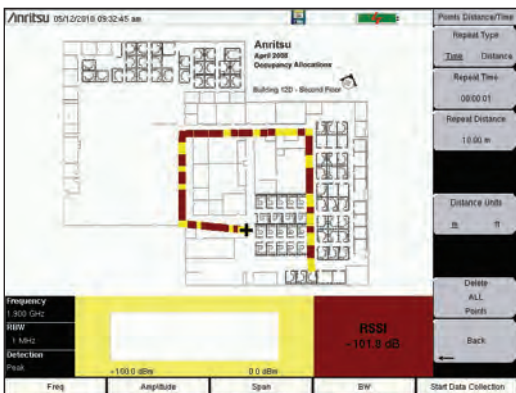

Indoor Mapping

## Indoor Mapping

When there is no GPS signal valid, the Spectrum Master uses a start-walk-stop approach to record RSSI and ACPR levels. You can set the update rate, start location, and end location and the interpolated points will be displayed on the map.



Saved KML File

## Export KML Files

Save files as KML or JPEG. Open kml files with Google Earth™.

When opening up a pin in Google Earth, center frequency, detection method, measurement type, and RBW are shown on screen.




Create maps with Map Master

## Map Master

The Map Master program creates maps compatible with the Spectrum Master. Maps are created by typing in the address or by converting existing JPEG, TIFF, BMP, GIF, and PNG files to MAP files. Utilizing the built-in zoom in and zoom out features, it is easy to create maps of the desired location and transfer to the instrument with a USB flash card. Map Master also includes a GPS editor for inputting latitude and longitude information of maps from different formats.

# Power Measurements for a Wide Range of Applications

The Spectrum Master supports many different power measurements, including the channel scanner, high accuracy power meter, internal power meter, and channel power measurement.

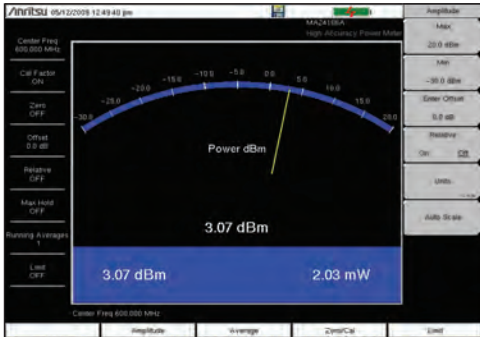


Power Meter



High Accuracy Power Meter



High Accuracy Power Sensors

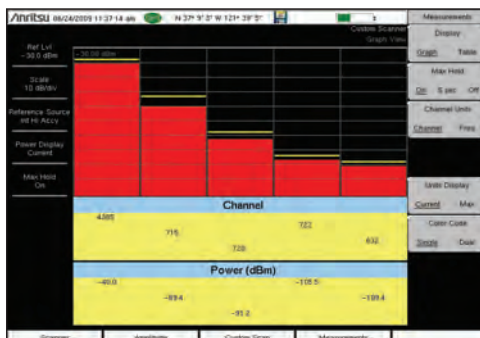

Channel Scanner

## Channel Power

Use Spectrum Master's channel power measurement to determine the power and power density of a transmission channel. Using the built-in signal standard list, you can measure the channel power of a wide range of signals.

## Power Meter (Option 29)

Spectrum Master's internal power meter provides power measurements without any additional tools and is ideal for making channelized power measurements. You can display the results in both dBm and Watts. This option is easy to use and requires limited setup entries.

## High Accuracy Power Meter (Option 19)

Anritsu's high accuracy power meter option enables you to make high accuracy RMS measurements. This capability is perfect for measuring both CW and digitally modulated signals such as CDMA/EV-DO, GSM/EDGE, and W-CDMA/HSPA+. You can select from a wide range of USB sensors delivering better than  $\pm 0.16$  dB accuracy. An additional benefit of using the USB connection is that a separate DC supply (or battery) is not needed because the necessary power is supplied by the USB port.

- PSN50 High Accuracy RF Power Sensor, 50 MHz to 6 GHz, -30 dBm to +20 dBm, True-RMS
- MA24104A Inline High Power Sensor, 600 MHz to 4 GHz, +3 dBm to +51.76 dBm, True-RMS
- MA24105A Inline Peak Power Sensor, 350 MHz to 4 GHz, +3 dBm to +51.76 dBm, True-RMS
- MA24106A High Accuracy RF Power Sensor, 50 MHz to 6 GHz, -40 dBm to +23 dBm, True-RMS
- MA24108A Microwave USB Power Sensor, 10 MHz to 8 GHz, -40 dBm to +20 dBm, True-RMS
- MA24118A, Microwave USB Power Sensor, 10 MHz to 18 GHz, -40 dBm to +20 dBm, True-RMS
- MA24126A, Microwave USB Power Sensor, 10 MHz to 26 GHz, -40 dBm to +20 dBm, True-RMS


## PC Power Meter

These power sensors can be used with a PC running Microsoft Windows® via USB. They come with PowerXpert™ application, a data analysis, and control software. The application has abundant features, such as data logging, power versus time graph, big numerical display, and many more, that enable quick and accurate measurements.

## Channel Scanner (Option 27)

The channel scanner option measures the power of multiple transmitted signals, making it very useful for simultaneously measuring channel power of up to 20 channels in GSM, TDMA, CDMA, W-CDMA, HSDPA, and public safety networks. You can select the frequencies or the scanned data to be displayed, either by frequencies or the channel number. And in the custom setup menu, each channel can be custom built with different frequency bandwidth, or with channels from different signal standards. With Script Master, scans can be automated for up to 1200 channels.


# Passive and Active Tracking Generator Measurements

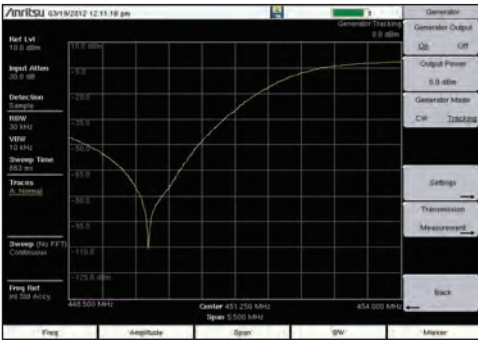

Tracking Generator Measurements

## Tracking Generator (Option 20)

Spectrum Master's Tracking Generator capability allows you to make gain, isolation and insertion loss measurements of passive and active devices such as filters, cables, attenuators, duplexers, and tower mounted amplifiers. The Tracking Generator can also be used to make antenna-to-antenna isolation measurements and for repeater testing. The output power level can be varied from -50 dBm to 0 dBm in 0.1 dB steps.

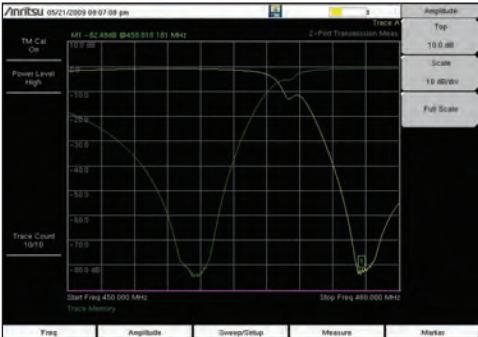

## Bias Tee (Option 10)


The built-in bias tee can be turned on as needed to place +12V to +32V on the center conductor of the RF In port, eliminating the need for you to carry external supplies in the field.

## Duplexers

Fast sweep speeds, 80 dB dynamic range, and easy-to-use trace math menus make the Spectrum Master well suited for duplexer applications.



# Valuable Options and Features

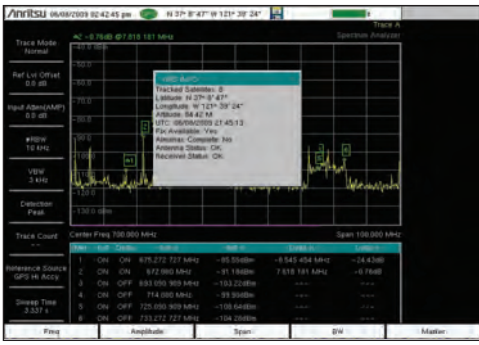


GPS Receiver

## GPS Receiver (Option 31)

Spectrum Master's GPS option can be used to confirm the exact measurement location (longitude, latitude, altitude) and Universal Time (UTC) information. Each trace can be stamped with location information to ensure you are taking measurements at the right location.

In addition, the GPS option enhances the frequency accuracy of the internal reference oscillator. Within three minutes of acquiring the GPS satellite, the built-in GPS receiver provides a frequency accuracy to better than 50 ppb.

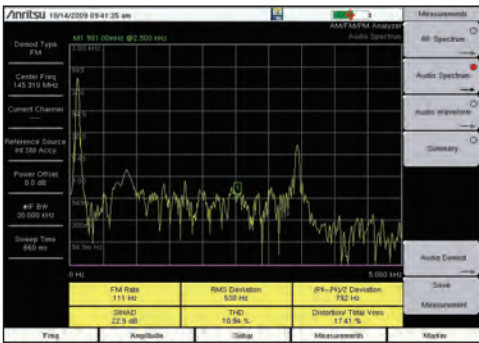

AM/FM/PM Analyzer


## AM/FM/PM Analyzer (Option 509)

The AM/FM/PM analyzer provides analysis and display of analog modulation. Four measurement displays are provided.

The RF Spectrum display shows the spectrum with carrier power, frequency, and occupied BW. The Audio Spectrum display shows the demodulated audio spectrum along with the Rate, RMS deviation, Pk-Pk/2 deviation, SINAD, Total Harmonic Distortion (THD), and Distortion/Total. Audio Waveform display shows the time-domain demodulated waveform. Finally, there is a Summary Table Display that includes all the RF and Demod parameters.

## Built-in Keyboard

The built-in touchscreen keyboard gives you access to a fully functional keyboard, saving valuable time in the field when entering trace names. You can create shortcuts to customer-configurable user "quick names" to program frequently used words.

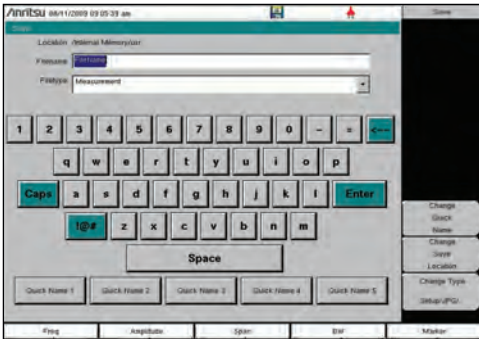


Touchscreen keyboard

## Ethernet Connectivity (Option 0411)

By enabling the MS2712E/MS2713E to communicate with PCs via Ethernet, you gain the ability to operate automated testing from your PC, or conversely, to upload data from field test to the PC. By using the Remote Access Tool (a utility provided with Anritsu's Master Software Tools), remote access control is provided.

## Local Language Support


Spectrum Master features eight languages, including English, Japanese, Chinese, Italian, French, German, Spanish, and Korean. Two custom user-defined languages can be uploaded into the instrument using Master Software Tools.

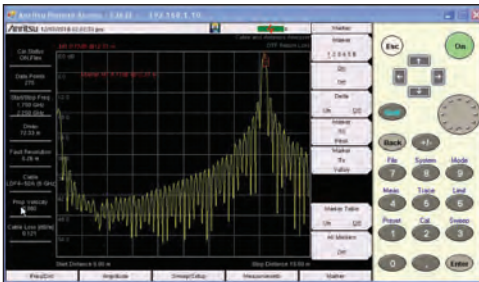

Remote Access Screen


# Spectrum Master™ Compact Handheld Spectrum Analyzer Features

## Introduction to Signal Analyzers

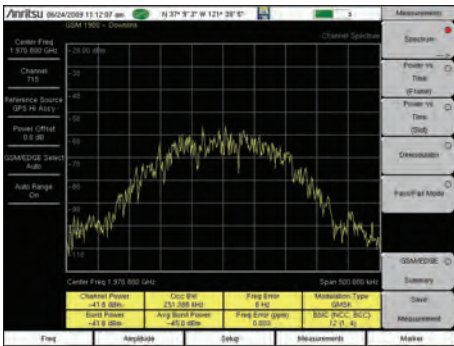

### RF Measurement – GSM

High Frequency Error will cause calls to drop when mobiles travel at higher speed. In some cases, cell phones cannot hand off into, or out of the cell.

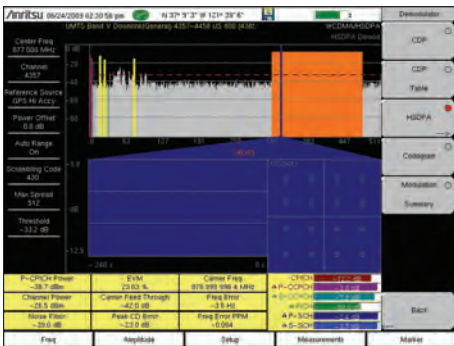

### Demodulation – HSDPA

This is the single most important signal quality measurement. Poor EVM leads to dropped calls, low data rate, low sector capacity, and blocked calls.

Param	Units	Adjusted	Multi	Red	Pass/Fail	Pass/Fail Status
1	dBm	-40.921	-41.0	-40.0	-40.2	Pass
2	dBm	1.000	0.1	11.2	-39.2	Pass
3	dBm	0.998	0.0	11.5	-39.9	Pass
4	dBm	0.997	0.0	11.1	-39.5	Pass
5	dBm	0.987	0.0	11.0	-39.7	Pass
6	dBm	1.000	0.1	10.8	-38.6	Pass
7	dBm	0.987	0.0	11.5	-39.6	Pass
8	dBm	0.992	0.1	11.7	-39.6	Pass
9	dBm	0.994	0.0	11.5	-39.0	Pass
10	dBm	1.000	0.0	11.5	-39.7	Pass
<b>Avg</b>		<b>0.679</b>	<b>0.985</b>	<b>0.0</b>	<b>11.3</b>	<b>-39.5</b>

### Over-the-Air Measurement - CDMA

Having low multi-path and high pilot dominance is required for quality Rho measurements OTA. Poor Rho leads to dropped and blocked calls, and low data rate.

Measurement	Value
Channel Power	-38.6 dBm
Pilot & MAC Power	-35.9 dBm
Active Data Power	-36.1 dBm
Carrier Freq	1.988 749 376 4 GHz
Freq Error	-23.6 Hz
Occ BW	---
Data Modulation	QPSK
Rho Overall1	0.9896
Rho Overall2	N/A
Rho Pilot	0.9805
Tau	N/A

### Measurement Summary – EV-DO

Having a summary of all key measurements is a quick way for a technician to see the health of the base station and record the measurements for reference.

## Signal Analyzers

The Spectrum Master features Signal Analyzers for the major wireless standards around the world. The Signal Analyzers are designed to test and verify the:

- RF Quality
- Modulation Quality
- Downlink Coverage Quality

of the base stations' transmitters.

The goal of these tests are to improve the Key Performance Indicators (KPIs) associated with:

- Call Drop Rate
- Call Block Rate
- Call Denial Rate

By understanding which test to perform on the Spectrum Master when the KPIs degrade to an unacceptable level, a technician can troubleshoot down to the Field Replacement Unit (FRU) in the base station's transmitter chain. This will minimize the problem of costly no trouble founds (NTF) associated with card swapping. This will allow you to have a lower inventory of spare parts as they are used more efficiently.

## Troubleshooting Guides

The screen shots on this page are all measurements made over-the-air with the MS2713E on commercial base stations carrying live traffic. To understand when, where, how, and why you make these measurements Anritsu publishes Troubleshooting Guides which explains for each measurement the:

- Guidelines for a good measurement
- Consequences of a poor measurement
- Common Faults in a base station

These *Troubleshooting Guides for Base Stations* are one-page each per Signal Analyzer. They are printed on tear-resistant and smudge-resistant paper and are designed to fit in the soft case of the instrument for easy reference in the field. They are complimentary and their part numbers can be found in the ordering information.

- GSM/EDGE Base Stations
- W-CDMA/HSPA+ Base Stations
- CDMA2000 1X Base Stations
- CDMA2000 1xEV-DO Base Stations
- Fixed WiMAX Base Stations
- Mobile WiMAX Base Stations
- TD-CDMA/HSPA+ Base Station

## Signal Analyzers

- GSM/EDGE
- W-CDMA/HSPA+
- cdmaOne/CDMA2000 1X
- CDMA2000 1xEV-DO
- Fixed WiMAX
- Mobile WiMAX
- TD-SCDMA

## Typical Signal Analyzer Options

- RF Measurements
- Demodulation
- Over-the-Air Measurements


## Signal Analyzer Features

- Measurement Summary Display
- Pass/Fail Limit Testing

# Spectrum Master™ Compact Handheld Spectrum Analyzer Features




## LTE Signal Analyzers (Option 0541, 0542, 0546, 0551, 0552, 0556)

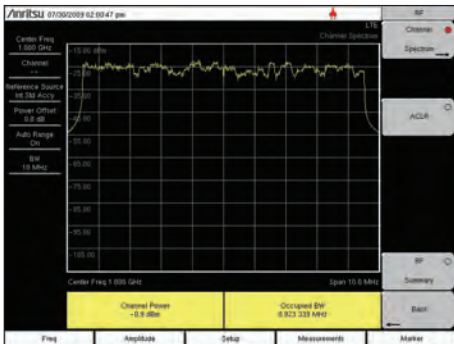

### RF Measurements – Occupied Bandwidth

The bandwidth that contains 99% of the total carrier power. Excessive occupied bandwidth means excessive adjacent channel interference.

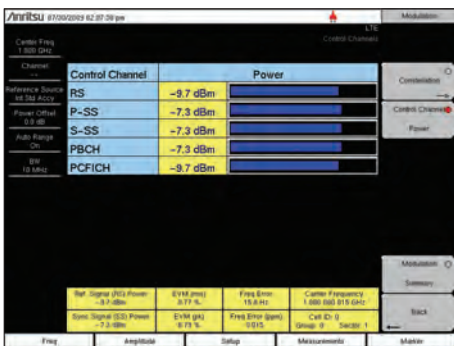


### Modulation Quality – EVM

High or low values will create larger areas of cell-to-cell interference and create lower data rates near cell edges. Low values affect in-building coverage.



**Over-the-Air Measurements – Sync Signal Power**  
Check for uneven amplitude of sub-carriers. Data will be less reliable on weak sub-carriers, creating a lower over-all data rate.

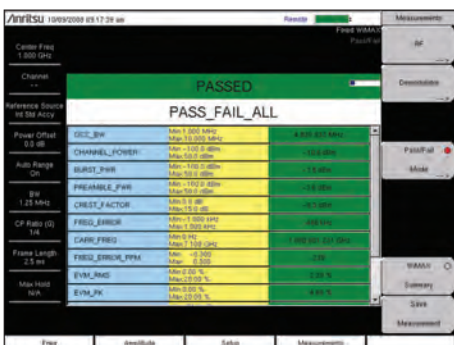

### Pass/Fail Test

Set up common test limits, or sets of limits, for each instrument. Inconsistent settings between base stations, leads to inconsistent network behavior.

## LTE Signal Analyzers

The Spectrum Master features three LTE measurement modes:

- RF Measurements
- Modulation Measurements
- Over-the-Air Measurements (OTA)

The goal of these measurements is to increase data rate and capacity by accurate power settings, ensuring low out-of-channel emissions, and good signal quality. These attributes help to create a low dropped call rate, a low blocked call rate, and a good customer experience.

Cell site technicians or RF engineers can make measurements Over-the-Air (OTA) to spot-check a transmitter's coverage and signal quality without taking the cell site off-line. When the OTA test results are ambiguous one can directly connect to the base station to check the signal quality and transmitter power.

### Adjacent Channel Leakage Ratio (ACLR)

Adjacent Channel Leakage Ratio (ACLR) measures how much BTS signal gets into neighboring RF channels. ACLR checks the closest (adjacent) and the second closest (alternate) channels. Poor ACLR can lead to interference with adjacent carriers and legal liability. It also can indicate poor signal quality which leads to low throughput.

### Cell ID (Sector ID, Group ID)

Cell ID indicates which base station is being measured OTA. The strongest base station at your current location is selected for measurement. Wrong values for Cell ID lead to inability to register. If the cause is excessive overlapping coverage, it also will lead to poor EVM and low data rates

### Frequency Error

Frequency Error is a check to see that the carrier frequency is precisely correct. The Spectrum Master can accurately measure Carrier Frequency Error OTA if the instrument is GPS enabled. Calls will drop when mobiles travel at higher speed. In some cases, cell phones cannot hand off into, or out of the cell.

### Sync Signal Mapping

Sync Signal Scanner can be used with the GPS to save scan results for later display on a map. The EVM of the strongest synch signal available at that spot is also recorded. The Cell, Sector, and Group ID information is also included so that it's easier to interpret the results. Once the Synch Signals are mapped, it becomes much easier to understand and troubleshoot any interference or coverage issues.

## RF Measurements (Option 0541 FDD) (Option 0551 TDD)

- Channel Spectrum
  - Channel Power
  - Occupied Bandwidth
- Power vs. Time (TDD only)
  - Frame View
  - Sub-Frame View
  - Total Frame Power
  - DwPTS Power
  - Transmit Off Power
  - Cell ID
  - Timing Error

### ACPR

- Spectral Emission Mask
  - Category A or B (Opt 1)

### RF Summary

## Modulation Measurements (Option 0542 FDD) (Option 0552 TDD)

- Power vs. Resource Block (RB)
  - RB Power (PDSCH)
  - Active RBs, Utilization %
  - Channel Power, Cell ID
  - OSTP, Frame EVM by modulation (FDD only)

### Constellation

- QPSK, 16 QAM, 64 QAM

### Modulation Results

- Ref Signal Power (RS)
- Sync Signal Power (SS)
- EVM – rms, peak, max hold
- Frequency Error – Hz, ppm
- Carrier Frequency
- Cell ID

### Control Channel Power

- Bar Graph or Table View
- RS, P-SS, S-SS
- PBCH, PCFICH, PHICH, PDCCCH
- Total Power (Table View)
- EVM
- Modulation Results

### Tx Time Alignment

### Modulation Summary

- Includes EVM by modulation (FDD only)

### Antenna Icons

- Detects active antennas (1/2)

## Over-the-Air (OTA) (Option 0546 FDD) (Option 0556 TDD)

### Scanner

- Cell ID (Group, Sector)
- S-SS Power, RSRP, RSRQ, SINR
- Dominance
- Modulation Results – On/Off

### Tx Test

- Scanner
  - RS Power of MIMO antennas
  - Cell ID, Average Power
  - Delta Power (Max-Min)
  - Graph of Antenna Power
  - Modulation Results – On/Off


### Mapping

- On-screen
  - S-SS Power, RSRP, RSRQ, or SINR
- Scanner
  - Modulation Results – Off

# Spectrum Master™ Compact Handheld Spectrum Analyzer Features




## GSM/EDGE Signal Analyzers (Options 0040, 0041)

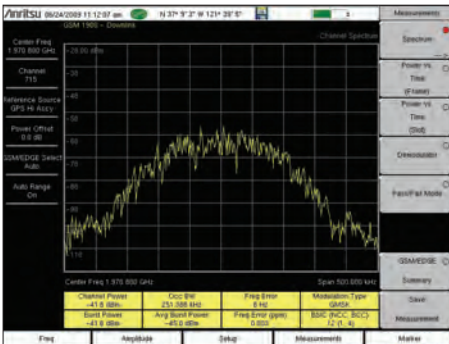


### RF Measurement – Occupied Bandwidth

Excessive occupied bandwidth can create interference with adjacent channels or be a sign of poor signal quality, leading to dropped calls.

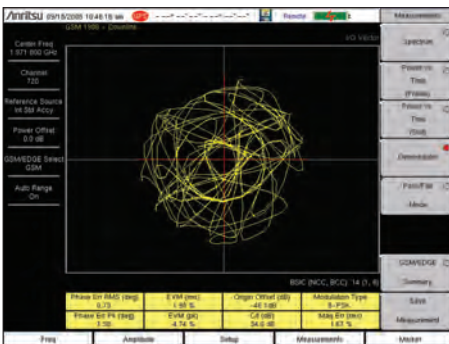


### Demodulation – Error Vector Magnitude (EVM)

This is the single most important signal quality measurement. Poor EVM leads to dropped calls, low data rate, low sector capacity, and blocked calls.

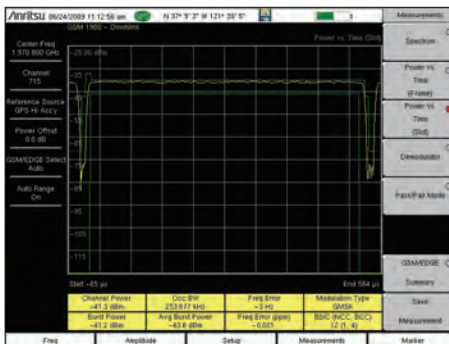

### RF Measurement – Average Burst Power

High or low values will create larger areas of cell-to-cell interference and create lower data rates near cell edges. Low values create dropouts and dead zones.

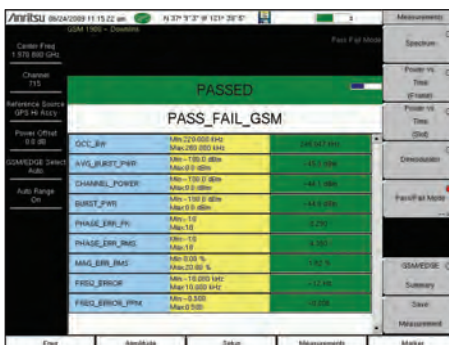

### Pass/Fail Test

Set up common test limits, or sets of limits, for each instrument. Inconsistent settings between base stations, leads to inconsistent network behavior.

## GSM/EDGE Analyzers

The Spectrum Master features two GSM/EDGE measurement modes.

- RF Measurements
- Demodulation

The goal of these measurements is to increase data rate and capacity by accurate power settings, ensuring low out-of-channel emissions, and good signal quality. These attributes help to create a low dropped call rate, a low blocked call rate, and a good customer experience.

Cell site technicians or RF engineers can make measurements Over-the-Air (OTA) to spot-check a transmitter's coverage and signal quality without taking the cell site off-line. When the OTA test results are ambiguous one can directly connect to the base station to check the signal quality and transmitter power.

For easy identification of which cell you are measuring the Base Station Identity Code (BSIC) gives the base station id, the Network Color Code (NCC) identifies the owner of the network, and the Base Station Color Code (BCC) provides the sector information.

## Carrier-to-Interference (C/I)

C/I indicates the quality of the received signal. It also can be used to identify areas of poor signal quality. Low C/I ratios will cause coverage issues including dropped calls, blocked calls, and other handset reception problems.

## Phase Error

Phase Error is a measure of the phase difference between an ideal and actual GMSK modulated voice signal. High phase error leads to dropped calls, blocked calls, and missed handoffs.

## Origin Offset

Origin Offset is a measure of the DC power leaking through local oscillators and mixers. A high Origin Offset will lower EVM and Phase Error measurements and create higher dropped call rates.

## Power versus Time (Slot and Frame)

Power versus Time (Slot and Frame) should be used if the GSM base station is setup to turn RF power off between timeslots. When used OTA, this measurement can also spot GSM signals from other cells. Violations of the mask create dropped calls, low capacity, and small service area issues.

## RF Measurements (Option 0040)

### Channel Spectrum

- Channel Power
- Occupied Bandwidth
- Burst Power
- Average Burst Power
- Frequency Error
- Modulation Type
- BSIC (NCC, BCC)

### Multi-channel Spectrum

#### Power vs. Time (Frame/Slot)

- Channel Power
- Occupied Bandwidth
- Burst Power
- Average Burst Power
- Frequency Error
- Modulation Type
- BSIC (NCC, BCC)

## Demodulation (Option 0041)

### Phase Error


- EVM
- Origin Offset
- C/I
- Modulation Type
- Magnitude Error
- BSIC (NCC, BCC)



# Spectrum Master™ Compact Handheld Spectrum Analyzer Features




## W-CDMA/HSPA+ Signal Analyzers (Options 0044, 0065, 0035)

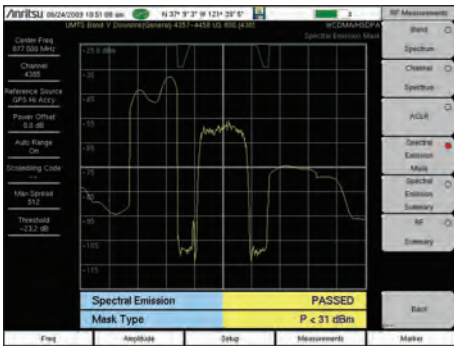

### RF Measurements – Spectral Emissions Mask

The 3GPP spectral emission mask is displayed. Failing this test leads to interference with neighboring carriers, legal liability, and low signal quality.

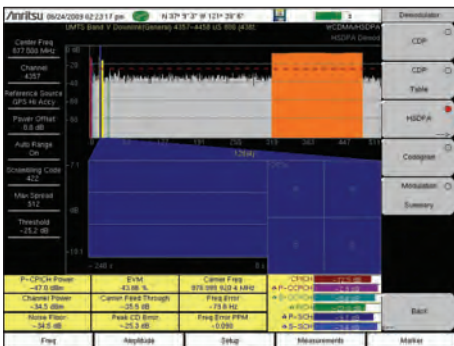


### Demodulation – Error Vector Magnitude (EVM)

This is the single most important signal quality measurement. Poor EVM leads to dropped calls, low data rate, low sector capacity, and blocked calls.



### Over-the-Air Measurements – Scrambling Codes

Too many strong sectors at the same location creates pilot pollution. This leads to low data rate, low capacity, and excessive soft handoffs.

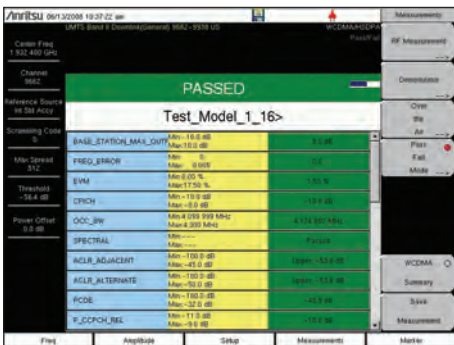

### Pass/Fail Test

Set up common test limits, or sets of limits, for each instrument. Inconsistent settings between base stations leads to inconsistent network behavior.

## W-CDMA/HSPA+ Signal Analyzers

The Spectrum Master features four W-CDMA/HSPA+ measurement modes:

- RF Measurements
- Demodulation (two choices)
- Over-the Air Measurements (OTA)

The goal of these measurements is to increase data rate and capacity by accurate power settings, ensuring low out-of-channel emissions, and good signal quality. These attributes help to create a low dropped call rate, a low blocked call rate, and a good customer experience.

Cell site technicians or RF engineers can make measurements Over-the-Air (OTA) to spot-check a transmitter's coverage and signal quality without taking the Node B off-line. When the OTA test results are ambiguous one can directly connect to the base station to check the signal quality and transmitter power.

### Frequency Error

Frequency Error is a check to see that the carrier frequency is precisely correct. The Spectrum Master can accurately measure Carrier Frequency Error OTA if the instrument is GPS enabled. Calls will drop when mobiles travel at higher speed. In some cases, cell phones cannot hand off into, or out of the cell.

### Peak Code Domain Error (PCDE)

Peak Code Domain Error is a measure of the errors between one code channel and another. High PCDE causes dropped calls, low signal quality, low data rate, low sector capacity, and blocked calls.

### Multipath

Multipath measurements show how many, how long, and how strong the various radio signal paths are. Multipath signals outside tolerances set by the cell phone or other UE devices become interference. The primary issue is co-channel interference leading to dropped calls and low data rates.

### Pass/Fail Mode

The Spectrum Master stores the five test models covering all eleven test scenarios specified in the 3GPP specification (TS 25.141) for testing base station performance and recalls these models for quick easy measurements.

### RF Measurements (Option 0044)

- Band Spectrum
- Channel Spectrum
- Channel Power
- Occupied Bandwidth
- Peak-to-Average Power
- Spectral Emission Mask
- Single carrier ACLR
- Multi-carrier ACLR
- RF Summary

### Demodulation (Option 0065)

- Code Domain Power Graph
- P-CPICH Power
- Channel Power
- Noise Floor
- EVM
- Carrier Feed Through
- Peak Code Domain Error
- Carrier Frequency
- Frequency Error
- Control Channel Power
- Abs/Rel/Delta Power
- CPICH, P-CCPCH
- S-CCPCH, PICH
- P-SCH, S-SCH

### HSPA+

- Power vs. Time
- Constellation
- Code Domain Power Table
- Code, Status
- EVM, Modulation Type
- Power, Code Utilization
- Power Amplifier Capacity
- Codogram
- Modulation Summary


### Over-the-Air (OTA) Measurements (Option 0035)

- Scrambling Code Scanner (Six)
- Scrambling Codes
- CPICH
- $E_c/I_0$
- $E_c$
- Pilot Dominance
- OTA Total Power
- Multipath Scanner (Six)
- Six Multipaths
- Tau
- Distance
- RSCP
- Relative Power
- Multipath Power

# Spectrum Master™ Compact Handheld Spectrum Analyzer Features




## CDMA Signal Analyzers (Options 0042, 0043, 0033)

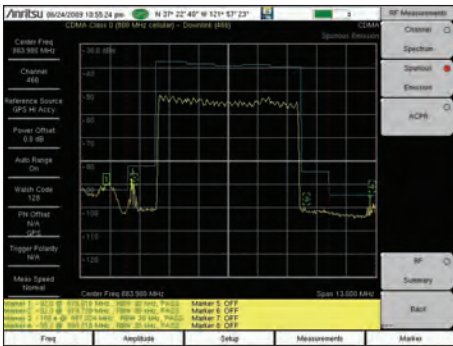


### RF Measurements – Spectral Emissions Mask

The 3GPP spectral emission mask is displayed. Failing this test leads to interference with neighboring carriers, legal liability, and low signal quality.

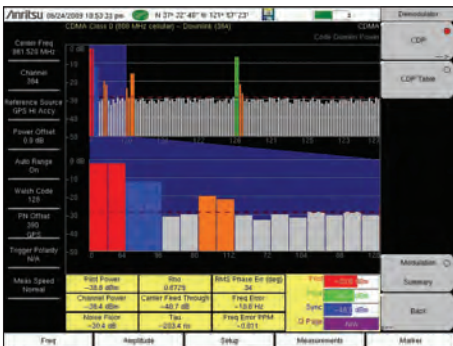


### Modulation Quality – EVM

High or low values will create larger areas of cell-to-cell interference and create lower data rates near cell edges. Low values affect in-building coverage.

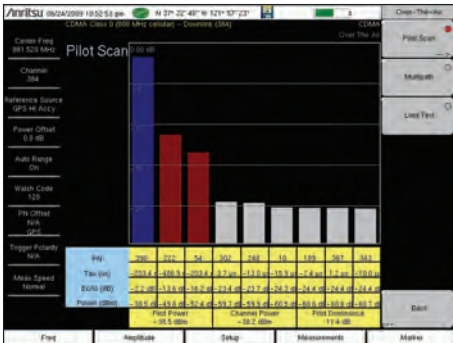

**Over-the-Air Measurements – Sync Signal Power**  
Check for uneven amplitude of sub-carriers. Data will be less reliable on weak sub-carriers, creating a lower over-all data rate.

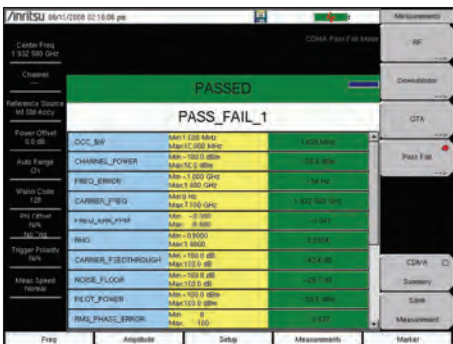

### Pass/Fail Test

Set up common test limits, or sets of limits, for each instrument. Inconsistent settings between base stations leads to inconsistent network behavior.

## CDMA Signal Analyzers

The Spectrum Master features three CDMA measurement modes:

- RF Measurements
- Demodulation
- Over-the Air Measurements (OTA)

The goal of these measurements is to increase data rate and capacity by accurate power settings, ensuring low out-of-channel emissions, and good signal quality. These attributes help to create a low dropped call rate, a low blocked call rate, and a good customer experience.

Cell site technicians or RF engineers can make measurements Over-the-Air (OTA) to spot-check a transmitter's coverage and signal quality without taking the cell site off-line. When the OTA test results are ambiguous one can directly connect to the base station to check the signal quality and transmitter power.

### Adjacent Channel Power Ratio (ACPR)

ACPR measures how much of the carrier gets into neighboring RF channels. ACPR, and multi-channel ACPR, check the closest (adjacent) and second closest (alternate) RF channels for single and multicarrier signals. High ACPR will create interference for neighboring carriers. This is also an indication of low signal quality and low capacity, which can lead to blocked calls.

### RMS Phase Error

RMS Phase Error is a measure of signal distortion caused by frequency instability. Any changes in the reference frequency or the radio's internal local oscillators will cause problems with phase error. A high reading will cause dropped calls, low signal quality, low data rate, low sector capacity, and blocked calls.

### Noise Floor

Noise Floor is the average level of the visible code domain noise floor. This will affect Rho. A high noise floor will result in dropped calls, low signal quality, low data rate, low sector capacity, and blocked calls.

### $E_c/I_o$

$E_c/I_o$  indicates the quality of the signal from each PN. Low  $E_c/I_o$  leads to low data rate and low capacity.

### RF Measurements (Option 0042)

- Channel Spectrum
  - Channel Power
  - Occupied Bandwidth
  - Peak-to-Average Power
- Spectral Emission Mask
- Multi-carrier ACPR
- RF Summary

### Demodulation (Option 0043)

- Code Domain Power Graph
  - Pilot Power
  - Channel Power
  - Noise Floor
  - Rho
  - Carrier Feed Through
  - Tau
- RMS Phase Error
- Frequency Error
- Abs/Rel/ Power
  - Pilot
  - Page
  - Sync
  - Q Page

### Code Domain Power Table

- Code
- Status
- Power
- Multiple Codes
- Code Utilization

### Modulation Summary


### Over-the-Air (OTA) Measurements (Option 0033)

- Pilot Scanner (Nine)
  - PN
  - $E_c/I_o$
  - Tau
  - Pilot Power
  - Channel Power
  - Pilot Dominance
- Multipath Scanner (Six)
  - $E_c/I_o$
  - Tau
  - Channel Power
  - Multipath Power
- Limit Test – 10 Tests Averaged
  - Rho
  - Adjusted Rho
  - Multipath
  - Pilot Dominance
  - Pilot Power
  - Pass/Fail Status

# Spectrum Master™ Compact Handheld Spectrum Analyzer Features




## EV-DO Signal Analyzers (Options 0062, 0063, 0034)

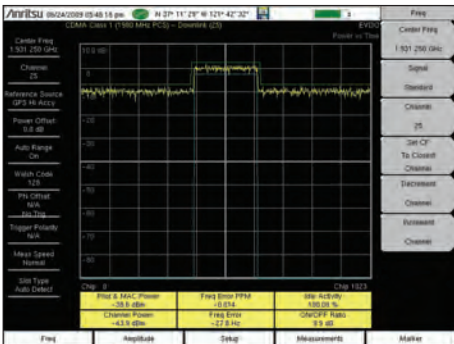


### RF Measurements – Pilot and MAC Power

High values will create pilot pollution. High or low values will cause dead spots/dropped calls and cell loading imbalances/blocked calls.

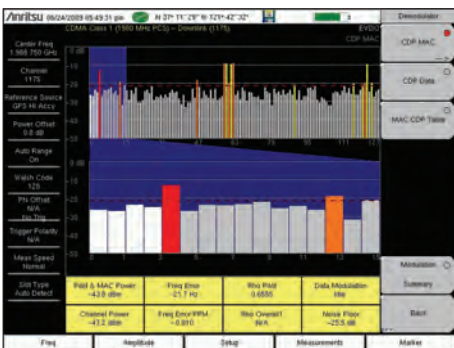

### Demodulation – Frequency Error

Calls will drop when mobiles travel at higher speed. In some cases, cell phones cannot hand off into, or out of the cell, creating island cells.

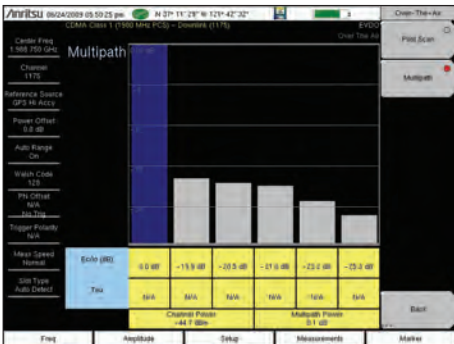

### Over-the-Air Measurements – Multipath

Too much Multipath from the selected PN Code is the primary issue of co-channel interference leading to dropped calls and low data rates.



### Pass/Fail Test

Set up common test limits, or sets of limits, for each instrument. Inconsistent settings between base stations leads to inconsistent network behavior.

## EV-DO Signal Analyzers

The Spectrum Master features three EV-DO measurement modes.

- RF Measurements
- Demodulation
- Over-the Air Measurements (OTA)

The goal of these measurements is to increase data rate and capacity by accurate power settings, ensuring low out-of-channel emissions, and good signal quality. These attributes help to create a low dropped call rate, a low blocked call rate, and a good customer experience.

Cell site technicians or RF engineers can make measurements Over-the-Air (OTA) to spot-check a transmitter's coverage and signal quality without taking the cell site off-line. When the OTA test results are ambiguous one can directly connect to the base station to check the signal quality and transmitter power.

### Spectral Emission Mask (SEM)

SEM is a way to check out-of-channel spurious emissions near the carrier. These spurious emissions both indicate distortion in the signal and can create interference with carriers in the adjacent channels. Faults lead to interference and thus, lower data rates, for adjacent carriers. Faults also may lead to legal liability and low in-channel signal quality.

### Rho

Rho is a measure of modulation quality. Rho Pilot, Rho Mac, and Rho Data are the primary signal quality tests for EV-DO base stations. Low Rho results in dropped calls, low signal quality, low data rate, low sector capacity, and blocked calls. This is the single most important signal quality measurement.

### PN Codes

PN Code overlap is checked by the pilot scanner. Too many strong pilots create pilot pollution which results in low data rate, low capacity, and excessive soft handoffs.

### Over-the-Air (OTA) Pilot Power

OTA Pilot Power indicates signal strength. Low OTA Pilot Power causes dropped calls, low data rate, and low capacity.

### RF Measurements (Option 0062)

- Channel Spectrum
  - Channel Power
  - Occupied Bandwidth
  - Peak-to-Average Power

- Power vs. Time
  - Pilot & MAC Power
  - Channel Power
  - Frequency Error
  - Idle Activity
  - On/Off Ratio

- Spectral Emission Mask
- Multi-carrier ACPR
- RF Summary

### Demodulation (Option 0063)

- MAC Code Domain Power Graph

- Pilot & MAC Power
- Channel Power
- Frequency Error
- Rho Pilot
- Rho Overall
- Data Modulation
- Noise Floor

- MAC Code Domain Power Table

- Code
- Status
- Power
- Code Utilization

- Data Code Domain Power

- Active Data Power
- Data Modulation
- Rho Pilot
- Rho Overall
- Maximum Data CDP
- Minimum Data CDP

- Modulation Summary

### Over-the-Air (OTA) Measurements (Option 0034)

- Pilot Scanner (Nine)

- PN
- $E_c/I_0$
- Tau
- Pilot Power

- Channel Power
- Pilot Dominance


- Multipath Scanner (Six)

- $E_c/I_0$
- Tau
- Channel Power
- Multipath Power

# Spectrum Master™ Compact Handheld Spectrum Analyzer Features




## Fixed WiMAX Signal Analyzers (Options 0046, 0047)

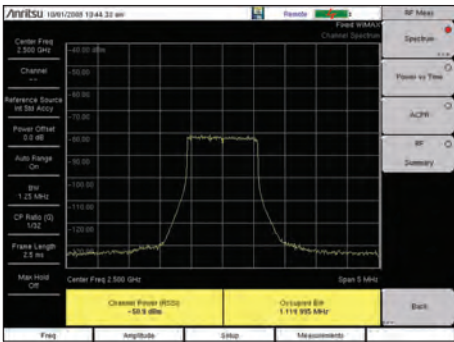


### RF Measurements – Occupied Bandwidth

The bandwidth that contains 99% of the total carrier power. Excessive occupied bandwidth means excessive adjacent channel interference.

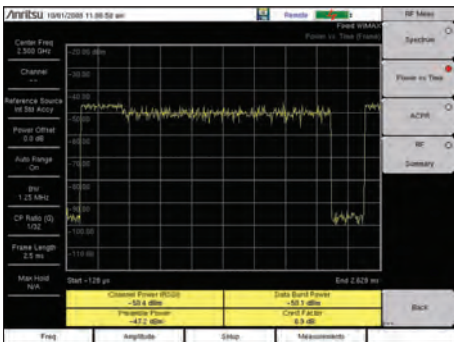

### RF Measurement – Preamble Power

High or low values will create larger areas of cell-to-cell interferences and create lower data rates near cell edges. Low values affect in-building coverage.

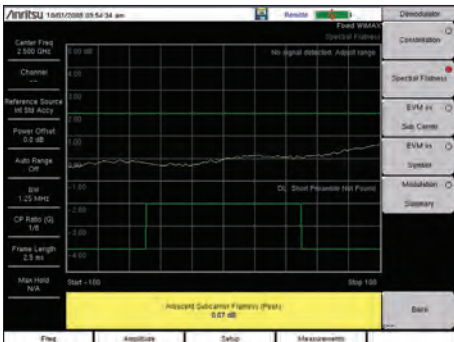

### Demodulation – Spectral Flatness

Check for uneven amplitude of sub-carriers. Data will be less reliable on weak sub-carriers, creating a lower over-all data rate.



### Pass/Fail Test

Set up common test limits, or sets of limits, for each instrument. Inconsistent settings between base stations leads to inconsistent network behavior.

## Fixed WiMAX Signal Analyzers

The Spectrum Master features two Fixed WiMAX measurement modes:

- RF Measurements
- Demodulation

The goal of these measurements is to increase data rate and capacity by accurate power settings, ensuring low out-of-channel emissions, and good signal quality. These attributes help to create a low dropped call rate, a low blocked call rate, and a good customer experience.

Cell site technicians or RF engineers can make measurements Over-the-Air (OTA) to spot-check a transmitter's coverage and signal quality without taking the cell site off-line. When the OTA test results are ambiguous one can directly connect to the base station to check the signal quality and transmitter power.

### Adjacent Channel Power Ratio (ACPR)

Adjacent Channel Power Ratio (ACPR) measures how much BTS signal gets into neighboring RF channels. ACPR checks the closest (adjacent) and the second closest (alternate) channels. Poor ACPR can lead to interference with adjacent carriers and legal liability. It also can indicate poor signal quality which leads to low throughput.

### Base Station ID

Base Station ID indicates which base station is being measured OTA. The strongest base station at your current location is selected for measurement. Wrong values for base station ID lead to inability to register. If the cause is excessive overlapping coverage, it also will lead to poor RCE and low data rates.

### Relative Constellation Error (RCE)

RCE, when used Over-the-Air (OTA), is a test that is ideal for checking received signal quality. High RCE leads directly to low data rate, which creates dissatisfied customers and lowers the data capacity of the sector. Very high RCE results in dropped calls, timeouts, and inability to register.

### Adjacent Subcarrier Flatness (Peak)

Adjacent Subcarrier Flatness (Peak) is measured between one sub-carrier and the next. Poor flatness will give the weaker sub-carriers a high bit error rate and lower capacity. Data will be less reliable on weak sub-carriers, creating a lower over-all data rate.

### RF Measurements (Option 0046)

- Channel Spectrum
  - Channel Power
  - Occupied Bandwidth
- Power vs. Time
  - Channel Power
  - Preamble Power
  - Data Burst Power
  - Crest Factor
- ACL
- RF Summary


### Demodulation (Option 0047)

- Constellation
  - RCE (RMS/Peak)
  - EVM (RMS/Peak)
  - Frequency Error
  - Carrier Frequency
  - Base Station ID
- Spectral Flatness
  - Adjacent Subcarrier Flatness
- EVM vs. Subcarrier/Symbol
  - RCE
  - EVM
  - Frequency Error
  - Carrier Frequency
  - Base Station ID
- Modulation Summary

# Spectrum Master™ Compact Handheld Spectrum Analyzer Features




## Mobile WiMAX\* Signal Analyzers (Options 0066, 0067, 0037)

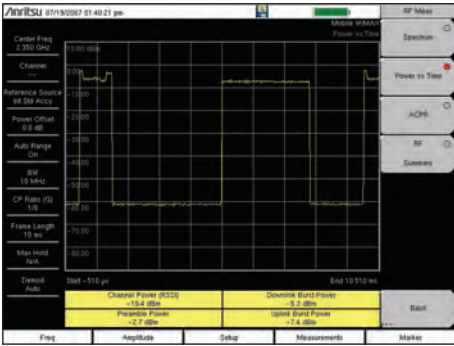


### RF Measurement – Preamble Power

High or low values will create larger areas of cell-to-cell interference and create lower data rates near cell edges. Low values affect in-building coverage.

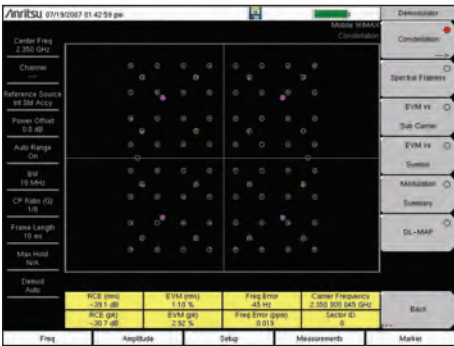


### Demodulation – Frequency Error

Calls will drop when user's equipment travels at high speed. In severe cases, handoffs will not be possible at any speed, creating island cells.

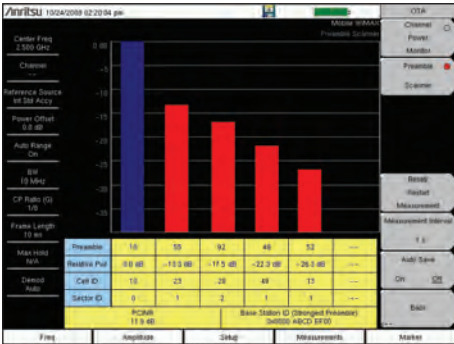

### Over-the-Air Measurements – PCINR

A low Physical Carrier to Interference plus Noise Ratio (PCINR) indicates poor signal quality, low data rate and reduced sector capacity.

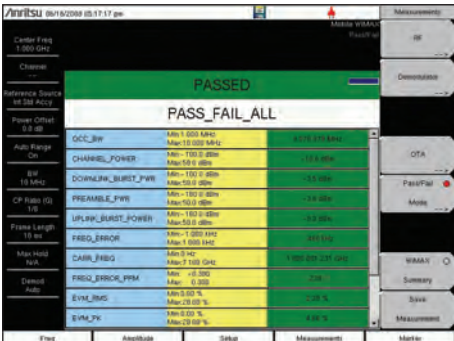

### Pass/Fail Test

Set up common test limits, or sets of limits, for each instrument. Inconsistent settings between base stations leads to inconsistent network behavior.

## Mobile WiMAX Signal Analyzers

The Spectrum Master features three Mobile WiMAX measurement modes:

- RF Measurements
- Demodulation
- Over-the Air Measurements (OTA)

The goal of these measurements is to increase data rate and capacity by accurate power settings, ensuring low out-of-channel emissions, and good signal quality. These attributes help to create a low dropped call rate, a low blocked call rate, and a good customer experience.

Cell site technicians or RF engineers can make measurements Over-the-Air (OTA) to spot-check a transmitter's coverage and signal quality without taking the cell site off-line. When the OTA test results are ambiguous one can directly connect to the base station to check the signal quality and transmitter power.

### Cell ID, Sector ID, and Preamble

Cell ID, Sector ID, and Preamble show which cell, sector, and segment are being measured OTA. The strongest signal is selected automatically for the additional PCINR and Base Station ID measurement. Wrong values for cell, sector and segment ID lead to dropped handoffs and island cells. If the cause is excessive coverage, it also will lead to large areas of low data rates.

### Error Vector Magnitude (EVM) Relative Constellation Error (RCE)

RCE and EVM measure the difference between the actual and ideal signal. RCE is measured in dB and EVM in percent. A known modulation is required to make these measurements. High RCE and EVM causes low signal quality, low data rate, and low sector capacity. This is the single most important signal quality measurement.

### Preamble Mapping (Mobile WiMAX)

Preamble Scanner can be used with the GPS to save scan results for later display on a map. PCINR ratio for the strongest WiMAX preamble available at that spot. The Base Station ID and Sector ID information are also included so that it's easier to interpret the results. Once PCINR data is mapped, it becomes much easier to understand and troubleshoot any interference or coverage issues.

### RF Measurements (Option 0066)

- Channel Spectrum
- Channel Power
- Occupied Bandwidth
- Power vs. Time
- Channel Power
- Preamble Power
- Downlink Burst Power
- Uplink Burst Power

### ACPR

RF Summary

### Demodulation (Option 0067)

Constellation


- RCE (RMS/Peak)
- EVM (RMS/Peak)
- Frequency Error
- CINR
- Base Station ID
- Sector ID
- Spectral Flatness
- Adjacent Subcarrier Flatness
- EVM vs. Subcarrier/Symbol
- RCE (RMS/Peak)
- EVM (RMS/Peak)
- Frequency Error
- CINR
- Base Station ID
- Sector ID
- DL-MAP (Tree View)
- Modulation Summary

### Over-the-Air (OTA) (Option 0037)

Channel Power Monitor

Preamble Scanner (Six)

- Preamble
- Relative Power
- Cell ID
- Sector ID
- PCINR
- Dominant Preamble
- Base Station ID

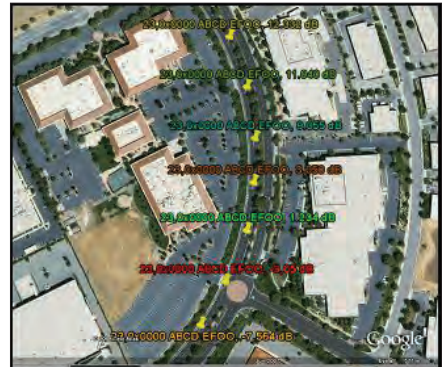


\* Conforms to IEEE Std. 802.16e-2005, WiMAX Forum® Air Interface - Mobile System Profile - Release 1.0 Certified, System Profiles according to WMF-T24-001-R010v07.

# Spectrum Master™ Compact Handheld Spectrum Analyzer Features




## TD-SCDMA/HSPA+ Signal Analyzers (Options 0060, 0061, 0038)

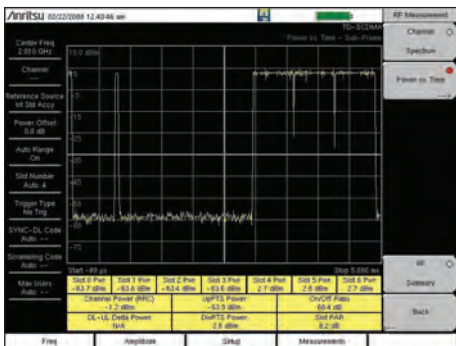


### RF Measurement – Time Slot Power

Empty downlink slots with access power will reduce the sensitivity of the receiver and the size of the sector. This will cause dropped and blocked calls.

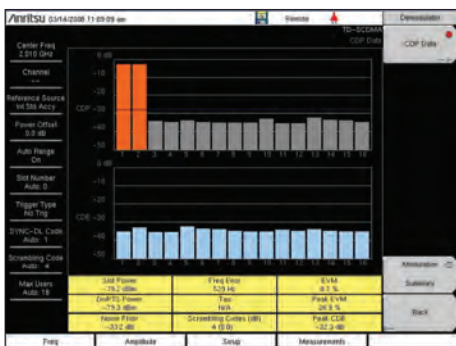

### Demodulation – Scrambling Code

Scrambling Code measurements provide a check for the BTS settings. Scrambling Code errors can cause a very high dropped call rate on hand off.

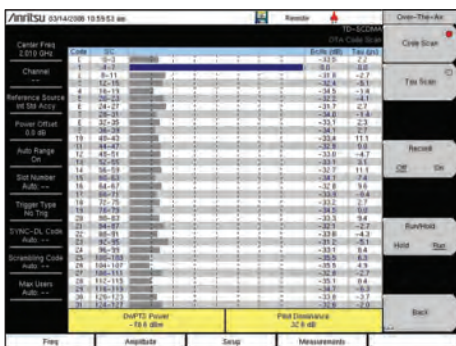

## TD-SCDMA/HSPA+ Signal Analyzers

The Spectrum Master features three TD-SCDMA/HSPA+ measurement modes:

- RF Measurements
- Demodulation
- Over-the Air Measurements (OTA)

The goal of these measurements is to increase data rate and capacity by accurate power settings, ensuring low out-of-channel emissions, and good signal quality. These attributes help to create a low dropped call rate, a low blocked call rate, and a good customer experience.

Cell site technicians or RF engineers can make measurements Over-the-Air (OTA) to spot-check a transmitter's coverage and signal quality without taking the cell site off-line. When the OTA test results are ambiguous one can directly connect to the base station to check the signal quality and transmitter power.

Error Vector Magnitude (EVM) EVM is the ratio of errors, or distortions, in the actual signal, compared to a perfect signal. EVM faults will result in poor signal quality to all user equipment. In turn, this will result in extended hand off time, lower sector capacity, and lower data rates, increasing dropped and blocked calls.

### Peak Code Domain Error (Peak CDE)

Peak CDE is the EVM of the worst code. Code Domain displays show the traffic in a specific time slot. Peak CDE faults will result in poor signal quality to all user equipment. In turn, this will result in extended hand off time, lower sector capacity, and lower data rates.

### OTA Tau Scanner $E_c/I_o$

$E_c/I_o$  faults indicate excessive or inadequate coverage and lead to low capacity, low data rates, extended handoffs, and excessive call drops.

### DwPTS OTA Power Mapping

DwPTS OTA Power when added to  $E_c/I_o$  gives the absolute sync code power which is often proportional to PCCPCH (pilot) power. Use this to check and plot coverage with GPS. Coverage plots can be downloaded to PC based mapping programs for later analysis. Poor readings will lead to low capacity, low data rates, excessive call drops and call blocking.

### RF Measurements (Option 0060)

- Channel Spectrum
- Channel Power
- Occupied Bandwidth
- Left Channel Power
- Right Channel Occ B/W
- Right Channel Power
- Right Channel Occ B/W

### Power vs. Time

- Six Slot Powers
- Channel Power (RRC)
- DL-UL Delta Power
- UpPTS Power
- DwPTS Power
- On/Off Ratio
- Slot Peak-to-Average Power

### Spectral Emission

### RF Summary

### Demodulation (Option 0061)

- Code Domain Power/Error (QPSK/8 PSK/16 QAM)
- Slot Power
- DwPTS Power
- Noise Floor
- Frequency Error
- Tau
- Scrambling Code
- EVM
- Peak EVM
- Peak Code Domain Error


### Modulation Summary

### Over-the-Air (OTA) Measurements (Option 0038)

- Code Scan (32)
- Scrambling Code Group
- Tau
- $E_c/I_o$
- DwPTS Power
- Pilot Dominance
- Tau Scan (Six)
- Sync-DL#
- Tau
- $E_c/I_o$
- DwPTS Power
- Pilot Dominance


### Over-the-Air Measurements – Code Scanner

Excessive sync codes produce too much co-channel interference, which leads to lower capacity, low data rate and excessive handoffs.

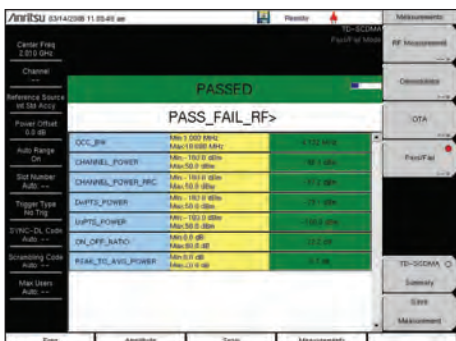

### Pass/Fail Test


Set up common test limits, or sets of limits, for each instrument. Inconsistent settings between base stations leads to inconsistent network behavior.

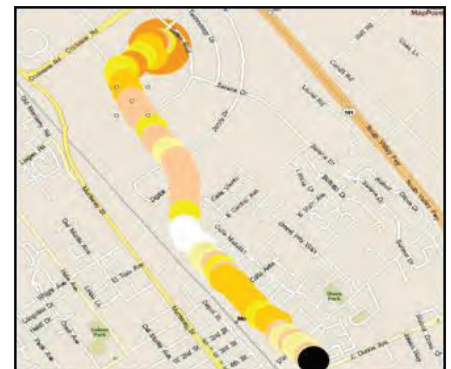

# Spectrum Master™ Compact Handheld Spectrum Analyzer Features




## ISDB-T Signal Analyzers (Options 0030, 0079, 0032)

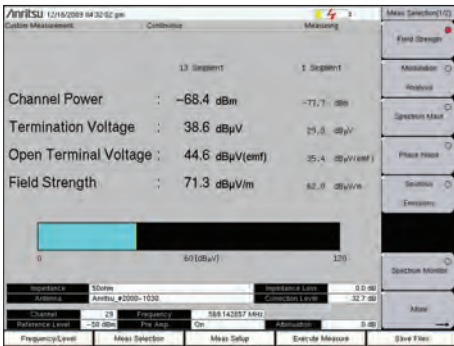


### RF Measurements – Signal Power

The Signal Power screen showing the transmission channel power and signal field strength used to assess suitable reception coverage area.

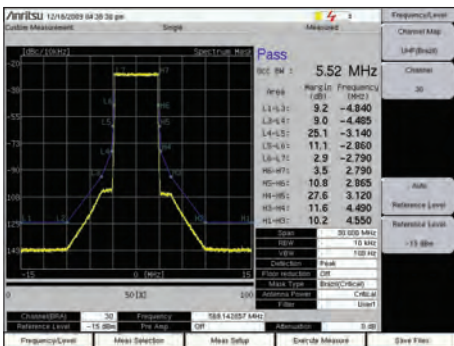


### RF Measurements – Spectrum Mask

The Spectrum Mask measurement is shown. ISDB-T systems in Japan and South America call for different spectrum mask specifications. Both are catered for.

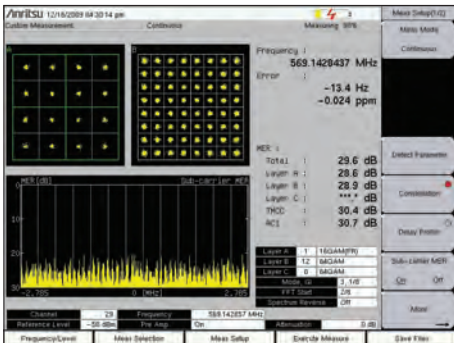

### Signal Analysis – Constellation and MER

This is the single most important signal quality measurement. Poor MER leads to higher received errors which can cause serious picture degradation.

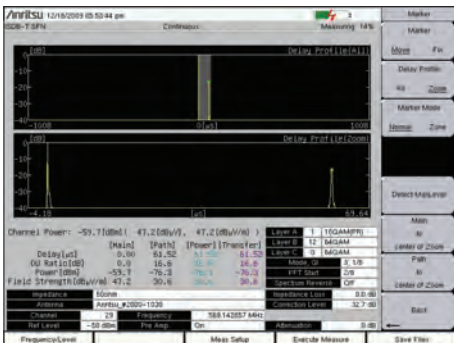

### SFN Analysis – Delay Profile

This measurement indicates whether signals from different transmitters in an SFN are received correctly to prevent interference and high received errors.

## ISDB-T Signal Analyzer

The Spectrum Master features options that enable area survey measurements and the installation and field maintenance of ISDB-T digital broadcasting equipment in accordance with ARIB (Japan) and ABNT (Brazil) standards.

The user has three measurement modes to choose from depending on the his skill level and test environment: Custom, where specific measurements and setups are chosen; Easy, where some setup parameters are automatically set or detected; Batch, where the user can specify all relevant measurements, setups and channels for automatic measurement and results' display for fast and efficient field testing.

The goal of all measurements is to ensure digital TV transmitters are configured according to license agreements and optimized for error-free reception over the entire coverage area helping to create an excellent televisual experience.

### Field Strength

Field Strength (dBuV/m) measurement enables a technician to assess whether signals will be detected at a location with sufficient power for good TV reception. The antenna factors of the antenna used for measurement can be compensated for to facilitate easy measurement comparison.

### Modulation Error Ratio (MER)

MER is the fundamental measurement in digital TV broadcast systems. It quantifies the modulation signal quality directly. It is essential for managing signal margin and the deterioration of equipment with time, as well as for maintaining stable broadcast services. MER is independent of modulation type so MER measurements can be easily compared.

### Delay Profile

This function measures the difference in time and frequency of multi-path signals caused by reflections from obstacles or from other transmitters. By measuring the channel frequency response, the multi-path effect or frequency selective fading can be observed. It is important that all signals from reflections or other transmitters are received within the guard interval to prevent inter-symbol interference which will cause reception degradation. Delay Profile measurement is useful for adjusting the timing of SFN repeaters to achieve this.

## RF Measurements (Option 0030)

- Signal Power
  - Channel Power
  - Termination Voltage
  - Open Terminal Voltage
  - Field Strength
- Spectrum Monitor
  - Channel Power
  - Zone Center Channel
  - Zone Center Frequency
- Spectrum Mask
  - Mask (Standard A) Japan
  - Mask (Standard B) Japan
  - Mask (Critical) Brazil
  - Mask (Sub-critical) Brazil
  - Mask (Non-critical) Brazil

- Phase Noise
- Spurious Emissions

## Signal Analysis (Option 0030)

- Constellation (w/zoom)
  - Layer A, B, C, TMCC
- Sub-carrier MER
- Delay Profile (w/zoom)
- Frequency Response
  - Measured Data
    - Frequency
    - Frequency Offset
    - MER (Total, Layer A/B/C, TMCC, AC1)
    - Modulation (Layer A/B/C)
    - Mode, GI
    - Sub-carrier MER w/marker
    - Delay w/marker
    - Frequency Response w/marker

## BER Analysis (Option 0079)

- Layer A, Layer B, Layer C
- BER and Error Count per Layer
  - Before RS
  - Before Viterbi
- PER and Error Count per Layer
- MPEG Bit Rate per Layer
- TMCC Information per Layer

- Modulation
- Code Rate
- Interleave
- Segments

- Channel Power
- Mode, GI
- Signal Sync Status
- ASI Out


## SFN Analysis (Option 0032)

- Impulse Response (w/zoom)
- In-band Spectrum
- Measured Data
  - Channel Power
  - Delay
  - DU Ratio
  - Power
  - Field Strength

# Spectrum Master™ Compact Handheld Spectrum Analyzer Features




## CPRI RF Measurements (Option 0751)

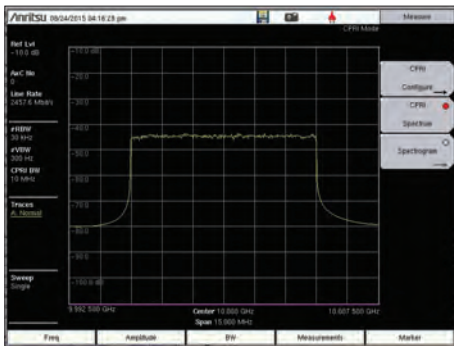

### CPRI Spectrum

Tapping into the optical CPRI link allows the user to monitor either uplink or downlink spectrums

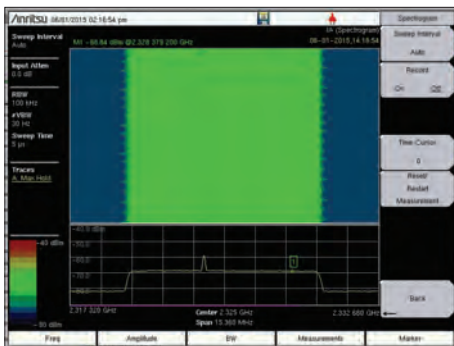

### CPRI Spectrogram

Identifies transient or intermittent interference signals on the uplink over time



### Layer 2 Alarms

Verify CPRI transport layer



### SFP Data

Easily Determine the type of SFP is installed in the MT8220T

## CPRI RF Measurements

The CPRI RF measurement option allows the user to make RF based measurements over a fiber optic CPRI link (fiber connection between the BBU & RRU).

Measurements include:

- CPRI spectrum
- CPRI spectrogram
- Layer 2 Alarms
- SFP Data

## Measurements

- CPRI Spectrum
- Spectrogram
- Layer 2 Alarms
- SFP Data

## Uplink Interference

One of the biggest issues facing operators is interference on the uplink which can drastically affect KPIs. By tapping into the CPRI fiber link, the uplink spectrum can be monitored.

The ultra-fast sweep speed of the CPRI RF measurements makes it easy to capture and analyze transient and bursty signals typical of many types of interference. For added convenience, the user may tune to anywhere within the spectrum and zoom in for more detailed analysis.

## Automatic Configuration

To improve productivity, preconfigured radio setups and an Auto Detect function allow quick and simple configuration of the CPRI RF measurements.

## Layer 2 Alarms

Ability to verify and troubleshoot the CPRI (optical) connection with CPRI Layer 2 Alarms. The key Layer 2 Alarms are always visible at the top of the screen. Optical Power is also available on the Layer 2 Alarm screen.

## SFP Data

Ability to read the embedded SFP data, quickly determine wavelength, supported line rate, manufacturer information and more.




# Spectrum Master™ Compact Handheld Spectrum Analyzer Features

## Line Sweep Tools and Master Software Tools (for your PC)




### Trace Validation

Marker and Limit Line presets allow quick checks of traces for limit violations.

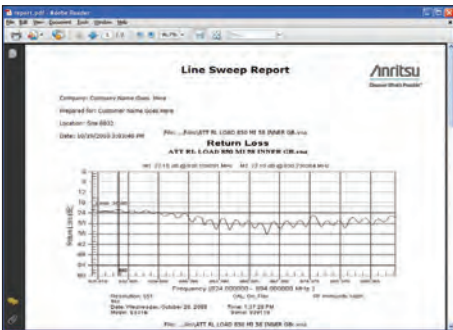

### Report Generation

Create reports with company logo, GPS tagging information, calibration status, and serial number of the instrument for complete reporting.

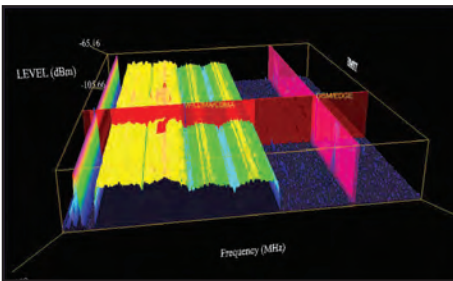

### 3D Spectrogram

For in-depth analysis with 3-axis rotation viewing, threshold, reference level, and marker control. Turn on Signal ID to see the types of signals.

### Line Sweep Tools (available only with PIM Analyzer Option 00419)

Line Sweep Tool increases productivity for people who deal with dozens of Cable and Antenna traces, or Passive Inter-Modulation (PIM) traces, every day.

### User Interface

Line Sweep has a user interface that will be familiar to users of Anritsu's Hand Held Software Tools. This will lead to a short learning curve.

### Marker and Limit Line Presets

Presets make applying markers and a limit line to similar traces, as well as validating traces, a quick task.

### Renaming Grid

A renaming grid makes changing file names, trace titles, and trace subtitles from field values to those required for a report much quicker than manual typing and is less prone to error.

### Report Generator

The report generator will generate a professional looking PDF of all open traces with additional information such as contractor logos and contact information.

### Master Software Tools

Master Software Tools (MST) is a powerful PC software post-processing tool designed to enhance the productivity of technicians in data analysis and testing automation.

### Folder Spectrogram

Folder Spectrogram – creates a composite file of up to 15,000 multiple traces for quick review, also create:

- Peak Power, Total Power, and Peak Frequency plotted over time
- Histogram – filter data and plot number of occurrences over time
- Minimum, Maximum, and Average Power plotted over frequency
- Movie playback – playback data in the familiar frequency domain view
- 3D Spectrogram – for in-depth analysis with 3-axis rotation viewing control

### Line Sweep Features

#### Presets

7 sets of 6 markers and 1 limit line  
Next trace capability

#### File Types

Input: HHST DAT, VNA Measurements: Return Loss (VSWR), Cable Loss, DTF-RL, DTF-VSWR, PIM  
Output: LS DAT, VNA, CSV, PNG, BMP, JPG, PDF

#### Report Generator

Logo, title, company name, customer name, location, date and time, filename, PDF, HTML, all open traces

#### Tools

Cable Editor  
Distance to Fault  
Measurement calculator  
Signal Standard Editor  
Renaming Grid

#### Interfaces

Serial, Ethernet, USB

#### Capture Plots to

Screen, Database, DAT files, JPEG, Instrument

### Master Software Tools Features

#### Database Management

Full Trace Retrieval  
Trace Catalog  
Group Edit  
Trace Editor

#### Data Analysis

Trace Math and Smoothing  
Data Converter  
Measurement Calculator

#### Mapping (GPS Required)

Spectrum Analyzer Mode  
Mobile WiMAX OTA Option  
TS-SCDMA OTA Option  
LTE, both FDD and TDD Options

#### Folder Spectrogram

Folder Spectrogram – 2D View  
Video Folder Spectrogram – 2D View  
Folder Spectrogram – 3D View

#### List/Parameter Editors




























Traces  
Antennas, Cables, Signal Standards  
Product Updates  
Firmware Upload  
Pass/Fail  
VSG Pattern Converter  
Languages  
Mobile WiMAX  
Display

#### Connectivity

Serial, Ethernet, USB  
Download measurements and live traces  
Upload Lists/Parameters and VSG Patterns  
Firmware Updates  
Remote Access Tool over the Internet

# Spectrum Master™ Ordering Information

## Ordering Information – Options

	<b>MS2712E</b>	<b>MS2713E</b>	<b>Description</b>
	9 kHz to 4 GHz	9 kHz to 6 GHz	Spectrum Analyzer
	<b>Options</b>	<b>Options</b>	
	MS2712E-0010	MS2713E-0010	Bias-Tee
	MS2712E-0009	MS2713E-0009	20 MHz Bandwidth Demod
	MS2712E-0031	MS2713E-0031	GPS Receiver (requires Antenna)
	MS2712E-0019	MS2713E-0019	High-Accuracy Power Meter (requires External Power Sensor)
	MS2712E-0029	MS2713E-0029	Power Meter
	MS2712E-0025	MS2713E-0025	Interference Analyzer (Option 0031 recommended)
	MS2712E-0027	MS2713E-0027	Channel Scanner
	MS2712E-0431	MS2713E-0431	Coverage Mapping (requires Option 0031)
	MS2712E-0090	MS2713E-0090	Gated Sweep
	MS2712E-0020	MS2713E-0020	Tracking Generator
	MS2712E-0509	MS2713E-0509	AM/FM/PM Analyzer
	MS2712E-0040	MS2713E-0040	GSM/EDGE RF Measurements*
	MS2712E-0041	MS2713E-0041	GSM/EDGE Demodulation*
	MS2712E-0044	MS2713E-0044	W-CDMA/HSPA+ RF Measurements*
	MS2712E-0065	MS2713E-0065	W-CDMA/HSPA+ Demodulation*
	MS2712E-0035	MS2713E-0035	W-CDMA/HSPA+ OTA Measurements*
	MS2712E-0541	MS2713E-0541	LTE RF Measurements*
	MS2712E-0542	MS2713E-0542	LTE Modulation Quality*
	MS2712E-0546	MS2713E-0546	LTE OTA Measurements* (recommend Option 0031)
	MS2712E-0551	MS2713E-0551	TD-LTE RF Measurements*
	MS2712E-0552	MS2713E-0552	TD-LTE Modulation Quality*
	MS2712E-0556	MS2713E-0556	TD-LTE OTA Measurements* (recommend Option 0031)
	MS2712E-0060	MS2713E-0060	TD-SCDMA/HSPA+ Measurements*
	MS2712E-0061	MS2713E-0061	TD-SCDMA/HSPA+ Demodulation*
	MS2712E-0038	MS2713E-0038	TD-SCDMA/HSPA+ OTA Measurements* (recommend Option 0031)
	MS2712E-0042	MS2713E-0042	CDMA RF Measurements*
	MS2712E-0043	MS2713E-0043	CDMA Demodulation*
	MS2712E-0033	MS2713E-0033	CDMA OTA Measurements**
	MS2712E-0062	MS2713E-0062	EV-DO RF Measurements*
	MS2712E-0063	MS2713E-0063	EV-DO Demodulation*
	MS2712E-0034	MS2713E-0034	EV-DO OTA Measurements**
	MS2712E-0046	MS2713E-0046	Fixed WiMAX RF Measurements*
	MS2712E-0047	MS2713E-0047	Fixed WiMAX Demodulation*
	MS2712E-0066	MS2713E-0066	Mobile WiMAX RF Measurements*
	MS2712E-0067	MS2713E-0067	Mobile WiMAX Demodulation*
	MS2712E-0037	MS2713E-0037	Mobile WiMAX OTA Measurements* (recommend Option 0031)
	MS2712E-0030	MS2713E-0030	ISDB-T Digital Video Measurements*
	MS2712E-0032	MS2713E-0032	ISDB-T SFN Measurements*
	MS2712E-0079	MS2713E-0079	ISDB-T BER Measurements (Requires option 0030, cannot be ordered with option 0411)
	MS2712E-0064	MS2713E-0064	DVB-T/H Digital Video Measurements*
	MS2712E-0078	MS2713E-0078	DVB-T/H SFN Measurements*
	MS2712E-0057	MS2713E-0057	DVB-T/H BER Measurements (Requires option 0064, cannot be ordered with option 0411)
	MS2712E-0751	MS2713E-0751	CPRI RF Measurements
	MS2712E-0411	MS2713E-0411	Ethernet Connectivity
	MS2712E-0098	MS2713E-0098	Standard Calibration (ANSI 2540-1-1994)
	MS2712E-0099	MS2713E-0099	Premium Calibration to Z540 plus test data

\*Requires Option 0009, \*\*Requires Option 0009 and Option 0031


# Spectrum Master™ Ordering Information

## Power Sensors (For complete ordering information see the respective datasheets of each sensor)




Model Number	Description
PSN50	High Accuracy RF Power Sensor, 50 MHz to 6 GHz, +20 dBm
MA24106A	High Accuracy RF Power Sensor, 50 MHz to 6 GHz, +23 dBm
MA24104A	Inline High Power Sensor, 600 MHz to 4 GHz, +51.76 dBm
MA24105A	Inline Peak Power Sensor, 350 MHz to 4 GHz, +51.76 dBm
MA24108A	Microwave USB Power Sensor, 10 MHz to 8 GHz, +20 dBm
MA24118A	Microwave USB Power Sensor, 10 MHz to 18 GHz, +20 dBm
MA24126A	Microwave USB Power Sensor, 10 MHz to 26 GHz, +20 dBm

## Manuals (soft copy included on Handheld Instruments Documentation Disc and at [www.anritsu.com](http://www.anritsu.com))

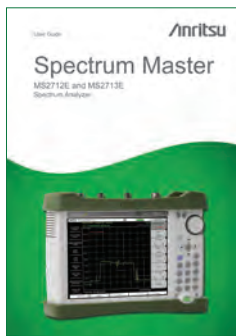

Part Number	Description
10920-00060	Handheld Instruments Documentation Disc
10580-00251	Spectrum Master User Guide (Hard copy included)
10580-00244	Spectrum Analyzer Measurement Guide - Interference Analyzer, Channel Scanner, Gated Sweep, AM/FM/PM Analyzer, Interference Mapping, Coverage Mapping
10580-00234	3GPP Signal Analyzer Measurement Guide - GSM/EDGE, W-CDMA/HSDPA, TD-SCDMA/HSDPA, LTE
10580-00235	3GPP2 Signal Analyzer Measurement Guide - CDMA, EV-DO
10580-00236	WiMAX Signal Analyzer Measurement Guide - Fixed WiMAX, Mobile WiMAX
10580-00237	Digital TV Measurement Guide - DVB-T/H, ISDB-T
10580-00240	Power Meter Measurement Guide - High Accuracy Power Meter
10580-00256	Programming Manual
10580-00280	PIM Master User Guide

## Troubleshooting Guides (soft copy at [www.anritsu.com](http://www.anritsu.com))

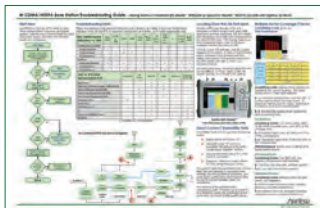

Part Number	Description
11410-00551	Spectrum Analyzers Field User Guide
11410-00472	Interference Troubleshooting Guide
11410-00466	GSM/EDGE Base Stations
11410-00566	LTE eNode Testing
11410-00463	W-CDMA/HSPA+ Base Stations
11410-00465	TD-CDMA/HSPA+ Base Stations
11410-00467	cdmaOne/CDMA2000 1X Base Stations
11410-00468	CDMA2000 1xEV-DO Base Stations
11410-00470	Fixed WiMAX Base Stations
11410-00469	Mobile WiMAX Base Stations


## Standard Accessories (included with instrument)



Part Number	Description
10920-00060	Handheld Instruments Documentation Disc
10580-00251	Spectrum Master User Guide (includes Bias-Tee, GPS Receiver)
2000-1654-R	Soft Carrying Case
2300-498	Master Software Tools (MST) CD Disc
2300-530	Anritsu Tool Box with Line Sweep Tools (LST) DVD Disc (For PIM Analyzer Trace Management)
2300-532	Map Master CD
633-44	Rechargeable Li-Ion Battery
40-168-R	AC-DC Adapter
806-141-R	Automotive Cigarette Lighter Adapter
3-2000-1498	USB A/5-pin mini-B Cable, 10 feet/305 cm
	Spectrum Master MS2712E, MS2713E One Year Warranty (Including battery, firmware, and software) Certificate of Calibration and Conformance

# Spectrum Master™ Optional Accessories

## Directional Antennas

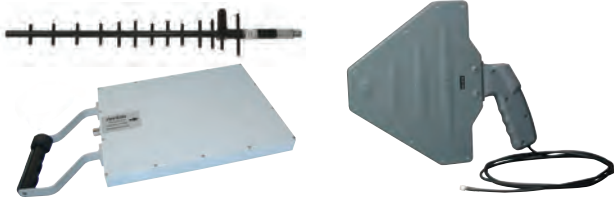

Part Number	Description
2000-1411-R	822 MHz to 900 MHz, N(f), 10 dBd, Yagi
2000-1412-R	885 MHz to 975 MHz, N(f), 10 dBd, Yagi
2000-1413-R	1710 MHz to 1880 MHz, N(f), 10 dBd, Yagi
2000-1414-R	1850 MHz to 1990 MHz, N(f), 9.3 dBd, Yagi
2000-1415-R	2400 MHz to 2500 MHz, N(f), 10 dBd, Yagi
2000-1416-R	1920 MHz to 2170 MHz, N(f), 10 dBd, Yagi
2000-1519-R	500 MHz to 3 GHz, log periodic
2000-1677-R	300 MHz to 3 GHz, SMA(m), log periodic
2000-1659-R	698 MHz to 787 MHz, N(f), 8 dBd, Yagi
2000-1660-R	1425 MHz to 1535 MHz, N(f), 12 dBd, Yagi

## Portable Antennas



Part Number	Description
2000-1200-R	806 MHz to 866 MHz, SMA(m), 50 Ω
2000-1473-R	870 MHz to 960 MHz, SMA(m), 50 Ω
2000-1035-R	896 MHz to 941 MHz, SMA(m), 50 Ω (1/2 wave)
2000-1030-R	1710 MHz to 1880 MHz, SMA(m), 50 Ω (1/2 wave)
2000-1474-R	1710 MHz to 1880 MHz with knuckle elbow (1/2 wave)
2000-1031-R	1850 MHz to 1990 MHz, SMA(m), 50 Ω (1/2 wave)
2000-1475-R	1920 MHz to 1980 MHz and 2110 MHz to 2170 MHz, SMA(m), 50 Ω
2000-1032-R	2400 MHz to 2500 MHz, SMA(m), 50 Ω (1/2 wave)
2000-1361-R	2400 MHz to 2500 MHz, 5000 MHz to 6000 MHz, SMA(m), 50 Ω
2000-1659-R	698 MHz to 787 MHz, N(f), 8 dBd, Yagi
2000-1660-R	1425 MHz to 1535 MHz, N(f), 12 dBd, Yagi
2000-1636-R	Antenna Kit (Consists of: 2000-1030-R, 2000-1031-R, 2000-1032-R, 2000-1200-R, 2000-1035-R, 2000-1361-R, and carrying pouch)

## Mag Mount Broadband Antenna



Part Number	Description
2000-1647-R	Cable 1: 698 MHz to 1200 MHz 2 dBi peak gain, 1700 MHz to 2700 MHz 5 dBi peak gain, N(m), 50 Ω, 10 ft Cable 2: 3000 MHz to 6000 MHz 5 dBi peak gain, N(m), 50 Ω, 10 ft Cable 3: GPS 26 dB gain, SMA(m), 50 Ω, 10 ft
2000-1645-R	694 MHz to 894 MHz 3 dBi peak gain, 1700 MHz to 2700 MHz 3dBi peak gain, N(m), 50 Ω, 10 ft
2000-1646-R	750 MHz to 1250 MHz 3 dBi peak gain, 1650 MHz to 2000 MHz 5 dBi peak gain, 2100 MHz to 2700 MHz 3 dBi peak gain, N(m), 50 Ω, 10 ft
2000-1648-R	1700 MHz to 6000 MHz 3 dBi peak gain, N(m), 50 Ω, 10 ft

## Filters



Part Number	Description
1030-114-R	806 MHz to 869 MHz, N(m) to SMA(f), 50 Ω
1030-109-R	824 MHz to 849 MHz, N(m) to SMA(f), 50 Ω
1030-110-R	880 MHz to 915 MHz, N(m) to SMA(f), 50 Ω
1030-105-R	890 MHz to 915 MHz, N(m) to N(f), 50 Ω
1030-111-R	1850 MHz to 1910 MHz, N(m) to SMA(f), 50 Ω
1030-106-R	1710 MHz to 1790 MHz N(m) to N(f), 50 Ω
1030-107-R	1910 MHz to 1990 MHz, N(m) to N(f), 50 Ω
1030-112-R	2400 MHz to 2484 MHz, N(m) to SMA(f), 50 Ω
1030-149-R	High Pass, 150 MHz, N(m) to N(f), 50 Ω
1030-150-R	High Pass, 400 MHz, N(m) to N(f), 50 Ω
1030-151-R	High Pass, 700 MHz, N(m) to N(f), 50 Ω
1030-152-R	Low Pass, 200 MHz, N(m) to N(f), 50 Ω
1030-153-R	Low Pass, 550 MHz, N(m) to N(f), 50 Ω
1030-155-R	2500 MHz to 2700 MHz, N(m) to N(f), 50 Ω
1030-178-R	1920 MHz to 1980 MHz, N(m) to N(f), 50 Ω
1030-179-R	777 MHz to 787 MHz, N(m) to N(f), 50 Ω
1030-180-R	2500 MHz to 2570 MHz, N(m) to N(f), 50 Ω
2000-1684-R	791 MHz to 821 MHz, N(m) to N(f), 50 Ω

# Spectrum Master™ Optional Accessories

## Attenuators



Part Number	Description
3-1010-122	20 dB, 5 W, DC to 12.4 GHz, N(m) to N(f)
42N50-20	20 dB, 5 W, DC to 18 GHz, N(m) to N(f)
42N50A-30	30 dB, 50 W, DC to 18 GHz, N(m) to N(f)
3-1010-123	30 dB, 50 W, DC to 8.5 GHz, N(m) to N(f)
1010-127-R	30 dB, 150 W, DC to 3 GHz, N(m) to N(f)
3-1010-124	40 dB, 100 W, DC to 8.5 GHz, N(m) to N(f), Uni-directional
1010-121	40 dB, 100 W, DC to 18 GHz, N(m) to N(f), Uni-directional
1010-128-R	40 dB, 150 W, DC to 3 GHz, N(m) to N(f)

## Phase-Stable Test Port Cables, Armored w/ Reinforced Grip (recommended for cable & antenna line sweep applications)



Part Number	Description
15RNFN50-1.5-R	1.5 m, DC to 6 GHz, N(m) to N(f), 50 Ω
15RDFN50-1.5-R	1.5 m, DC to 6 GHz, N(m) to 7/16 DIN(f), 50 Ω
15RDN50-1.5-R	1.5 m, DC to 6 GHz, N(m) to 7/16 DIN(m), 50 Ω
15RNFN50-3.0-R	3.0 m, DC to 6 GHz, N(m) to N(f), 50 Ω
15RDFN50-3.0-R	3.0 m, DC to 6 GHz, N(m) to 7/16 DIN(f), 50 Ω
15RDN50-3.0-R	3.0 m, DC to 6 GHz, N(m) to 7/16 DIN(m), 50 Ω

## Phase-Stable Test Port Cables, Armored (recommended for use with tightly spaced connectors and other general purpose applications)



Part Number	Description
15NNF50-1.5C	1.5 m, DC to 6 GHz, N(m) to N(f), 50 Ω
15NN50-1.5C	1.5 m, DC to 6 GHz, N(m) to N(m), 50 Ω
15NDF50-1.5C	1.5 m, DC to 6 GHz, N(m) to 7/16 DIN(f), 50 Ω
15ND50-1.5C	1.5 m, DC to 6 GHz, N(m) to 7/16 DIN(m), 50 Ω
15NNF50-3.0C	3.0 m, DC to 6 GHz, N(m) to N(f), 50 Ω
15NN50-3.0C	3.0 m, DC to 6 GHz, N(m) to N(m), 50 Ω
15NNF50-5.0C	5.0 m, DC to 6 GHz, N(m) to N(f), 50 Ω
15NN50-5.0C	5.0 m, DC to 6 GHz, N(m) to N(m), 50 Ω

## Adapters



Part Number	Description
1091-26-R	SMA(m) to N(m), DC to 18 GHz, 50 Ω
1091-27-R	SMA(f) to N(m), DC to 18 GHz, 50 Ω
1091-80-R	SMA(m) to N(f), DC to 18 GHz, 50 Ω
1091-81-R	SMA(f) to N(f), DC to 18 GHz, 50 Ω
1091-172-R	BNC(f) to N(m), DC to 1.3 GHz, 50 Ω
510-102-R	N(m) to N(m), DC to 11 GHz, 50 Ω, 90 degrees right angle

## Precision Adapters



Part Number	Description
34NN50A	Precision Adapter, N(m) to N(m), DC to 18 GHz, 50 Ω
34NFN50	Precision Adapter, N(f) to N(f), DC to 18 GHz, 50 Ω

## CPRI RF Measurement Accessories

Part Number	Description
67-12-R	Optical Tap; Single Mode/Multi Mode
67-13-R	Optical Tap; Single Mode
68-5-R	SFP (Optical Module), 4.25G, 850nm, 500m
68-6-R	SFP+ (Optical Module), 8G FC/10G SR 850nm
68-7-R	SFP (Optical Module), 2.7G, 1310nm, 15km
68-8-R	SFP+ (Optical Module), 10G LR 1310nm
2000-1849-R	ESD Box for SFP (Optical Modules)
2100-29-R	Fiber Optic Cable, 3m, LC/UPC, Single Mode (SM), Simplex
2100-30-R	Fiber Optic Cable, 10m, LC-SC, Multi-Mode (MM), Simplex
2100-31-R	Fiber Optic Cable, 3m, LC/UPC, Single Mode (SM), Duplex
971-14-R	Ferrule cleaner, 2.5mm SC
971-15-R	Ferrule cleaner, 1.25mm LC
971-16-R	Fiber ferrule cleaner

# Spectrum Master™ Optional Accessories

## Backpack and Transit Case



Part Number	Description
67135	Anritsu Backpack (For Handheld Instrument and PC)
760-243-R	Large Transit Case with Wheels and Handle

## Miscellaneous Accessories



Part Number	Description
2000-1528-R	GPS Antenna, SMA(m) with 15 ft cable
2000-1652-R	GPS Antenna, SMA(m) with 1 ft cable
806-245-R	Calibration Accessory for use with Option 20 Tracking Generator
2000-1374	External Charger for Li-Ion Batteries
2000-1371-R	Ethernet Cable, 7 ft/213 cm
2000-1689	EMI Near Field Probe Kit
3-806-152	Cat 5e Crossover Patch Cable, 7 ft/213 cm)
2300-517	Phase Noise Measurement Software (requires Ethernet Option 0411)
633-75	8000 mAh High-capacity Battery Pack
2000-1653	Anti-glare Screen Cover (package of 2)

## Notes

---

## • United States

### Anritsu Company

1155 East Collins Boulevard, Suite 100,  
Richardson, TX, 75081 U.S.A.  
Toll Free: 1-800-267-4878  
Phone: +1-972-644-1777  
Fax: +1-972-671-1877

## • Canada

### Anritsu Electronics Ltd.

700 Silver Seven Road, Suite 120,  
Kanata, Ontario K2V 1C3, Canada  
Phone: +1-613-591-2003  
Fax: +1-613-591-1006

## • Brazil

### Anritsu Eletrônica Ltda.

Praça Amadeu Amaral, 27 - 1 Andar  
01327-010 - Bela Vista - São Paulo - SP - Brazil  
Phone: +55-11-3283-2511  
Fax: +55-11-3288-6940

## • Mexico

### Anritsu Company, S.A. de C.V.

Av. Ejército Nacional No. 579 Piso 9, Col. Granada  
11520 México, D.F., México  
Phone: +52-55-1101-2370  
Fax: +52-55-5254-3147

## • United Kingdom

### Anritsu EMEA Ltd.

200 Capability Green, Luton, Bedfordshire LU1 3LU, U.K.  
Phone: +44-1582-433280  
Fax: +44-1582-731303

## • France

### Anritsu S.A.

12 avenue du Québec, Batiment Iris 1-Silic 612,  
91140 Villebon-sur-Yvette, France  
Phone: +33-1-60-92-15-50  
Fax: +33-1-64-46-10-65

## • Germany

### Anritsu GmbH

Nemetschek Haus, Konrad-Zuse-Platz 1  
81829 München, Germany  
Phone: +49-89-442308-0  
Fax: +49-89-442308-55

## • Italy

### Anritsu S.r.l.

Via Elio Vittorini 129, 00144 Roma Italy  
Phone: +39-06-509-9711  
Fax: +39-06-502-2425

## • Sweden

### Anritsu AB

Kistagången 20B, 164 40 KISTA, Sweden  
Phone: +46-8-534-707-00  
Fax: +46-8-534-707-30

## • Finland

### Anritsu AB

Teknobulevardi 3-5, FI-01530 VANTAA, Finland  
Phone: +358-20-741-8100  
Fax: +358-20-741-8111

## • Denmark

### Anritsu A/S

Kay Fiskers Plads 9, 2300 Copenhagen S, Denmark  
Phone: +45-7211-2200  
Fax: +45-7211-2210

## • Russia

### Anritsu EMEA Ltd.

#### Representation Office in Russia

Tverskaya str. 16/2, bld. 1, 7th floor.  
Moscow, 125009, Russia  
Phone: +7-495-363-1694  
Fax: +7-495-935-8962

## • Spain

### Anritsu EMEA Ltd.

#### Representation Office in Spain

Edificio Cuzco IV, Po. de la Castellana, 141, Pta. 8  
28046, Madrid, Spain  
Phone: +34-915-726-761  
Fax: +34-915-726-621

## • United Arab Emirates

### Anritsu EMEA Ltd.

#### Dubai Liaison Office

P O Box 500413 - Dubai Internet City  
Al Thuraya Building, Tower 1, Suite 701, 7th floor  
Dubai, United Arab Emirates  
Phone: +971-4-3670352  
Fax: +971-4-3688460

## • India

### Anritsu India Pvt Ltd.

2nd & 3rd Floor, #837/1, Binnamangla 1st Stage,  
Indiranagar, 100ft Road, Bangalore - 560038, India  
Phone: +91-80-4058-1300  
Fax: +91-80-4058-1301

## • Singapore

### Anritsu Pte. Ltd.

11 Chang Charn Road, #04-01, Shriro House  
Singapore 159640  
Phone: +65-6282-2400  
Fax: +65-6282-2533

## • P. R. China (Shanghai)

### Anritsu (China) Co., Ltd.

27th Floor, Tower A,  
New Caohejing International Business Center  
No. 391 Gui Ping Road Shanghai, Xu Hui Di District,  
Shanghai 200233, P.R. China  
Phone: +86-21-6237-0898  
Fax: +86-21-6237-0899

## • P. R. China (Hong Kong)

### Anritsu Company Ltd.

Unit 1006-7, 10/F., Greenfield Tower, Concordia Plaza,  
No. 1 Science Museum Road, Tsim Sha Tsui East,  
Kowloon, Hong Kong, P. R. China  
Phone: +852-2301-4980  
Fax: +852-2301-3545

## • Japan

### Anritsu Corporation

8-5, Tamura-cho, Atsugi-shi,  
Kanagawa, 243-0016 Japan  
Phone: +81-46-296-6509  
Fax: +81-46-225-8359

## • Korea

### Anritsu Corporation, Ltd.

5FL, 235 Pangyoyeok-ro, Bundang-gu, Seongnam-si,  
Gyeonggi-do, 463-400 Korea  
Phone: +82-31-696-7750  
Fax: +82-31-696-7751

## • Australia

### Anritsu Pty Ltd.

Unit 20, 21-35 Ricketts Road,  
Mount Waverley, Victoria 3149, Australia  
Phone: +61-3-9558-8177  
Fax: +61-3-9558-8255

## • Taiwan

### Anritsu Company Inc.

7F, No. 316, Sec. 1, Neihu Rd., Taipei 114, Taiwan  
Phone: +886-2-8751-1816  
Fax: +886-2-8751-1817



The Master Users Group is an organization dedicated to providing training, technical support, networking opportunities and links to Master product development teams. As a member you will receive the Insite Quarterly Newsletter with user stories, measurement tips, new product news and more.

Visit us to register today: [www.anritsu.com/MUG](http://www.anritsu.com/MUG)

### Training at Anritsu

Anritsu has designed courses to help you stay up to date with technologies important to your job.

For available training courses visit: [www.anritsu.com/training](http://www.anritsu.com/training)

Please Contact:



Anritsu utilizes recycled paper and environmentally conscious inks and toner.

